MATRIX
Strong • Smart • Beautiful



OWNERS MANUAL

ULTRA Single-Station Strength
G7-S12 Pectoral Fly

Table Of Contents

Safety, General Care & Maintenence 3

Getting Started (Product Specifications) 5

Assembly Information 6

Markings 7

Parts List 8

Installation & Assembly: Value Line

- Part 1 Weight Stack & User Frame Assembly 10
- Part 2 Seat Assembly 12
- Part 3 Arm Assembly 14
- Part 4 Pad Assembly 21
- Part 5 Plastics Assembly 24

IMPORTANT SAFETY INFORMATION

It is the sole responsibility of the purchaser of Matrix products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Matrix exercise equipment be informed of the following information prior to its use.

PROPER USAGE

Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that Matrix equipment be used properly to avoid injury.

Keep hands and feet clear at all times from moving parts to avoid injury.

CHECK FOR DAMAGED PARTS

1. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local Matrix dealer.

2. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your Matrix dealer for a replacement.

3. SECURING EQUIPMENT: All equipment MUST be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor.

4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your liability to a minimum. Equipment needs to be inspected at regular intervals.

5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. Matrix dealers will provide service and maintenance training at our corporate facility upon request.


IMPORTANT SAFETY INSTRUCTIONS

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WARNING: SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO AVOID INJURY!

1. Never allow children on strength training equipment. Teenagers must be supervised at all times while using this equipment.
2. All warnings and instructions should be read and proper instruction obtained prior to use.
3. Use this equipment for its intended purposes only.
4. NEVER allow resistance straps, ropes or other means be attached to this equipment, as this may result in serious injury.
5. NEVER use this equipment for support during stretching, as this may result in serious injury.
6. Cease exercise if you feel faint or dizzy. Obtain a medical exam before beginning an exercise program.
7. Keep body, hair, clothing and accessories free and clear of all moving parts.
8. Inspect the machine before use. DO NOT use machine if it appears damaged or inoperable.
9. Check to see that the selector pin is completely inserted into the weight stack.
10. NEVER use this machine with the weight stack pinned in an elevated position.
11. NEVER use dumbells or other means to incrementally increase the weight resistance. Only use the means provided directly from the manufacturer.
12. This equipment should only be used in supervised areas where access and control are regulated by the owner.

EXERCISE PLACARD

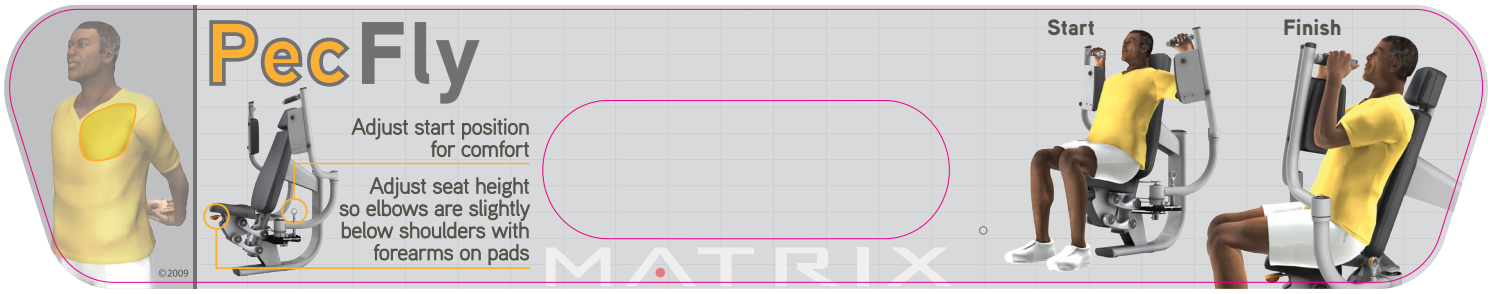

PRODUCT SPECIFICATIONS

TECH SPECS	
Maximum User Weight	136 kg / 300 lbs.
Maximum Training Weight	109 kg / 240 lbs.
Product Weight	260 kg / 573 lbs.
Overall Dimensions (L x W x H)	118.7 x 167.1 x 138.4 cm / 46.7" x 65.8" x 54.5"

WARRANTY (Valid in USA only)	
Frame (not coatings)	10 years
Weight stacks	5 years
Pulleys	5 years
Pivot bearings	5 years
Any items not specified	3 years
Labor (excluding upholstery/cables/grips)	3 years
Upholstery/cables/grips/springs	1 year
Accessories	6 months

MAINTENANCE CHECKLIST

ACTION	FREQUENCY
Clean Upholstery	Daily
Inspect Cables	Daily
Clean Guide Rods	Monthly
Inspect Hardware	Monthly
Inspect Frame	Bi-Annually
Clean Machine	As Needed
Clean Grips	As Needed
Lubricate Guide Rods	As Needed

Upholstery & Grips should be cleaned with a non-ammonia based cleaner or a mild soap and water. Guide rods should be lubricated with Teflon based lubricant. Apply the lubricant to a cotton cloth and then apply up and down the guide rods.

UNPACKING


Thank you for purchasing a Matrix product. This machine is an EN957-1 and EN957-2 compliant Class S product. Your Matrix product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the exploded diagrams. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.

CAUTION


The weight of the product is 573 lbs. (260 kg) not including the weight stack. The weight stack for this machine is 240 lbs. (109 kg). To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine. Maximum user weight for this machine is 300 lbs.

TOOLS REQUIRED FOR ASSEMBLY

3MM L-Shaped Allen Wrench
4MM L-Shaped Allen Wrench
5MM L-Shaped Allen Wrench
6MM L-Shaped Allen Wrench
8MM L-Shaped Allen Wrench
10MM L-Shaped Allen Wrench
Phillips & Standard Screwdrivers
8MM Open-End Wrench
13MM Open-End Wrench
17MM Open-End Wrench.
19MM Open-End Wrench
Adjustable Wrench

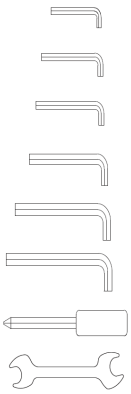

Blue Locktite 242 must be used on all fasteners that are not assembled with Nylock Nuts.

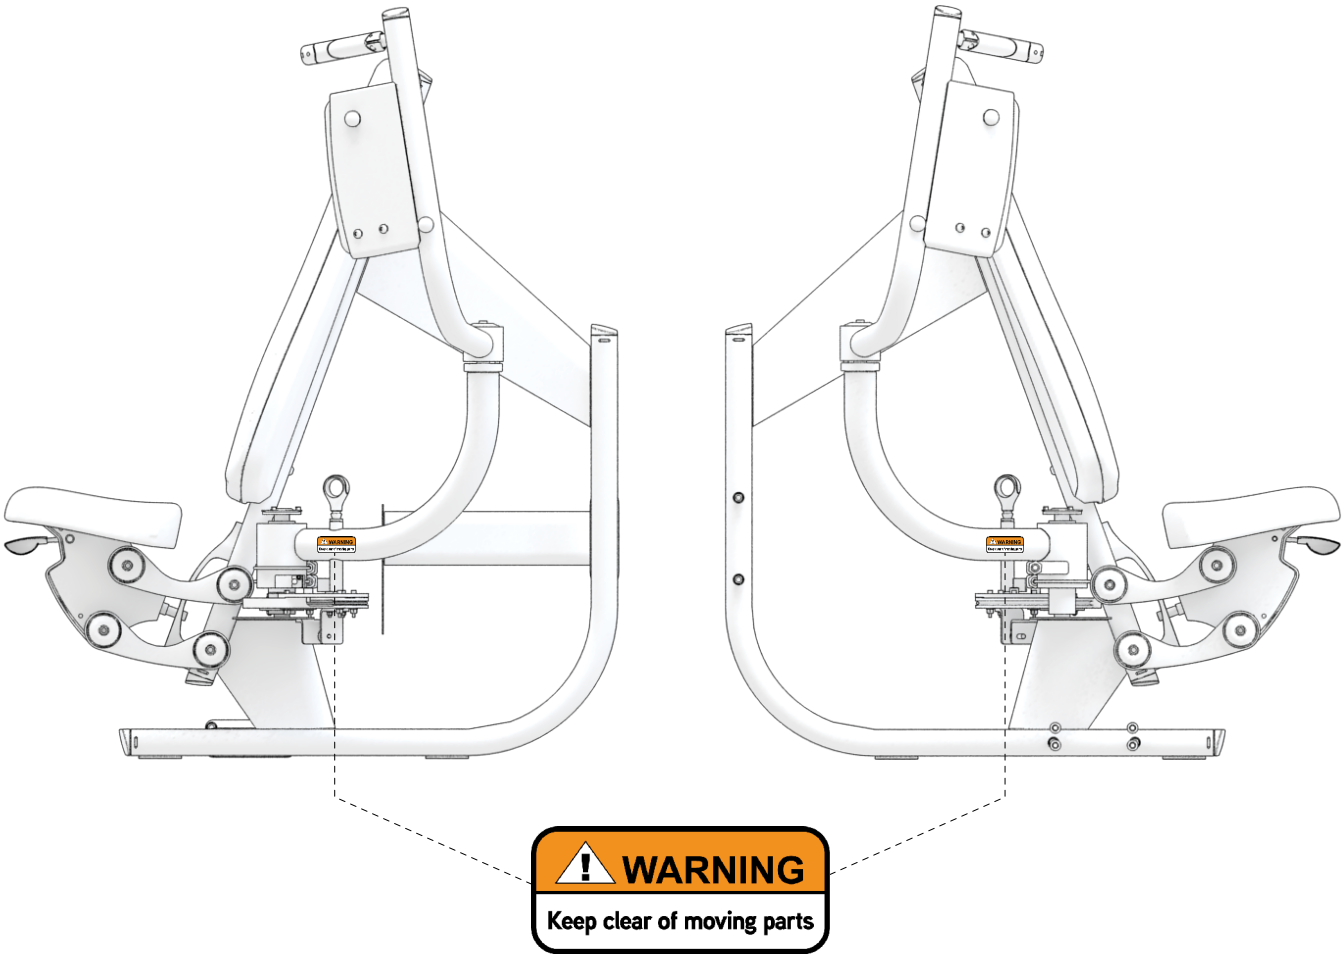

Hazard warning sticker [both arms]


Parts List

ID	DESCRIPTION	QTY
1	Lower Connecting Tube	1
2	M10 X 30L Socket Head Cap Screw	8
3	M10 Flat Washer	12
4	Weight Stack	1
5	M10 Nylock Nut	4
6	Upper Connecting Tube	1
7	M10 X 75L Socket Head Cap Screw	4
8	User Frame	1
9	M10 Saddle Washer	4
10	M8 X 25L Socket Head Cap Screw	8
11	Medium Pivot Cap	10
12	Seat Link	4
13	Axle	4
14	Spring	2
15	Seat	1
16	Axle	2
17	Right Lower Arm Assembly	1
18	M5 X 12L Socket Head Cap Screw	6
19	M5 Flat Washer	6
20	Cap	2
21	Axle Locking Sleeve	2
22	Wave (Spring) Washer	2
23	CAM	1
24	Spacer	1
25	Left Lower Arm Assembly	1
26	M5 X 12L Button Head Cap Screw	2
27	ROM Adjustment Cable	2
28	Cable Retainer	2
29	M10 X 20L Socket Head Cap Screw	2
30	Snap Ring	4
31	Flat Washer (38 OD)	12
32	Left Upper Arm Assembly	1
33	Right Upper Arm Assembly	1
34	M10 X 15L Socket Head Cap Screw	2
35	M10 X 25L Socket Head Cap Screw	2

ID	DESCRIPTION	QTY
36	Bumper	2
37	Arm Pad	2
38	M10 X 20L Button Head Cap Screw	4
39	Head Rest Assembly	1
40	M10 X 75L Button Head Cap Screw	4
41	Back Pad Assembly	1
42	Pad	1
43	M10 X 20L Hex Bolt	4
44	Rear Shroud	1
45	Left Front Shroud	1
46	Right Front Shroud	1
47	M8 X 60L Socket Head Cap Screw	4
48	Top Cap	1

STEP 1 | WEIGHT STACK INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
1	Lower Connecting Tube	1
2	M10 X 30L SHC	4
3	M10 Flat Washer	12
4	Weight Stack	1
5	M10 Nylock Nut	4
6	Upper Connecting Tube	1
7	M10 X 75L SHC	4

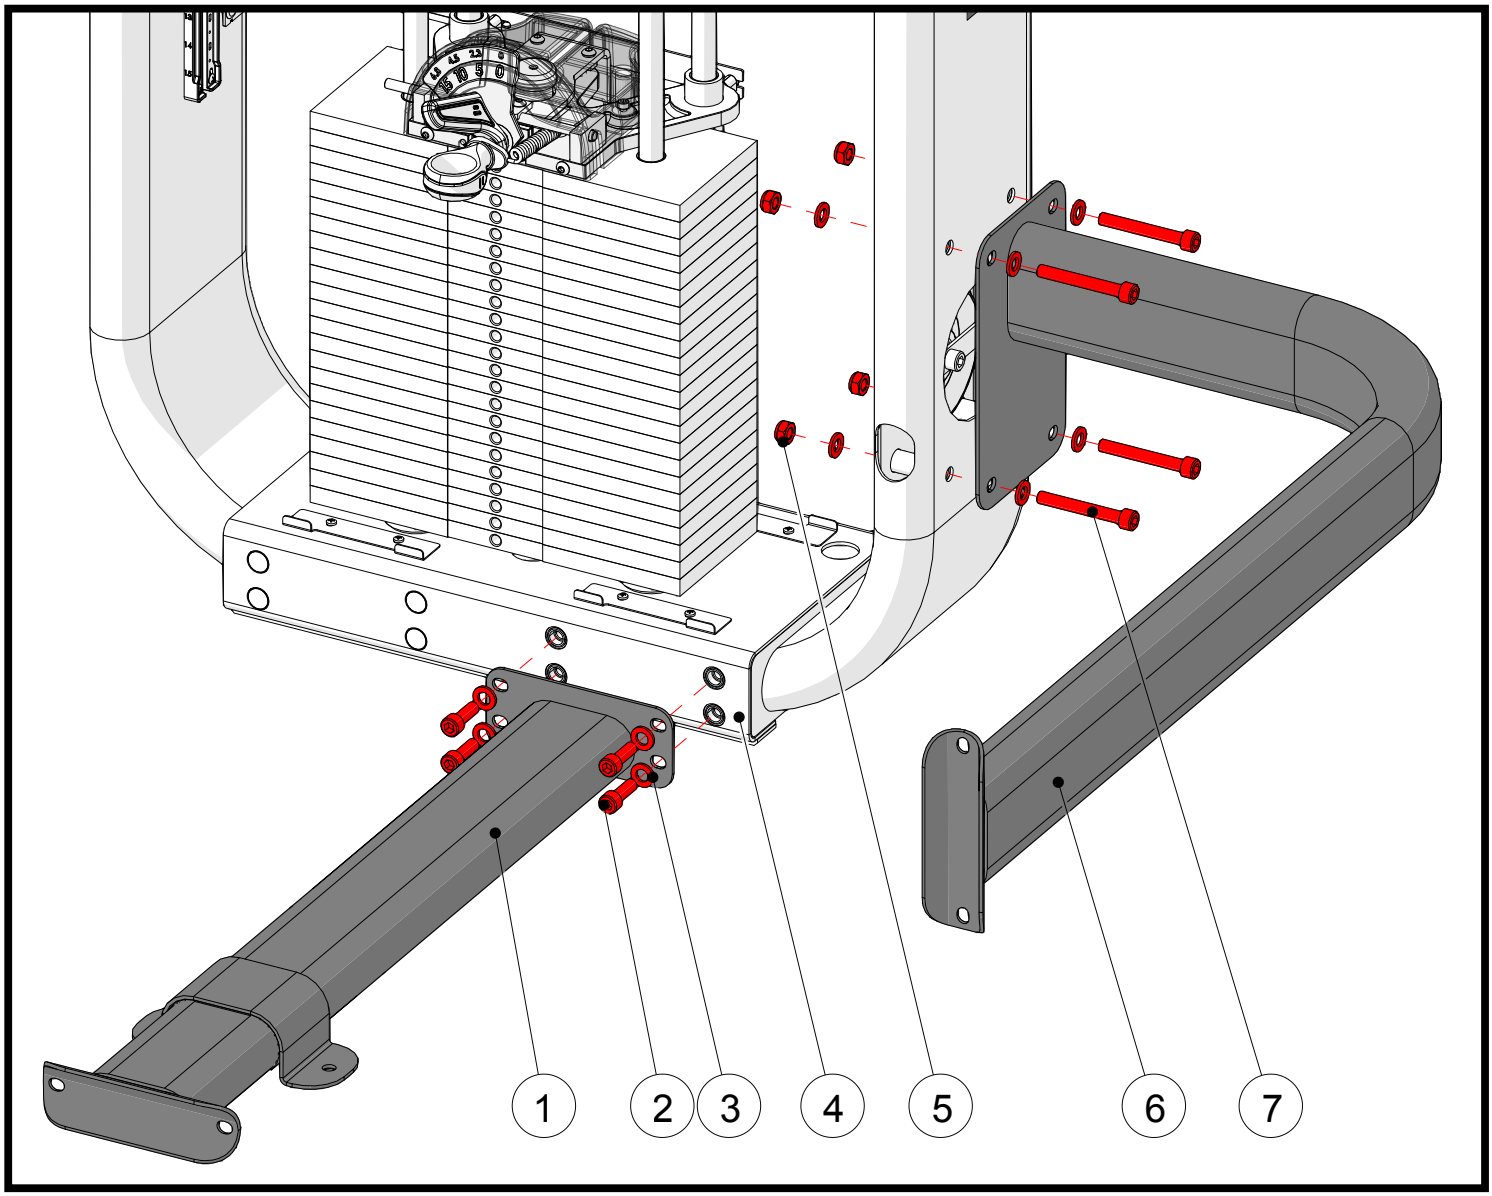

Install the user frame hardware as shown, but DO NOT FULLY TIGHTEN .

STEP 2 | USER FRAME INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
2	M10 X 30L SHC	4
8	User Frame	1
9	M10 Saddle Washer	4

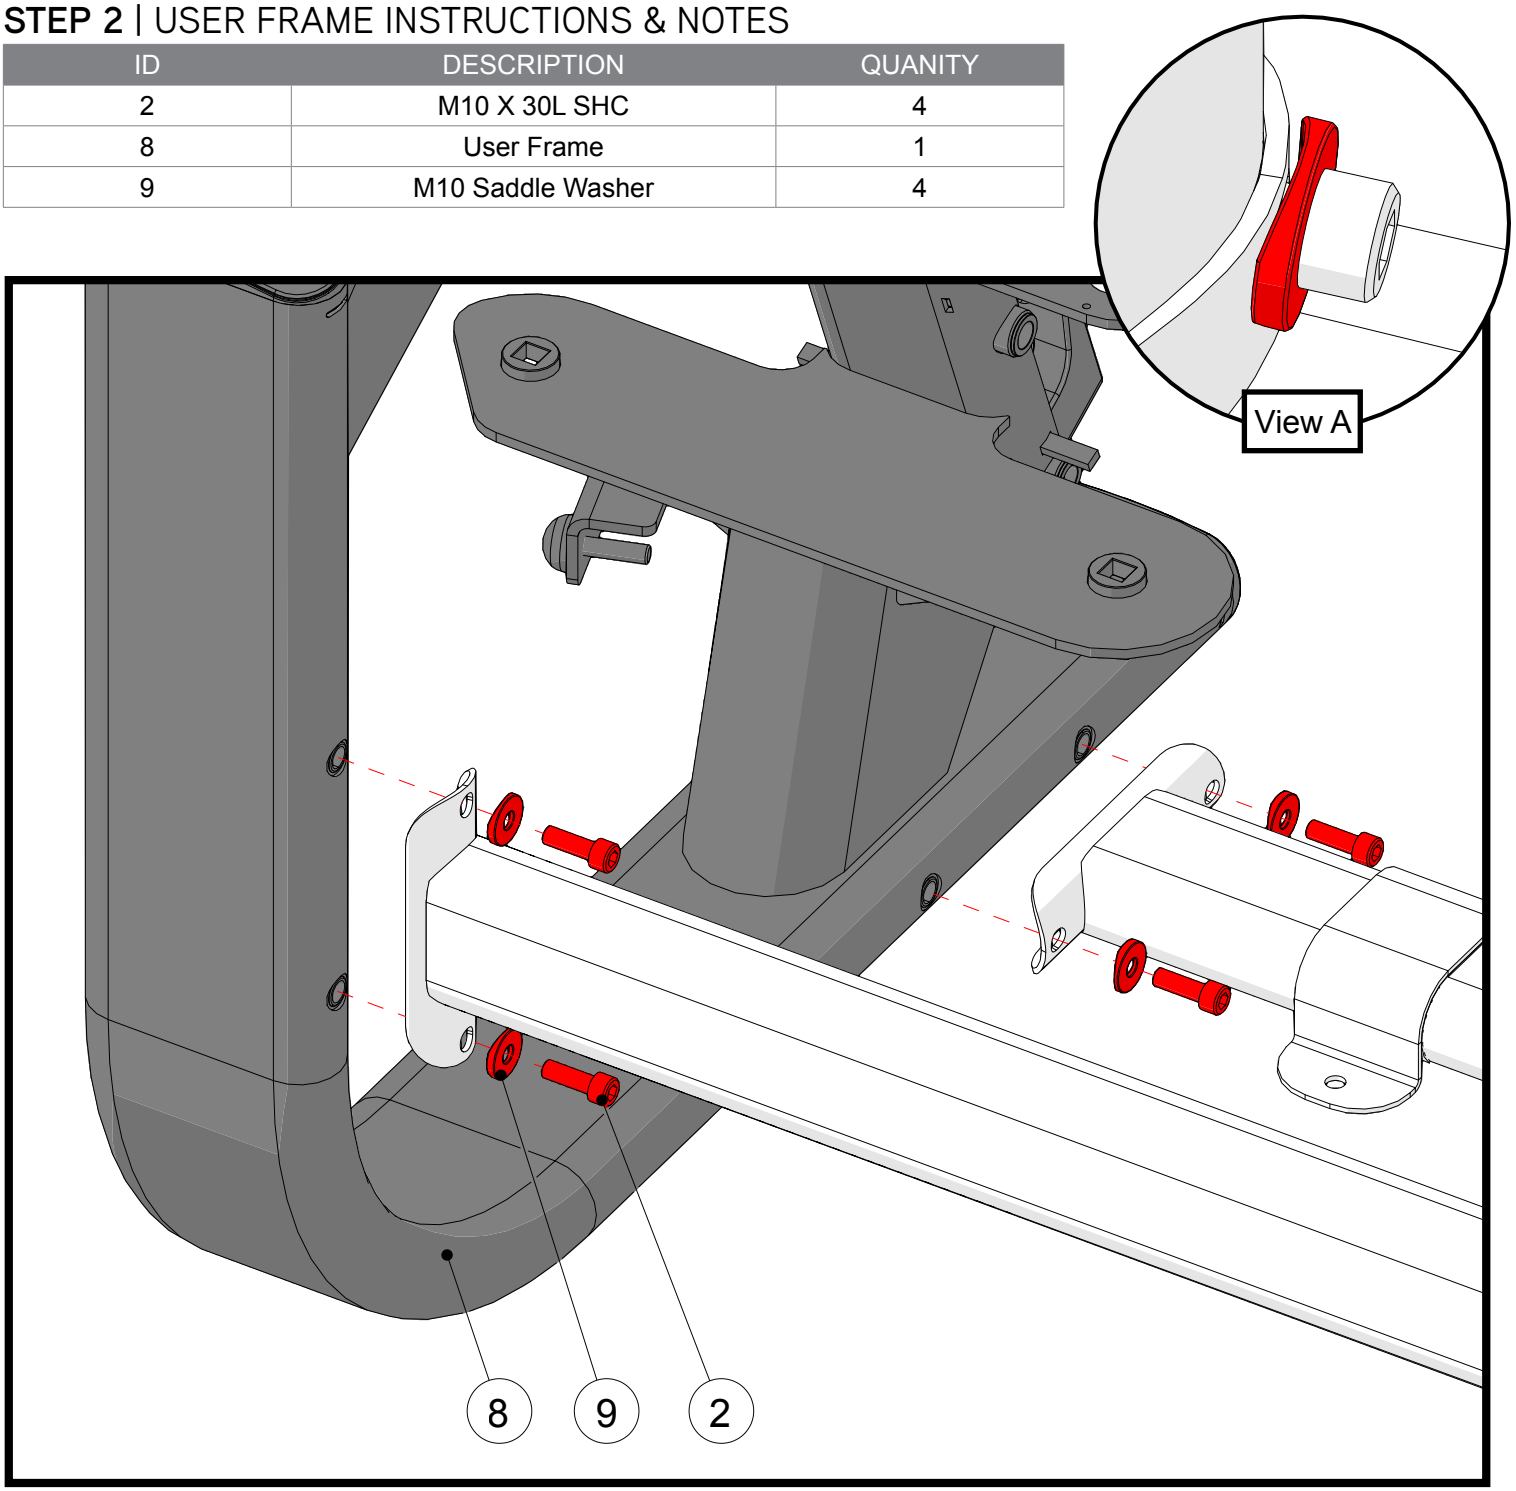



- Install the user frame hardware as shown, being sure to orient the saddle washer as shown in View A.
- Ensure that the frame is level and that all floor pads contact the floor equally,
- Torque all M10 Frame Hardware on pages 10 & 11 to: 77 N-m/57 ft-lbs.

STEP 1 | SEAT LINK ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
10	M8 X 25L SHC	2
11	Medium Pivot Cap	2
12	Seat Link	1
13	Axle	2
14	Spring	1
15	Seat	1

*Note: Shoulder Press seat assembly is shown - but steps and components are identical for the Pec Fly

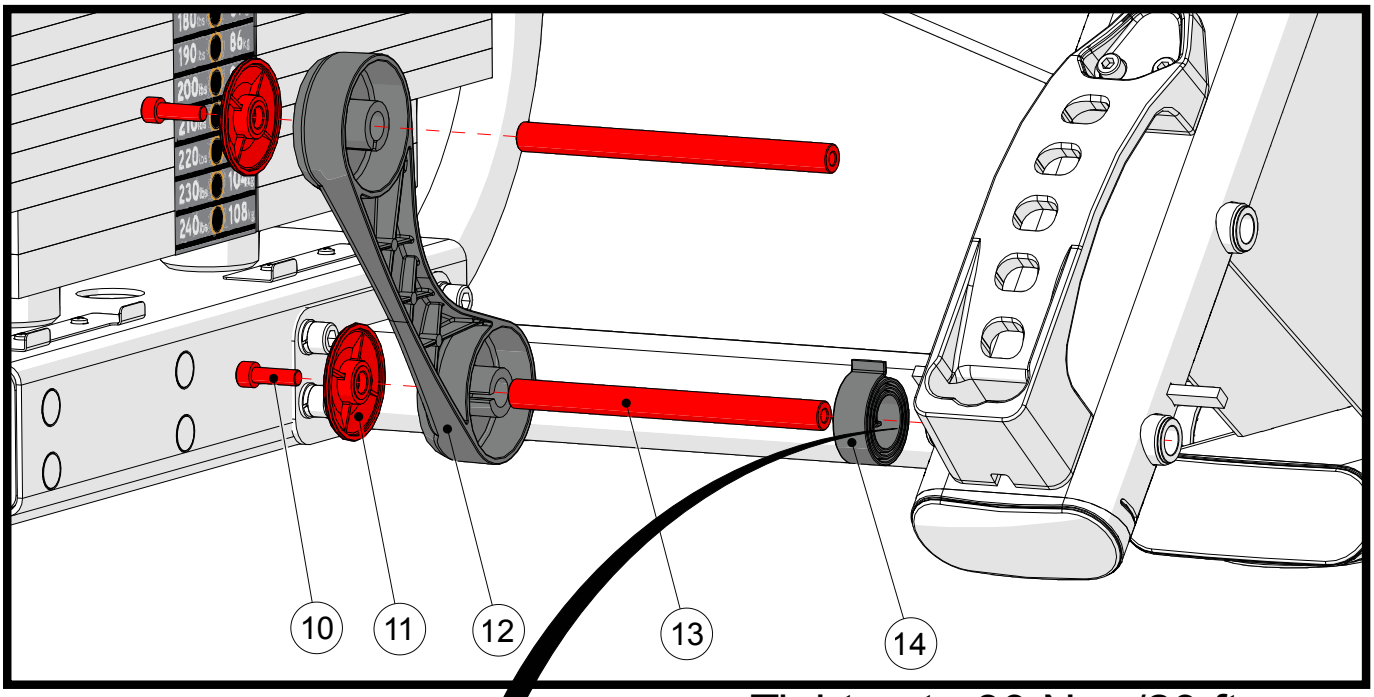

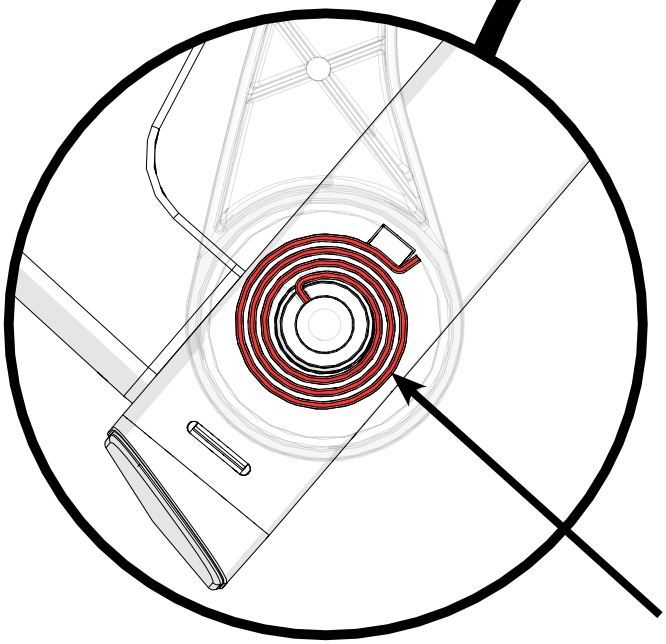

Tighten to 39 N-m/29 ft-

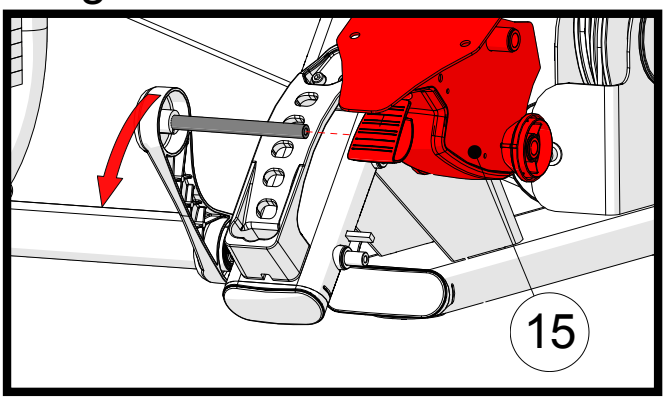


Ensure bottom links are assembled correctly by testing spring tension.


Outer tab of spring must be secured behind frame reaction bar.

STEP 2 | SEAT ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
10	M8 X 25L SHC	6
11	Medium Pivot Cap	6
12	Seat Link	3
13	Axle	2
14	Spring	1

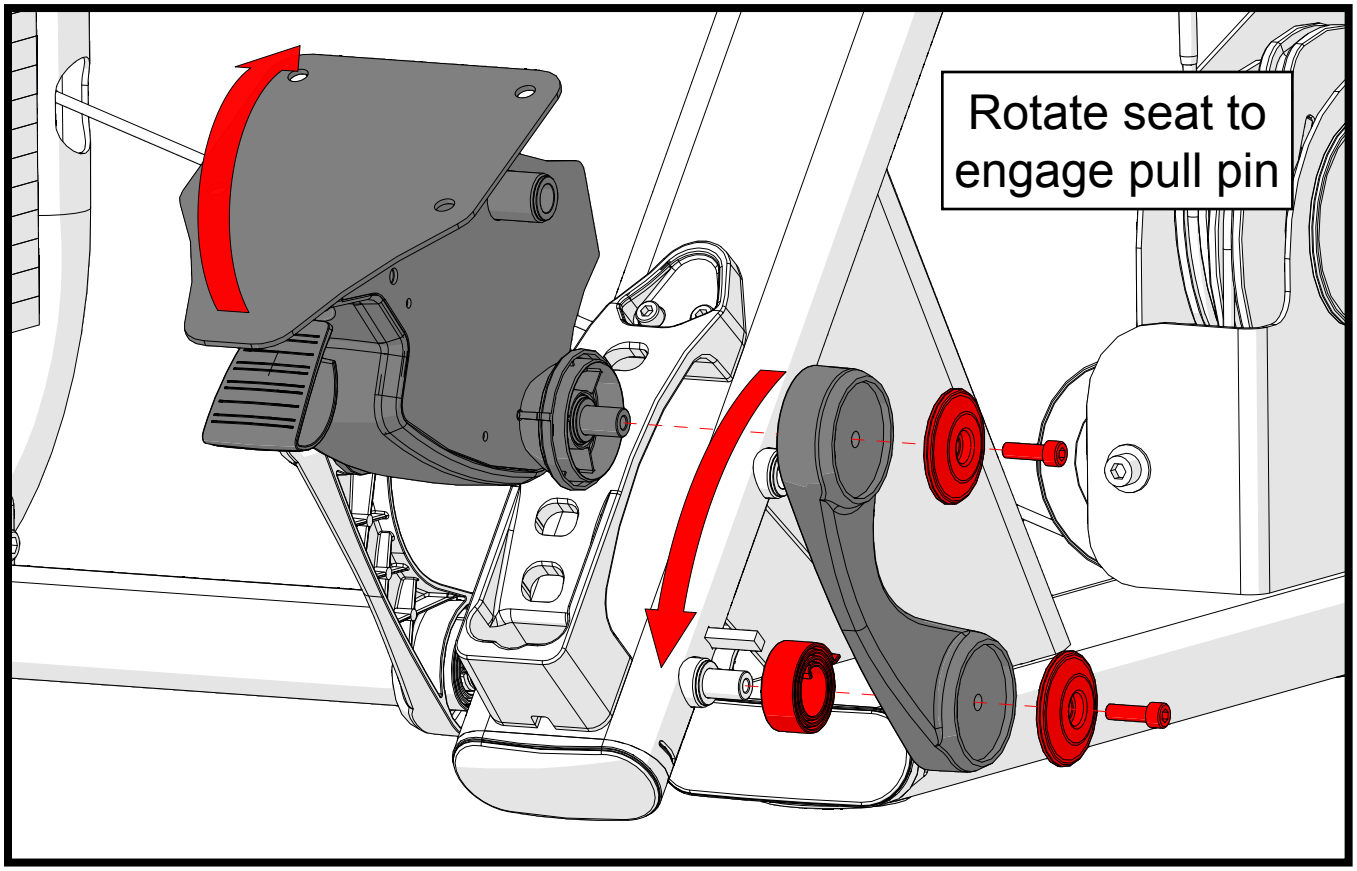


Assemble upper axles, links and pivot caps

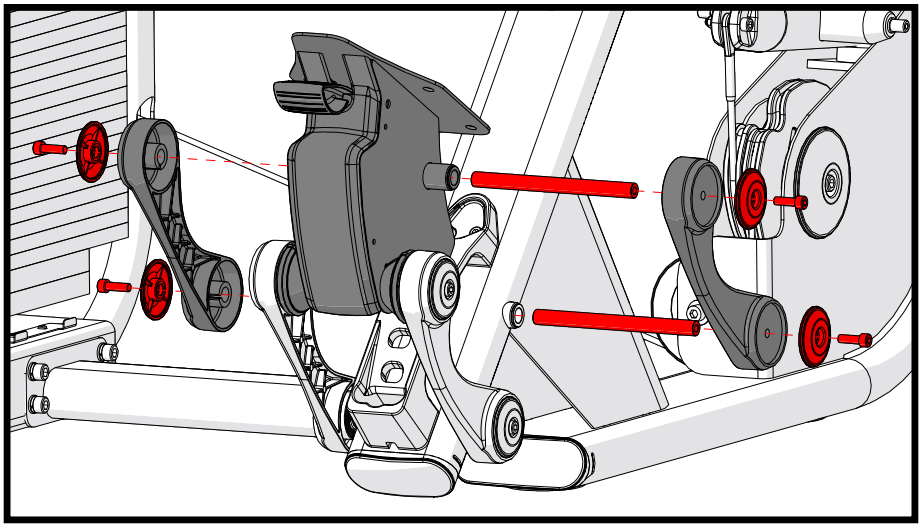

Tighten to 39 N-m/29 ft-lbs.


STEP 1 | RIGHT ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
16	Axle	1
17	Right Lower Arm Assembly	1

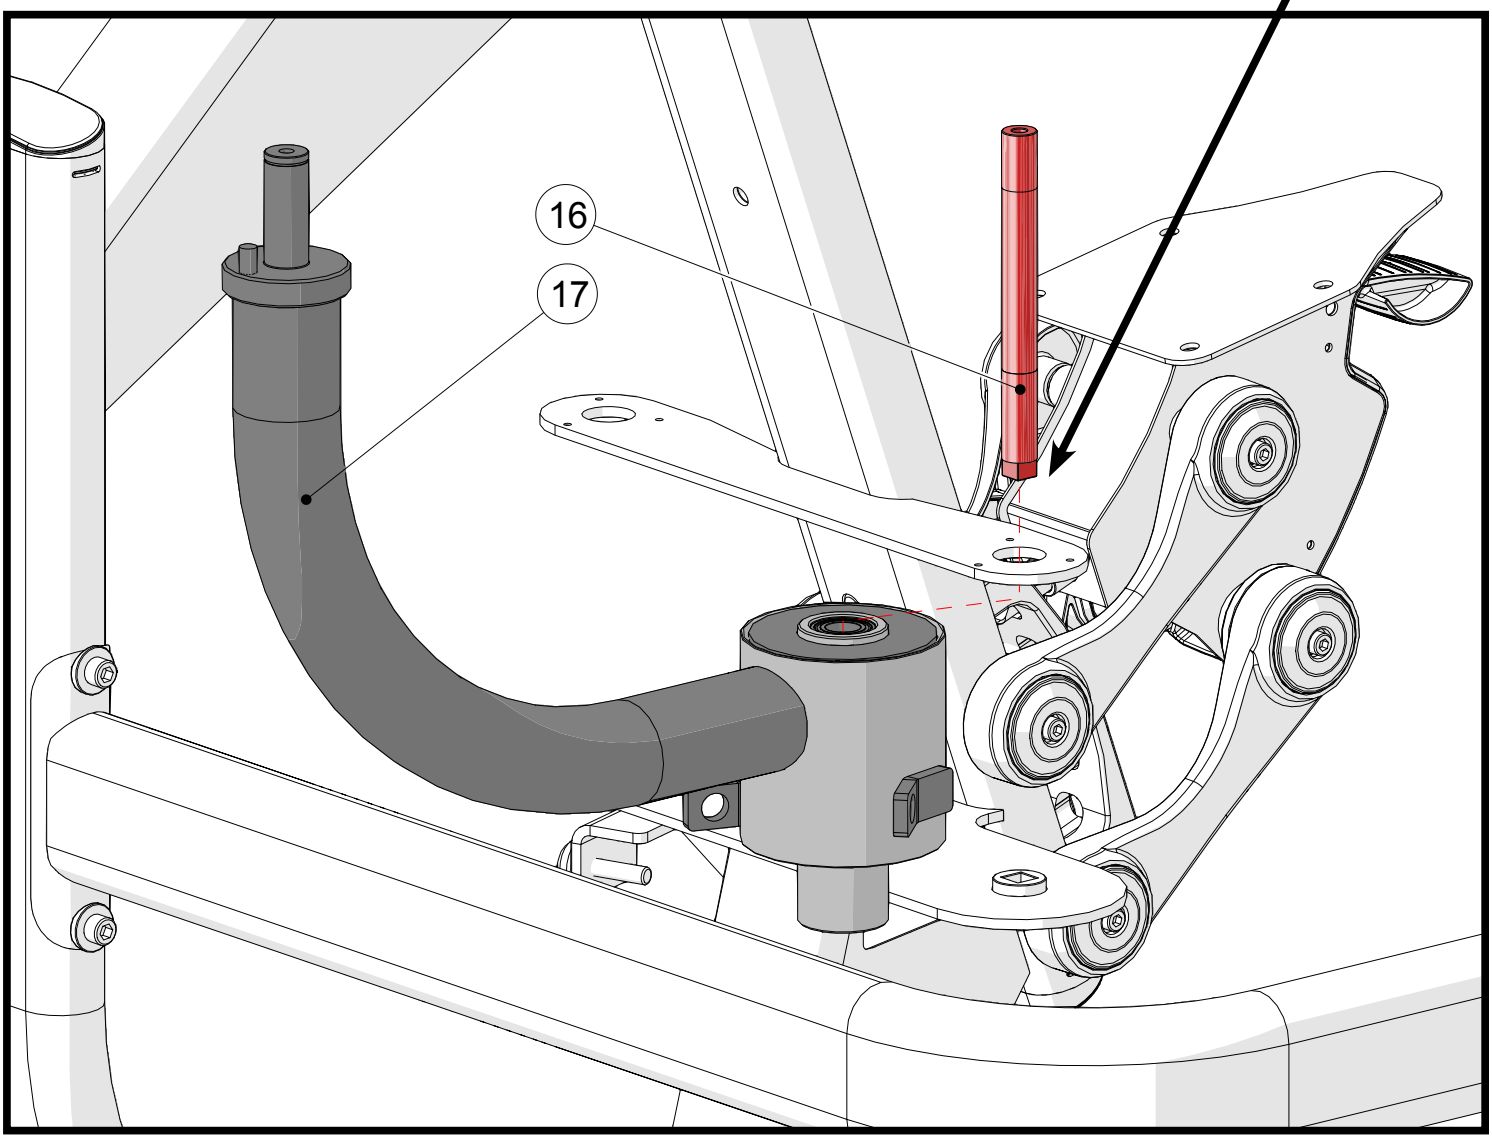

STEP 2 | RIGHT ARM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
18	M5 X 12L SHC	3
19	M5 Flat Washer	3
20	Cap	1
21	Axle Locking Sleeve	1
22	Wave (Spring) Washer	1

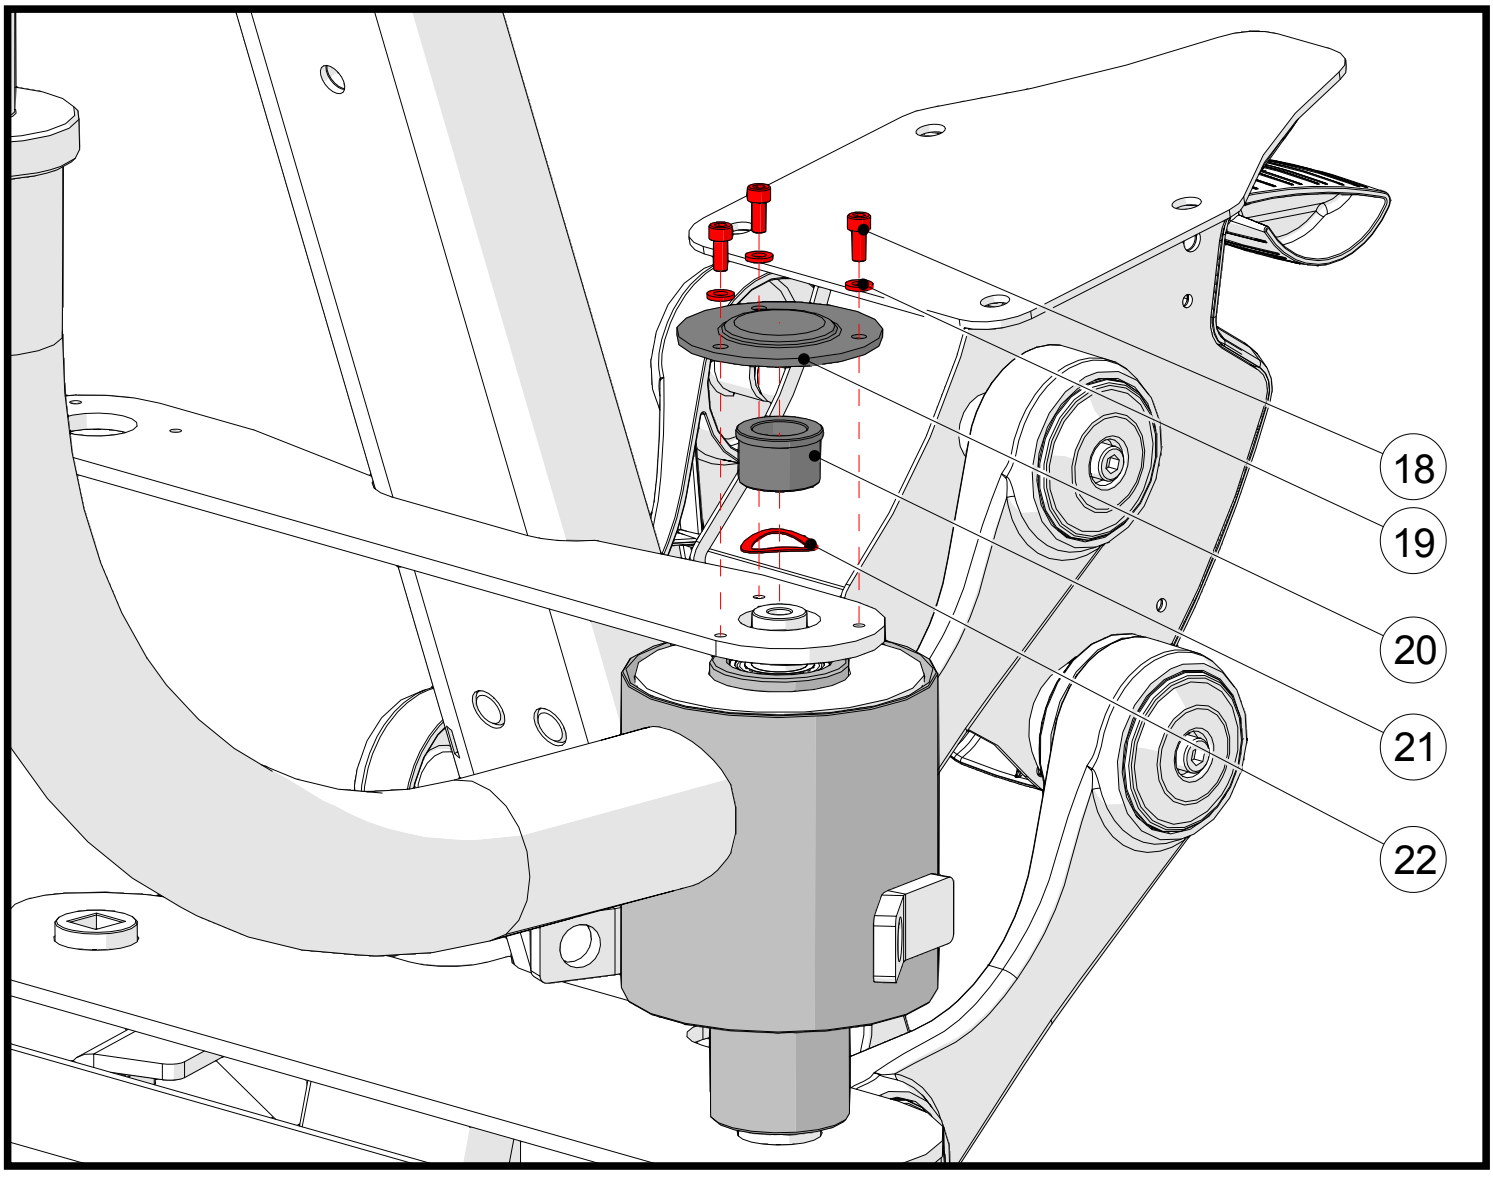

Torque to 7 N-m/5 ft-lbs.


STEP 3 | LEFT ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
16	Axle	1
23	CAM	1
24	Spacer	1
25	Left Lower Arm Assembly (w/pull pin)	1

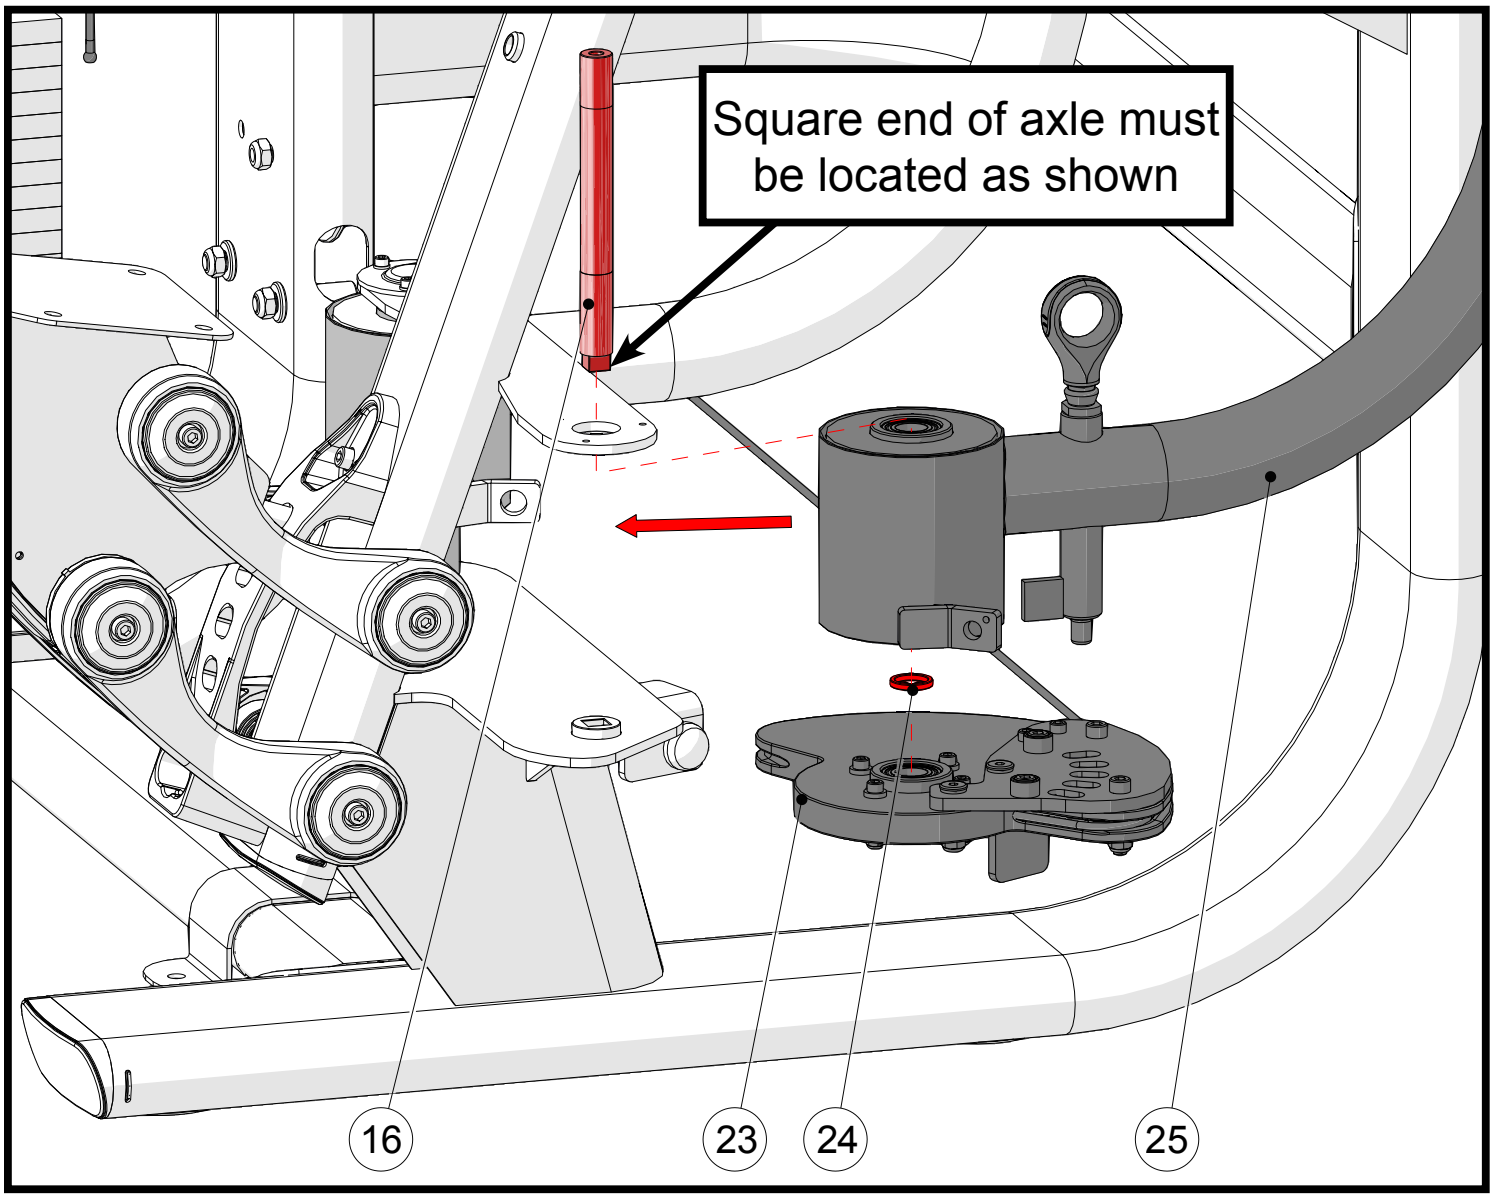

STEP 4 | LEFT ARM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
18	M5 X 12L SHC	3
19	M5 Flat Washer	3
20	Cap	1
21	Axle Locking Sleeve	1
22	Wave (Spring) Washer	1

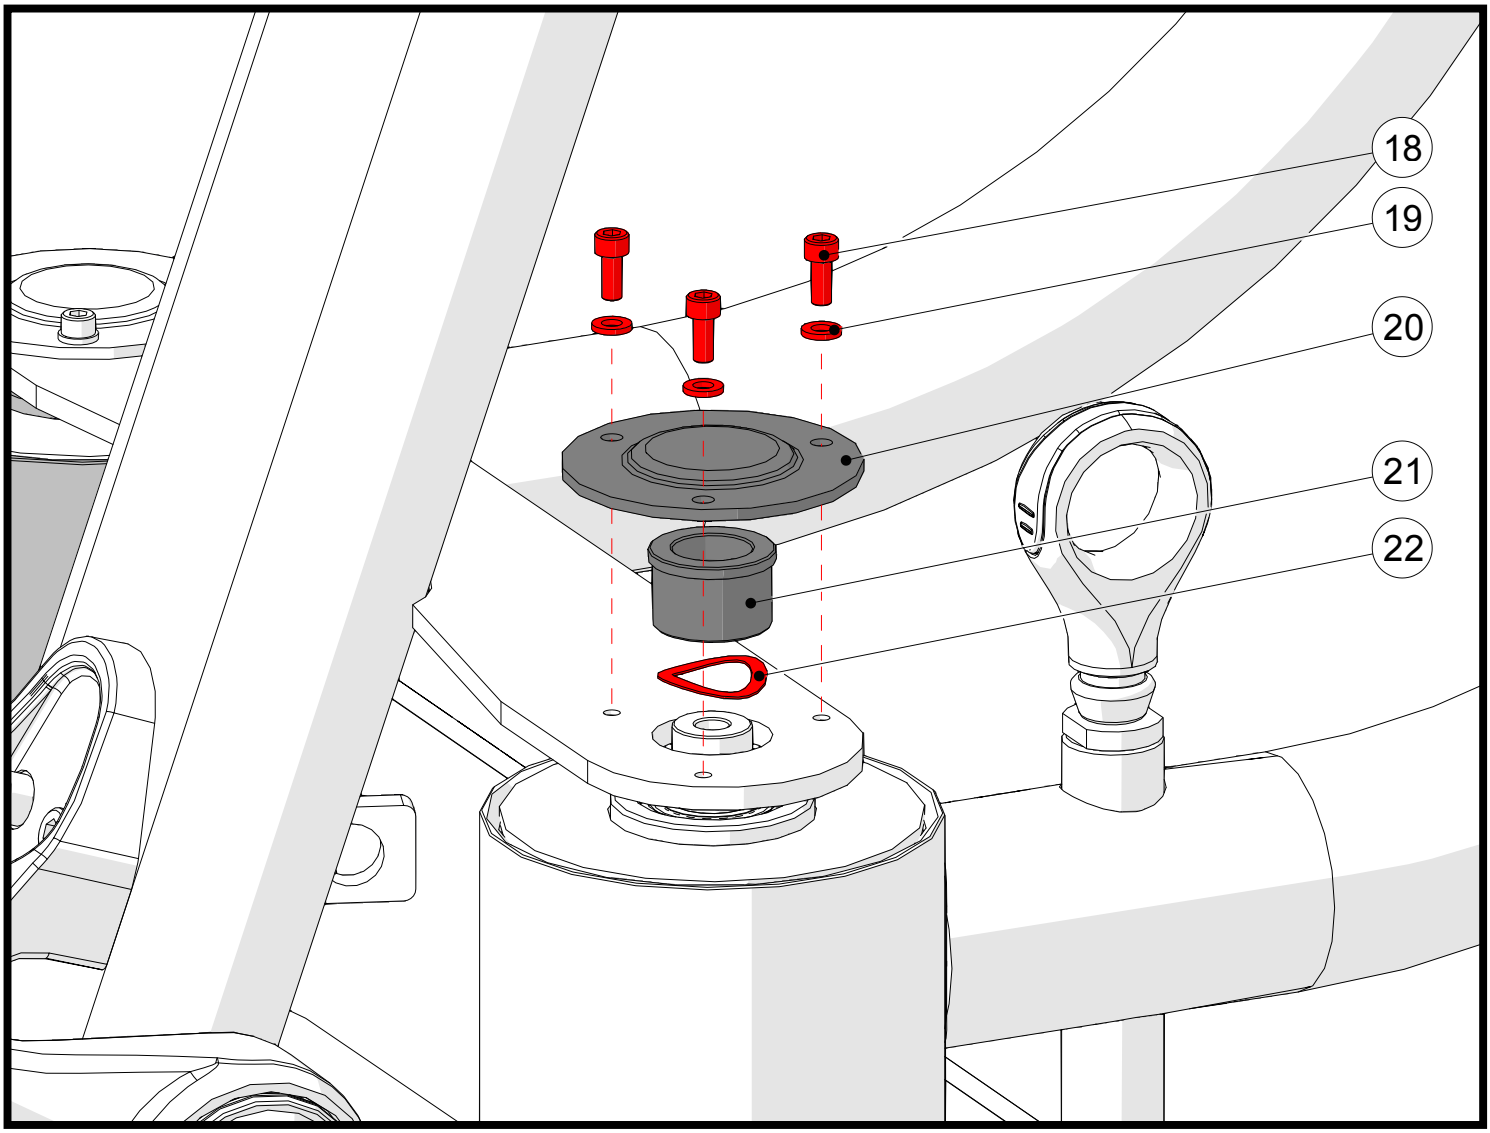

Torque to 7 N-m/5 ft-lbs.


STEP 5 | ROM ADJUSTMENT CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
26	M5 X 12L BHC	2
27	ROM Adjustment Cable	2
28	Cable Retainer	2

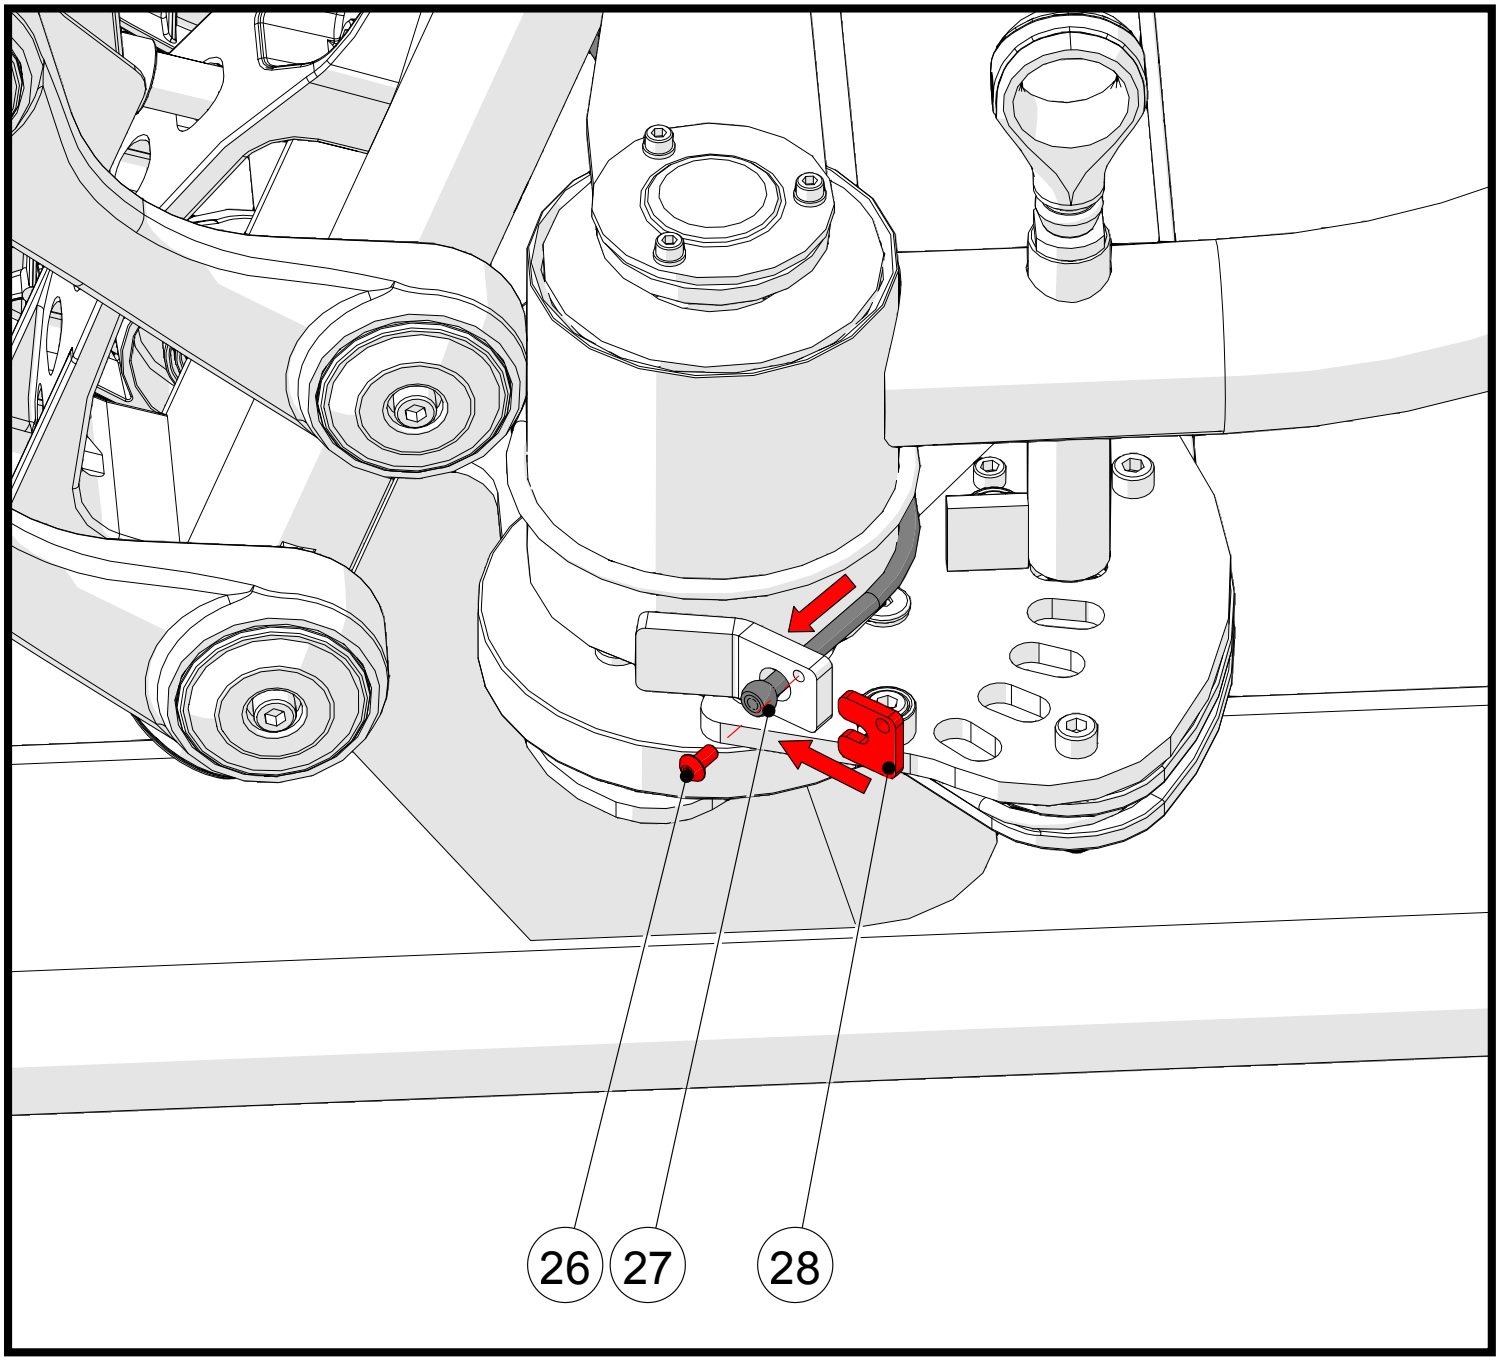

Torque to 7 N-m/5 ft-lbs.

STEP 5 | ROM ADJUSTMENT ASSEMBLY INSTRUCTIONS & NOTES

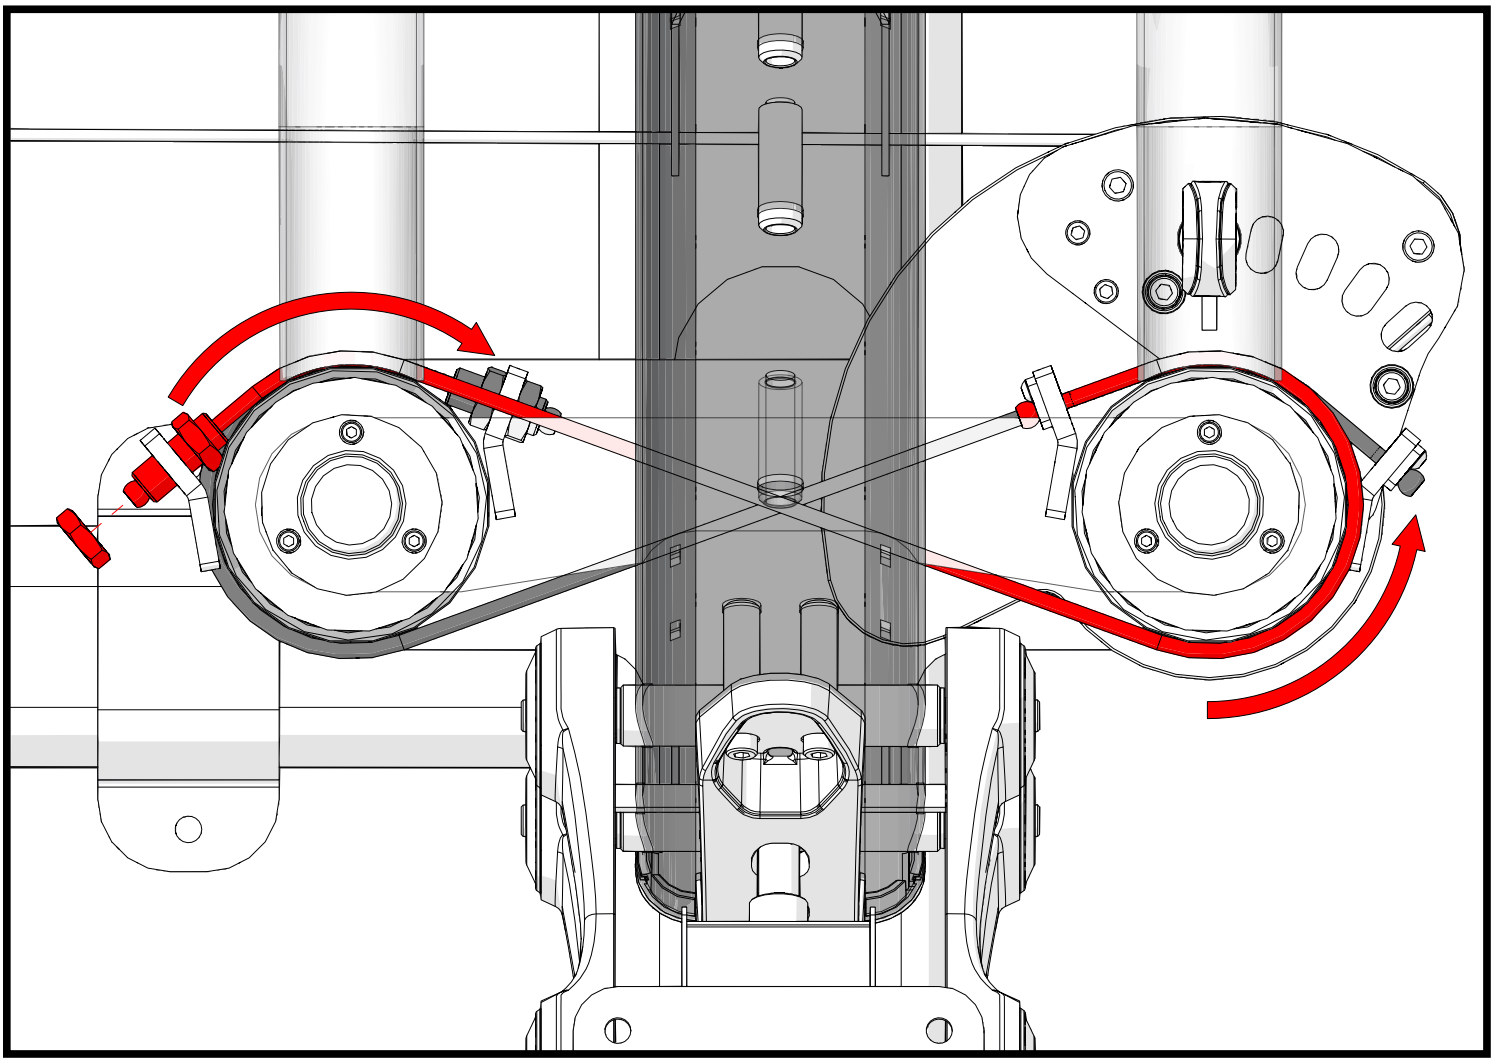


Assemble “figure 8” cables as shown
Tighten M12 jam nuts to 77 N-m/57 ft-lbs.

STEP 6 | UPPER ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
11	Medium Pivot Cap	2
29	M10 X 20L SHC	2
30	Snap Ring	2
31	Washer (38 OD)	12
32	Left Upper Arm Assembly	1
33	Right Upper Arm Assembly (Not Shown)	1


*Note: Only left side is shown, quantities reflect both left and right.

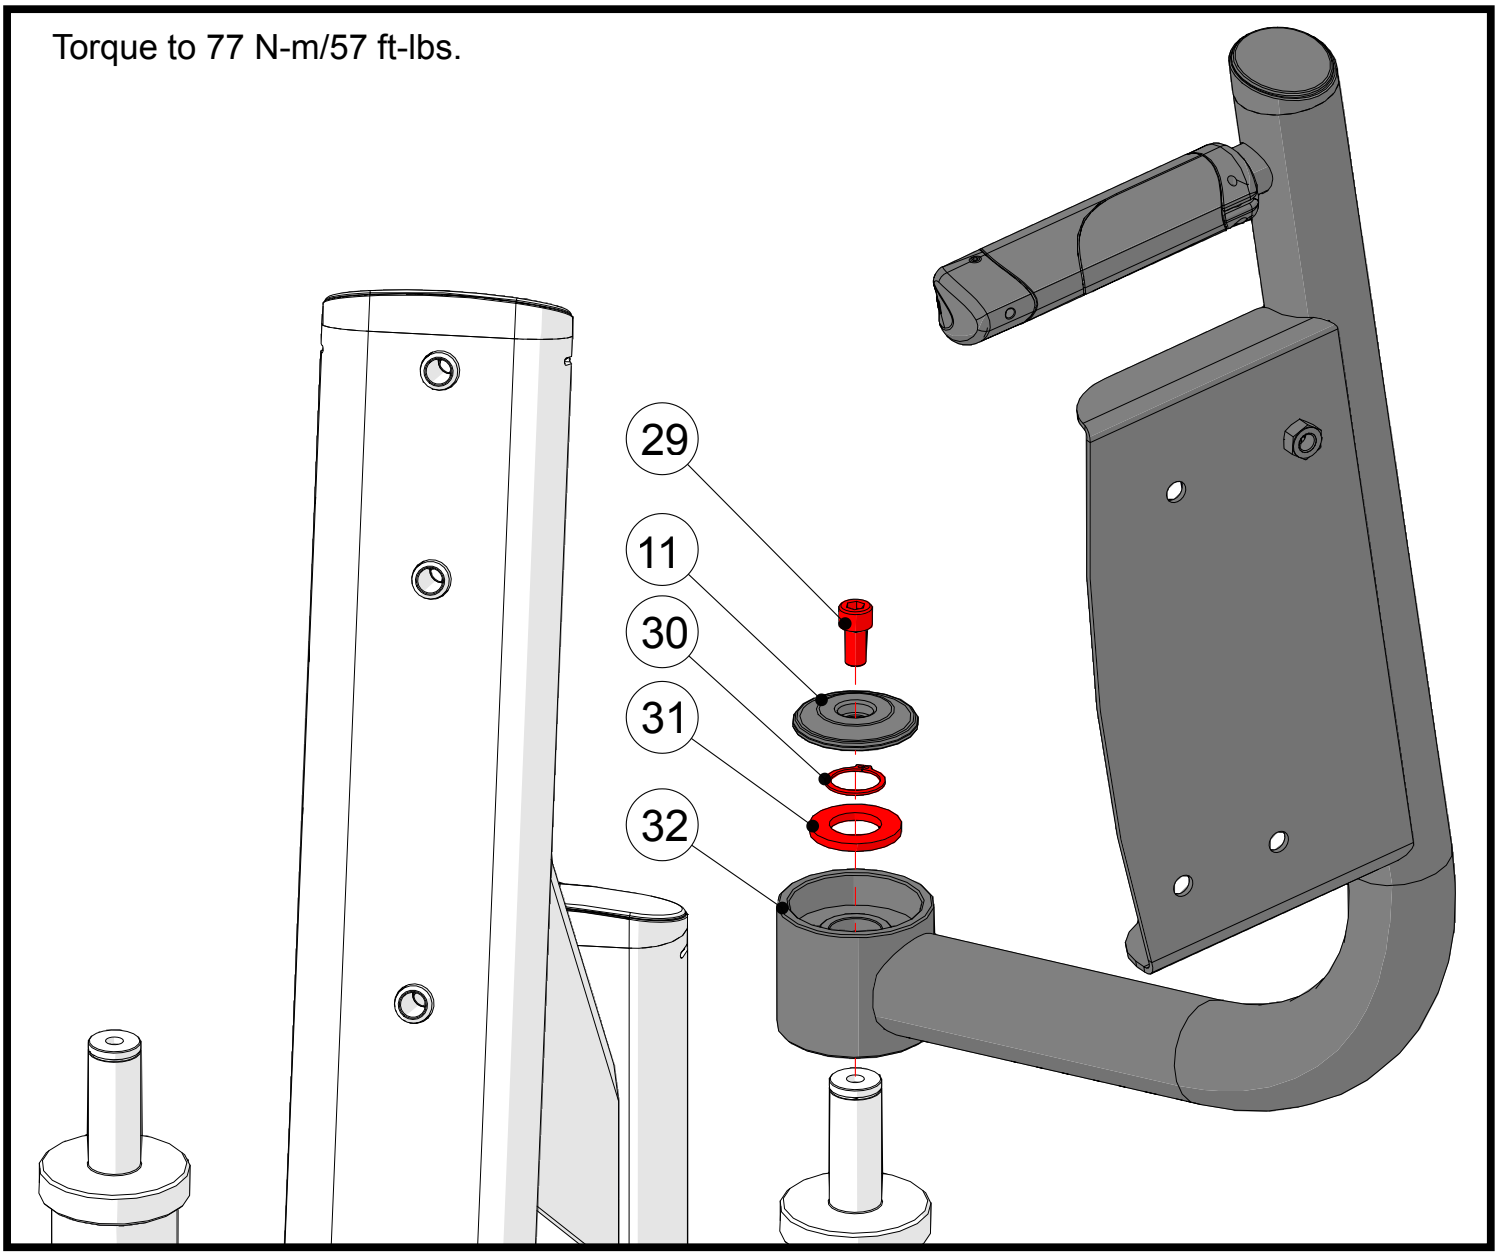

STEP 1 | ARM PAD ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
34	M10 X 15L SHC	2
35	M10 X 25L SHC	2
36	Bumper	2
37	Arm Pad	2
38	M10 X 20L BHC	4


*Note: Only right side is shown, quantities reflect both left and right.

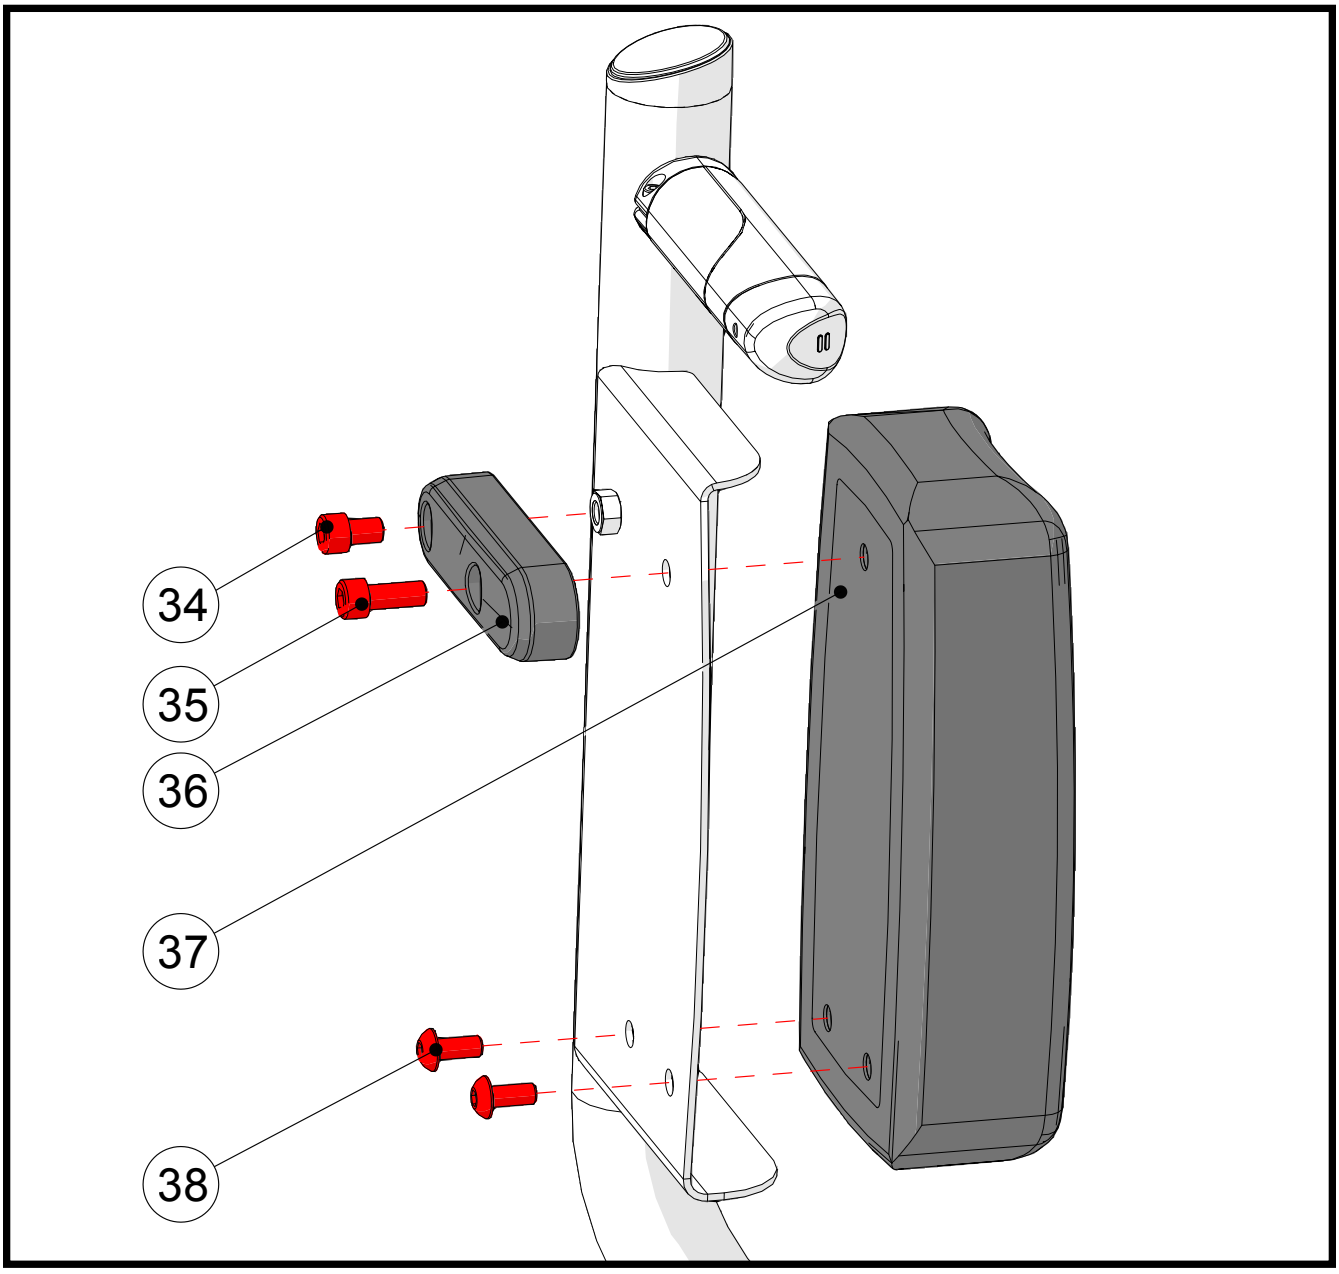


Install the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 2 | BACK PAD ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
39	Head Rest Assembly	1
40	M10 X 75L BHC	4
41	Back Pad Assembly	1

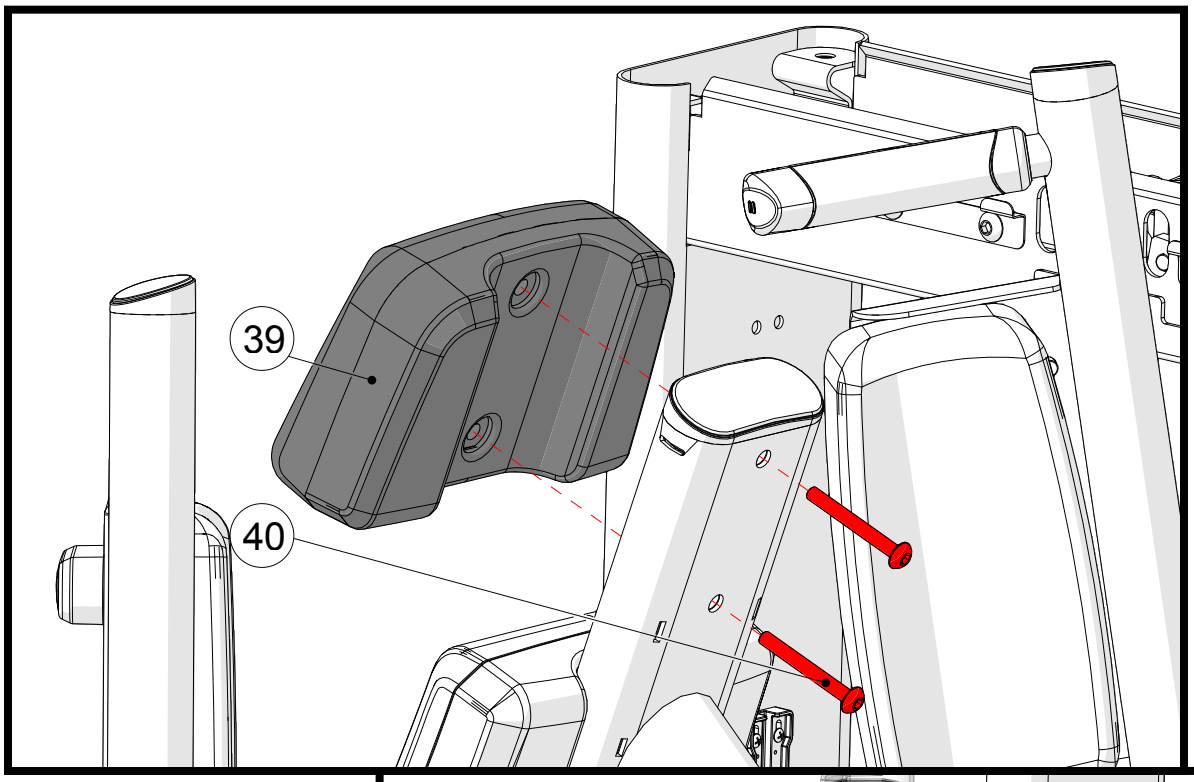


Install the pads as shown.
Tighten to 27 N-m / 20 ft-lbs.

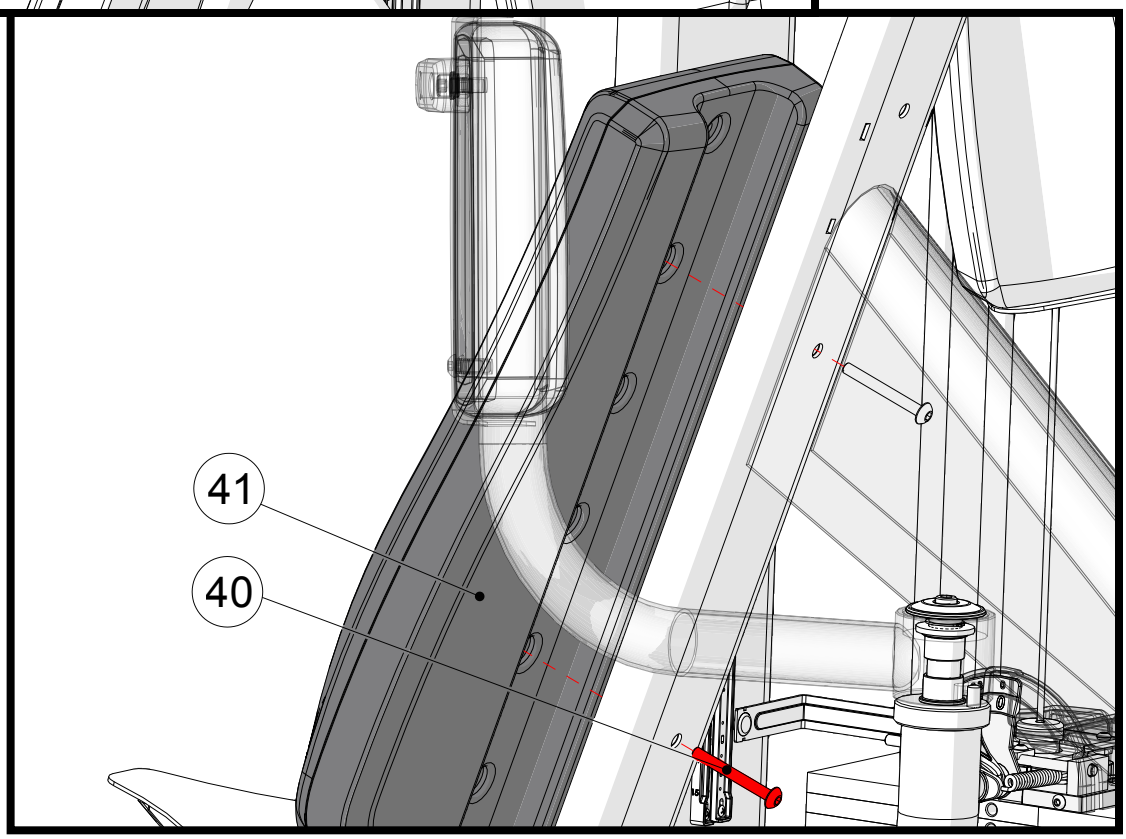

STEP 3 | BOTTOM PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
42	Pad	1
43	M10 X 20L Hex Bolt	4

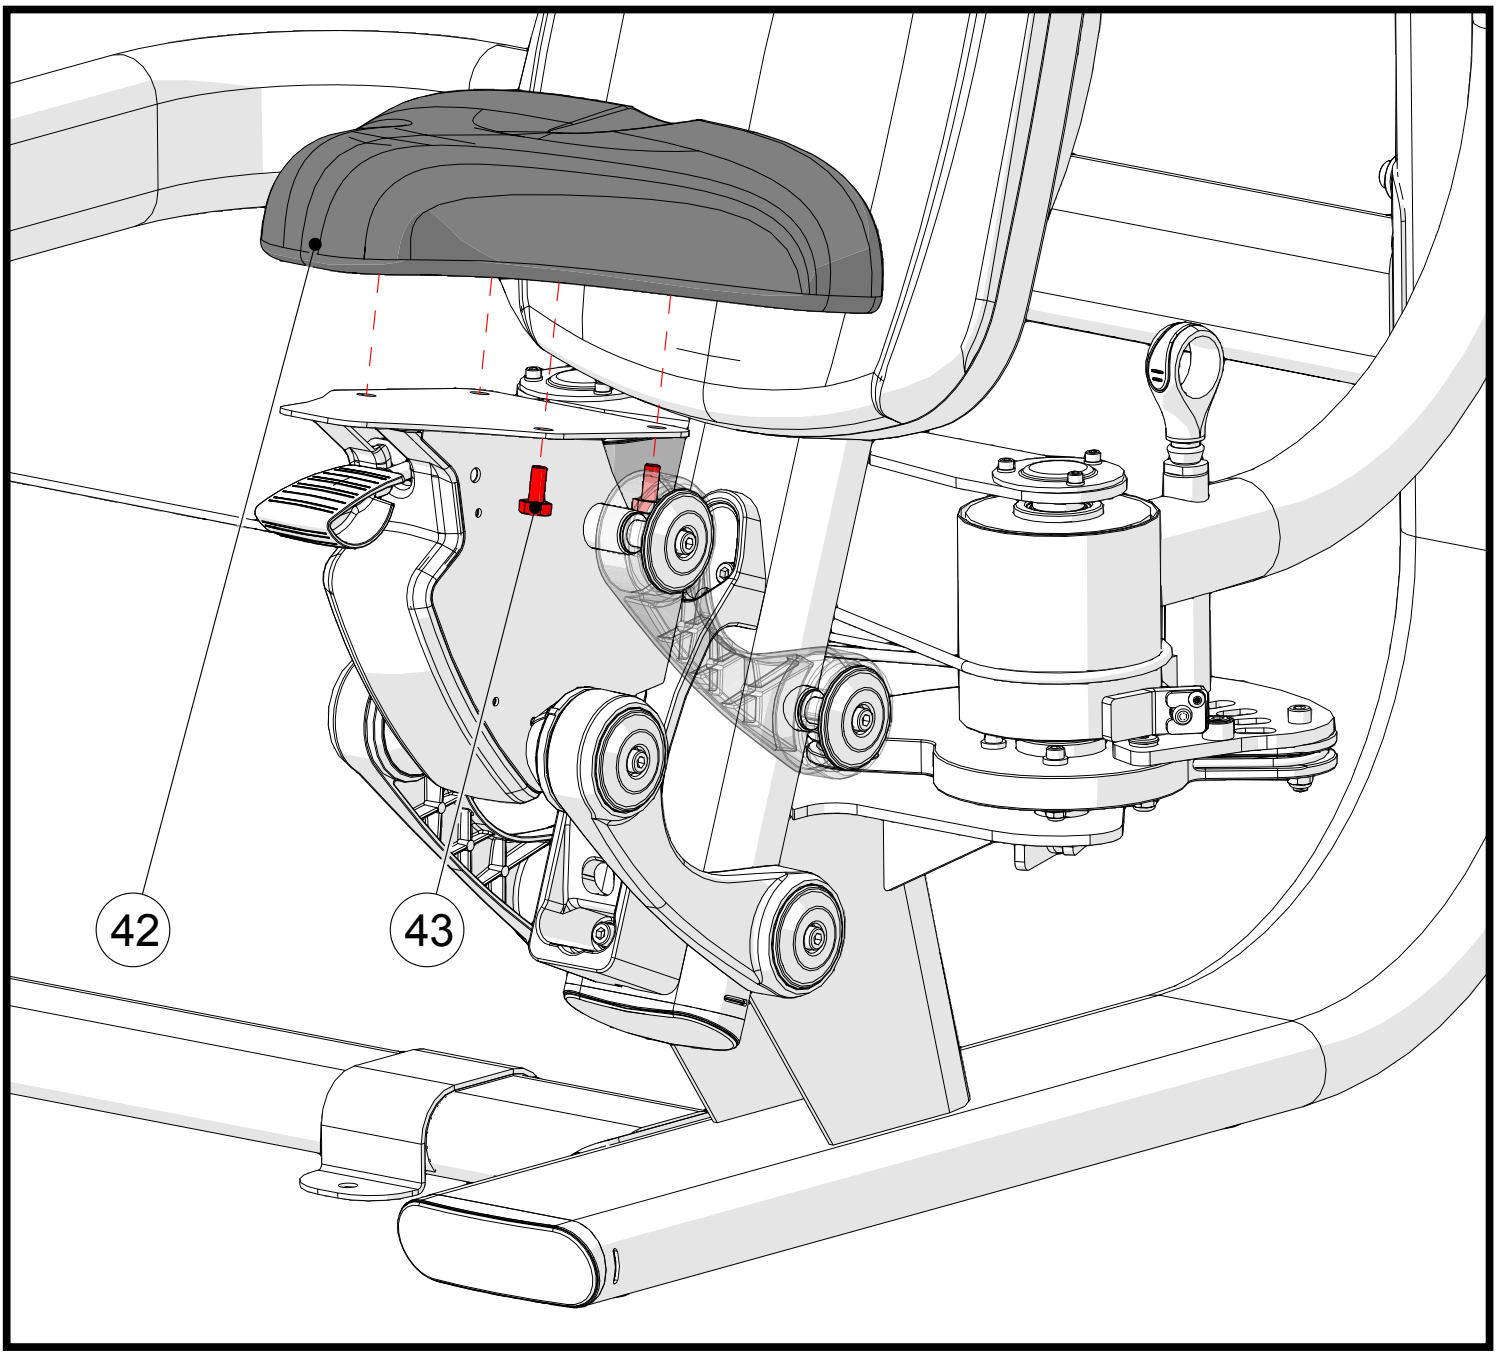

Install the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 1 | SHROUD ASSEMBLY ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
44	Rear Shroud	1
45	Left Front Shroud	1
46	Right Front Shroud	1

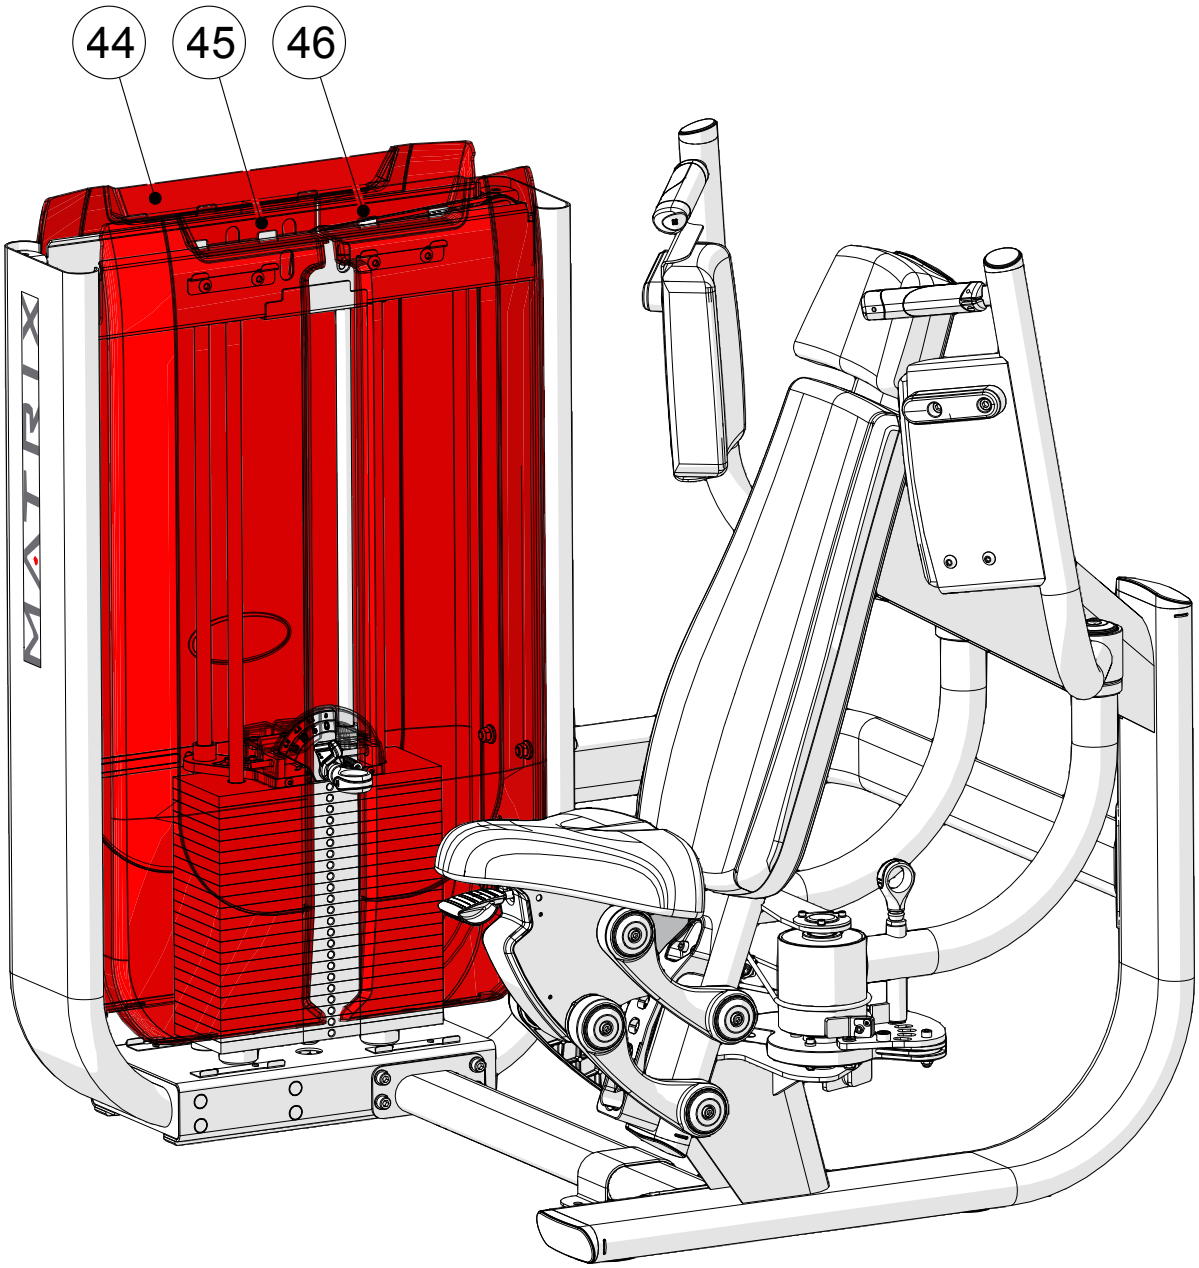

Install the weight stack shrouds as shown.

STEP 2 | TOP CAP ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
47	M8 X 60L SHC	4
48	Top Cap	1

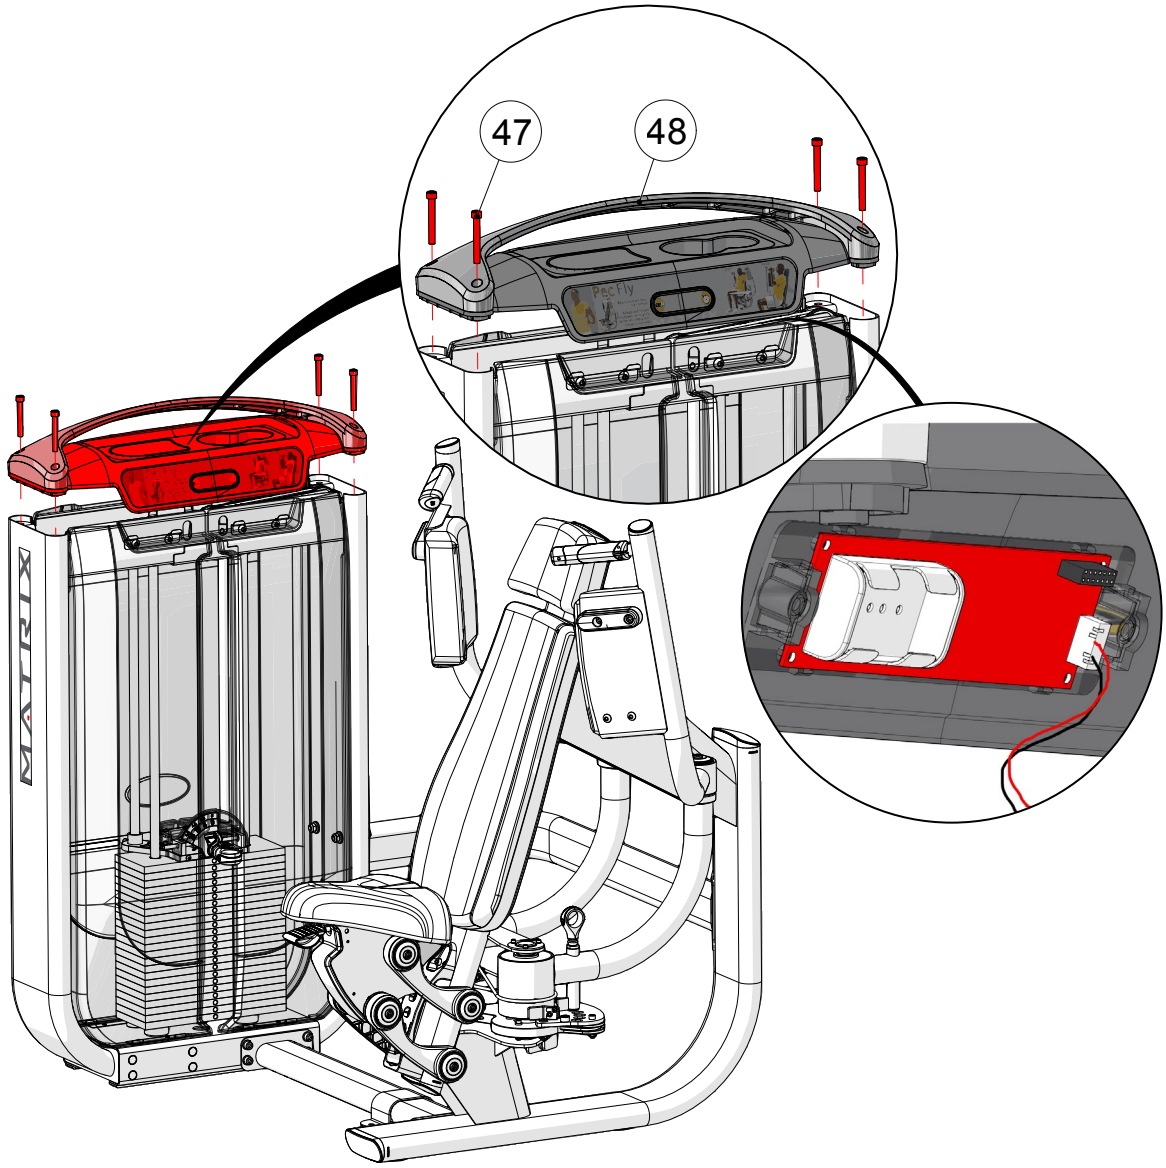


Install the top cap and connect rep counter plug as shown.

Torque to 17 N-m/147 in-lbs.

Position top cap so Rep Counter faces the user.

MATRIX® | IMPORTANT NOTICE

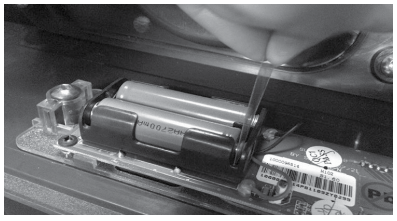

PLEASE NOTE:

Be sure to remove the insulating sheet when installing the Rep Counter.

MATRIX
Strong • Smart • Beautiful

Matrix Fitness
1600 Landmark Drive
Cottage Grove WI 53527

matrixfitness.com
Toll-free 866.693.4863
Facsimilie 608.839.8687

ULTRA Pectoral Fly Owners Guide rev.1.2 Copyright© 2014 Matrix Fitness