MATRIX

Strong • Smart • Beautiful



OWNERS MANUAL

ULTRA Single-Station Strength

G7-S34 Seated Row

Table Of Contents

Safety, General Care & Maintenence 3

Getting Started (Product Specifications) 5

Assembly Information 6

Markings 7

Parts List 8

Installation & Assembly: Value Line

- Part 1 Weight Stack & User Frame Assembly 10
- Part 2 Seat Assembly 13
- Part 3 Pivot Block Assembly 15
- Part 4 Foot Rest Assembly 16
- Part 5 CAM/Cable Assembly 17
- Part 6 Arm Assembly 18
- Part 7 Pad Assembly 24
- Part 8 Plastics Assembly 26

IMPORTANT SAFETY INFORMATION

It is the sole responsibility of the purchaser of Matrix products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Matrix exercise equipment be informed of the following information prior to its use.

PROPER USAGE

Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that Matrix equipment be used properly to avoid injury.

Keep hands and feet clear at all times from moving parts to avoid injury.

CHECK FOR DAMAGED PARTS

1. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local Matrix dealer.

2. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your Matrix dealer for a replacement.

3. SECURING EQUIPMENT: All equipment MUST be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor.

4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your liability to a minimum. Equipment needs to be inspected at regular intervals.

5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. Matrix dealers will provide service and maintenance training at our corporate facility upon request.


IMPORTANT SAFETY INSTRUCTIONS

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WARNING: SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO AVOID INJURY!

1. Never allow children on strength training equipment. Teenagers must be supervised at all times while using this equipment.
2. All warnings and instructions should be read and proper instruction obtained prior to use.
3. Use this equipment for its intended purposes only.
4. NEVER allow resistance straps, ropes or other means be attached to this equipment, as this may result in serious injury.
5. NEVER use this equipment for support during stretching, as this may result in serious injury.
6. Cease exercise if you feel faint or dizzy. Obtain a medical exam before beginning an exercise program.
7. Keep body, hair, clothing and accessories free and clear of all moving parts.
8. Inspect the machine before use. DO NOT use machine if it appears damaged or inoperable.
9. Check to see that the selector pin is completely inserted into the weight stack.
10. NEVER use this machine with the weight stack pinned in an elevated position.
11. NEVER use dumbells or other means to incrementally increase the weight resistance. Only use the means provided directly from the manufacturer.
12. This equipment should only be used in supervised areas where access and control are regulated by the owner.

EXERCISE PLACARD

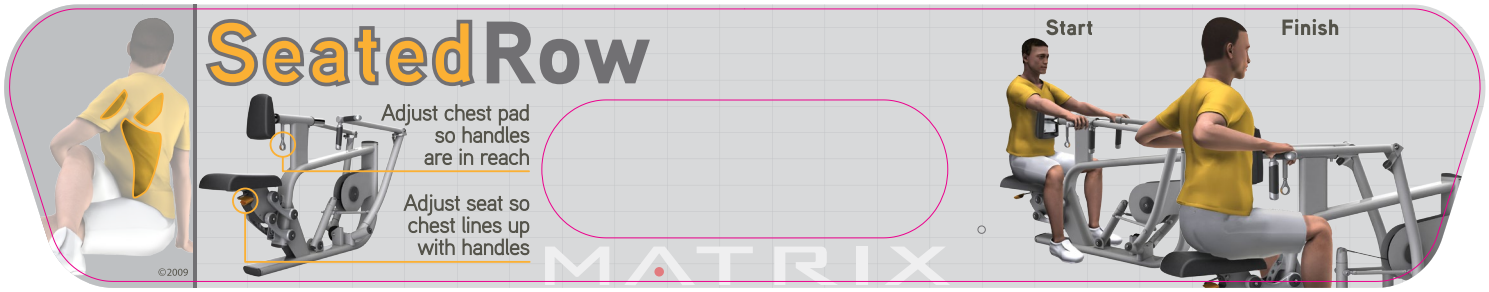

PRODUCT SPECIFICATIONS

TECH SPECS	
Maximum User Weight	136 kg / 300 lbs.
Maximum Training Weight	109 kg / 240 lbs.
Product Weight	311 kg / 685 lbs.
Overall Dimensions (L x W x H)	158.1 x 142.8 x 129.6 cm / 62.3" x 56.2" x 51.0"

WARRANTY (Valid in USA only)	
Frame (not coatings)	10 years
Weight stacks	5 years
Pulleys	5 years
Pivot bearings	5 years
Any items not specified	3 years
Labor (excluding upholstery/cables/grips)	3 years
Upholstery/cables/grips/springs	1 year
Accessories	6 months

MAINTENANCE CHECKLIST

ACTION	FREQUENCY
Clean Upholstery	Daily
Inspect Cables	Daily
Clean Guide Rods	Monthly
Inspect Hardware	Monthly
Inspect Frame	Bi-Annually
Clean Machine	As Needed
Clean Grips	As Needed
Lubricate Guide Rods	As Needed

Upholstery & Grips should be cleaned with a non-ammonia based cleaner or a mild soap and water. Guide rods should be lubricated with Teflon based lubricant. Apply the lubricant to a cotton cloth and then apply up and down the guide rods.

UNPACKING


Thank you for purchasing a Matrix product. This machine is an EN957-1 and EN957-2 compliant Class S product. Your Matrix product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the exploded diagrams. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.

CAUTION

The weight of the product is 685 lbs. (311 kg) not including the weight stack. The weight stack for this machine is 240 lbs. (109 kg). To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine. Maximum user weight for this machine is 300 lbs.


TOOLS REQUIRED FOR ASSEMBLY

3MM L-Shaped Allen Wrench
4MM L-Shaped Allen Wrench
5MM L-Shaped Allen Wrench
6MM L-Shaped Allen Wrench
8MM L-Shaped Allen Wrench
10MM L-Shaped Allen Wrench
Phillips & Standard Screwdrivers
8MM Open-End Wrench
13MM Open-End Wrench
17MM Open-End Wrench.
19MM Open-End Wrench
Adjustable Wrench

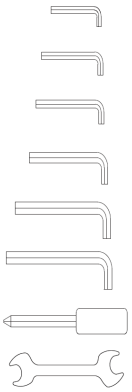

Blue Locktite 242 must be used on all fasteners that are not assembled with Nylock Nuts.

WARNING LABEL LOCATIONS

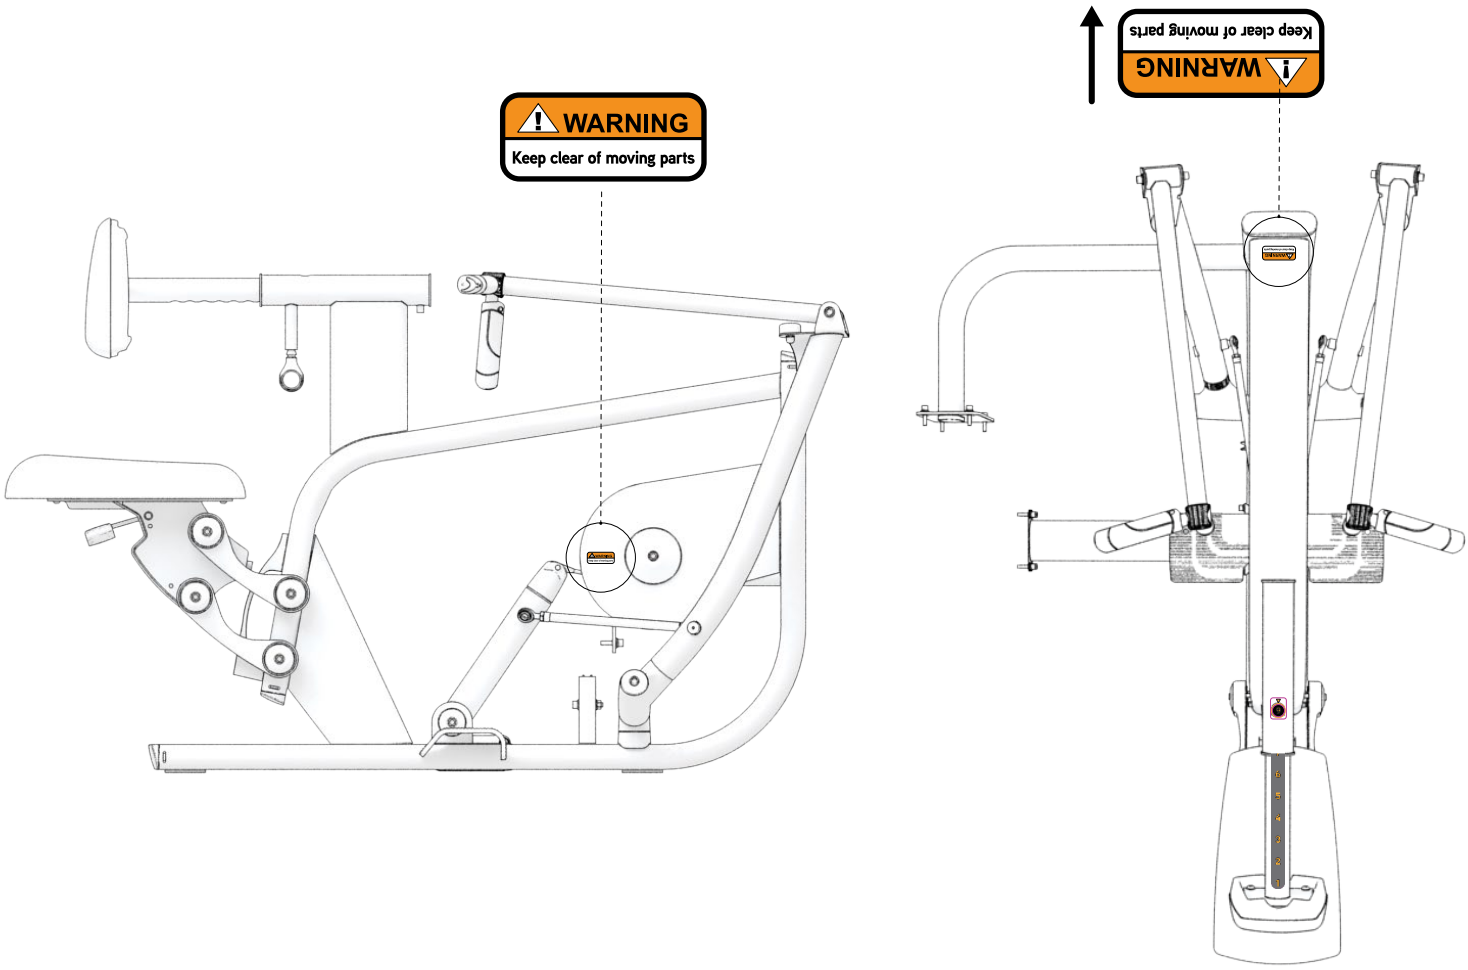

Parts List


ID	DESCRIPTION	QTY
1	Lower Connecting Tube	1
2	M10 X 30L Socket Head Cap Screw	8
3	M10 Flat Washer	19
4	Weight Stack	1
5	M10 Nylock Nut	8
6	M10 X 75L Socket Head Cap Screw	4
7	Upper Connecting Tube	1
8	M10 Saddle Washer	4
9	User Frame	1
10	M10 X 50L Socket Head Cap Screw	1
11	Pulley	1
12	M8 X 25L Socket Head Cap Screw	8
13	Medium Pivot Cap	8
14	Seat Link	4
15	Axle	4
16	Spring	3
17	Seat Mechanism	1
18	Pivot Block Assembly	1
19	M10 X 55L Socket Head Cap Screw	4
20	Rubber Footpad	1
21	M10 X 20L Flat Head Cap Screw	3
22	Foot Plate	1
23	CAM	1
24	Large Pivot Cap	1
25	M10 X 105L Socket Head Cap Screw	2
26	Swingarm	1
27	M6 Nylock Nut	1
28	M6 Shoulder Bolt	1
29	Small Pivot Cap	3
30	Tie Rod	2
31	M6 Flat Washer	4
32	M6 X 12L Socket Head Cap Screw Seat	4

ID	DESCRIPTION	QTY
33	Wave (Spring Washer)	2
34	Right Lower Arm	1
35	Snap Ring	2
36	Left Lower Arm	1
37	M10 X 15L Socket Head Cap Screw	2
38	Left Upper Arm	1
39	Right Upper Arm	1
40	M10 X 95L Socket Head Cap Screw	2
41	Chest Pad Assembly	1
42	M10 X 25L Button Head Cap Screw	4
43	Pad	1
44	M10 X 25L Hex Bolt	4
45	Left Front Shroud	1
46	Rear Shroud	1
47	Right Front Shroud	1
48	M8 X 60L Socket Head Cap Screw	4
49	Top Cap	1

STEP 1 | USER FRAME INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
1	Lower Connecting Tube	1
2	M10 X 30L SHC	4
3	M10 Flat Washer	12
4	Weight Stack	1
5	M10 Nylock Nut	4
6	M10 X 75L SHC	4
7	Upper Connecting Tube	1


Tip frame as shown to access hardware.
DO NOT FULLY TIGHTEN

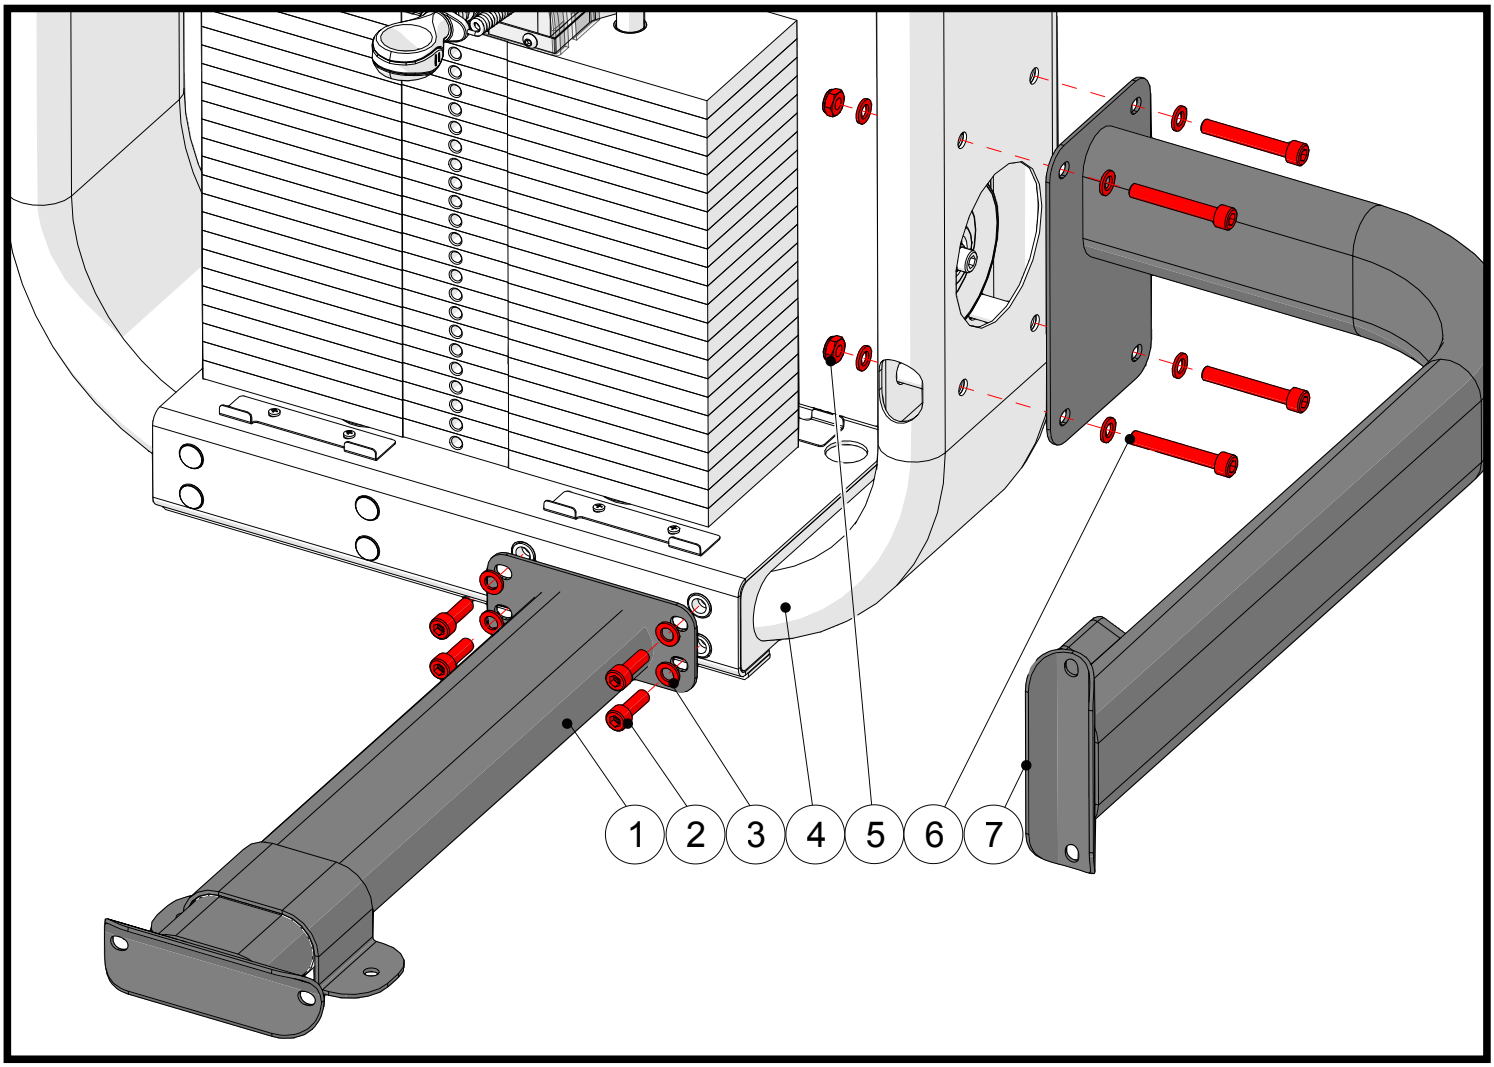

PART 1: USER FRAME ASSEMBLY


STEP 2 | USER FRAME INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
2	M10 X 30L SHC	4
8	M10 Saddle Washer	4
9	User Frame	1

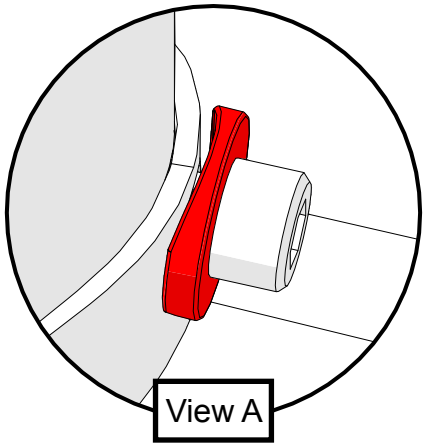


Orient the saddle washer as shown

Tip frame as shown to access hardware.
DO NOT FULLY TIGHTEN

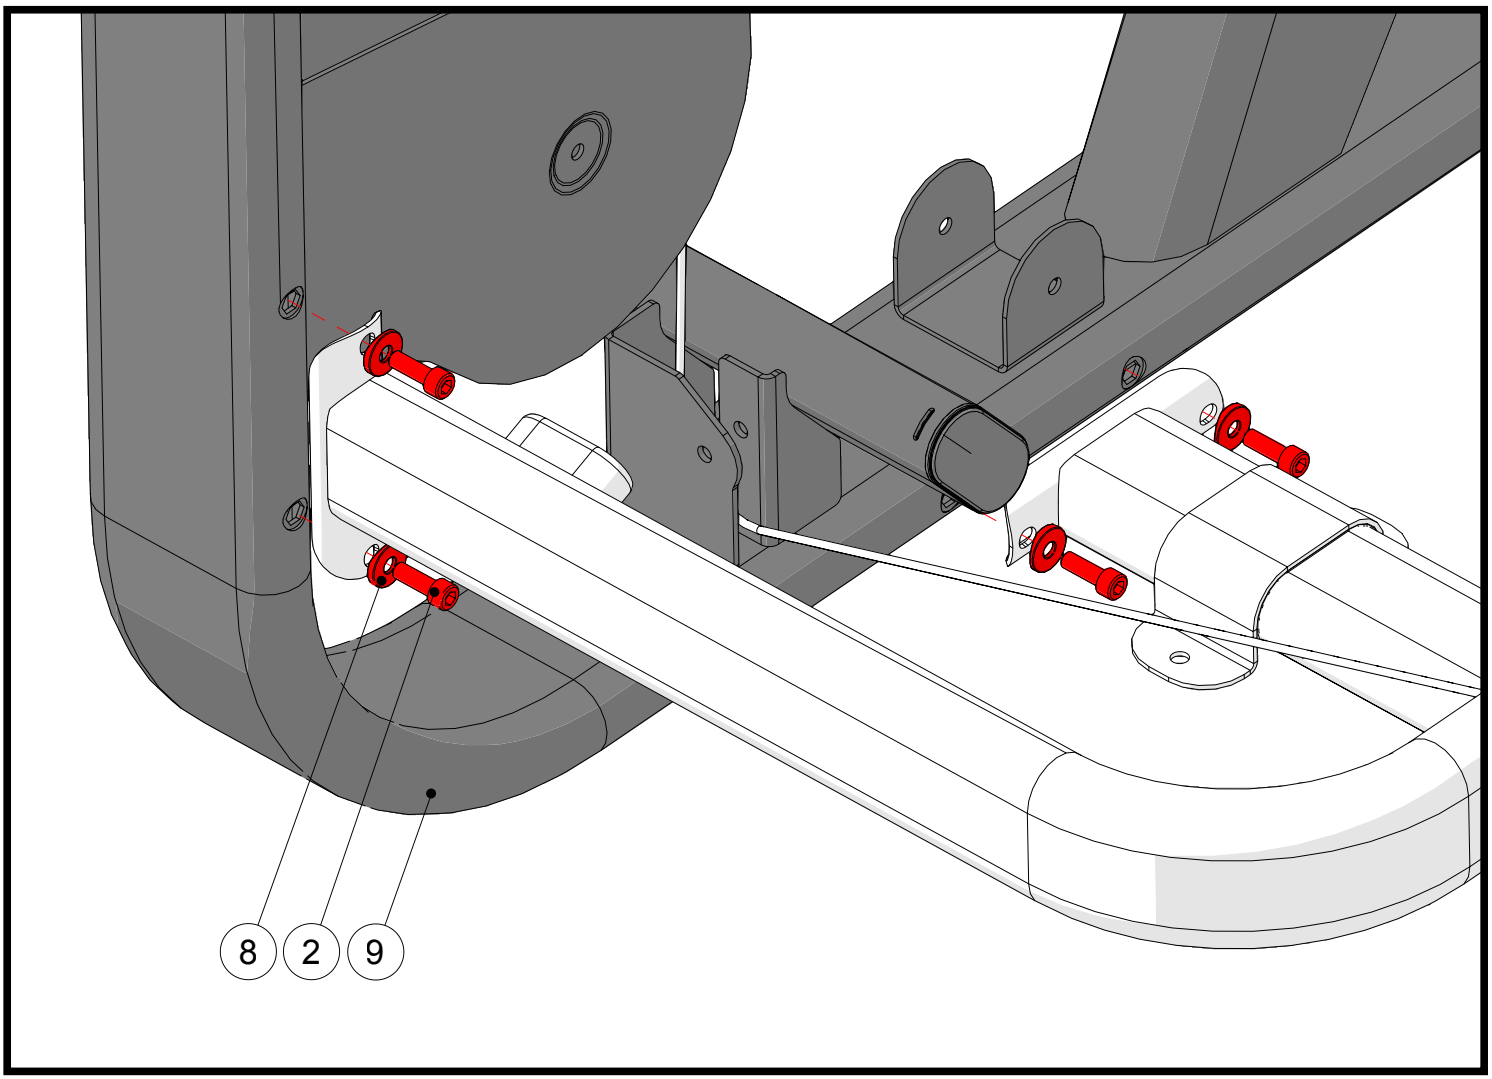

STEP 3 | WEIGHT STACK CABLE INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
3	M10 Flat Washer	1
10	M10 X 50L SHC	1
11	Pulley	1

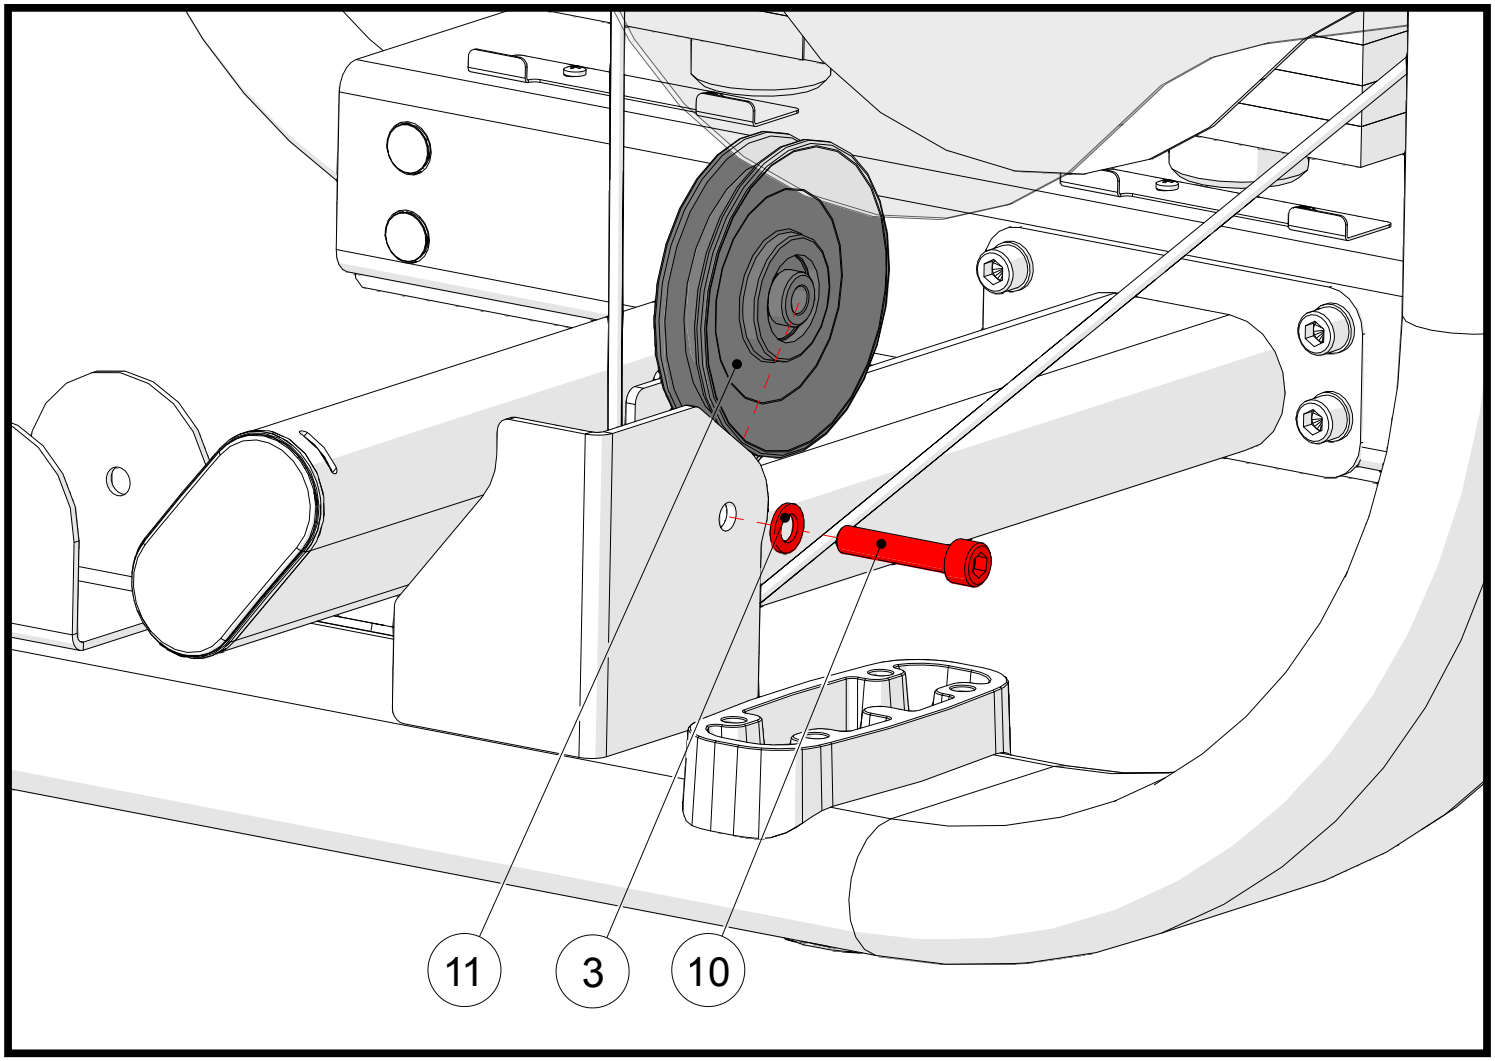



Torque all to: 77 N-m/57 ft-lbs.


STEP 1 | SEAT LINK INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
12	M8 X 25L SHC	2
13	Medium Pivot Cap	2
14	Seat Link	1
15	Axle	2
16	Spring	1
17	Seat Mechanism	1

Tighten to 39 N-m/29 ft-lbs.

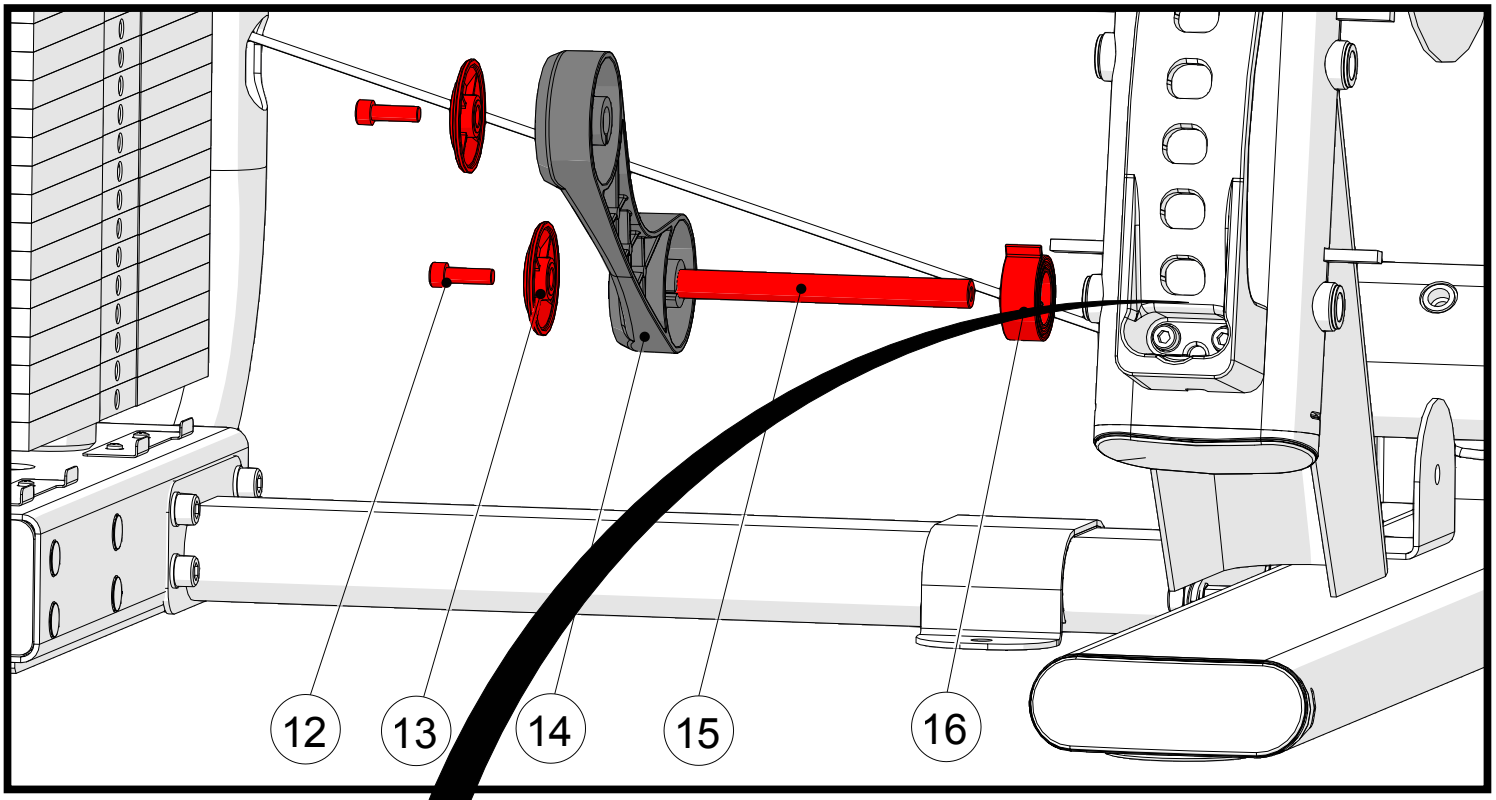

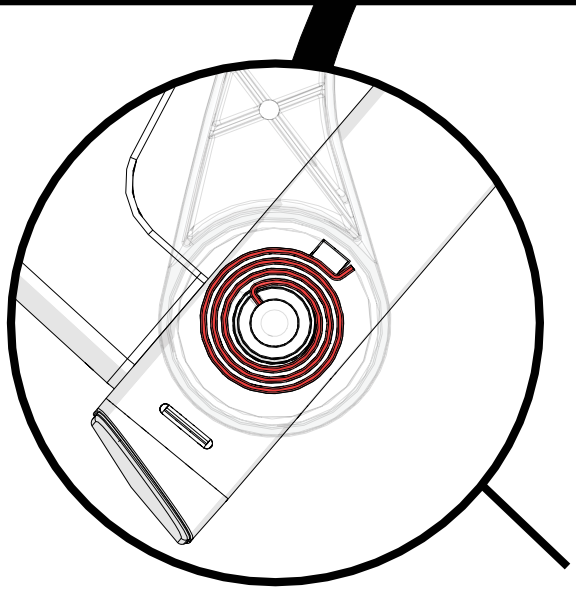

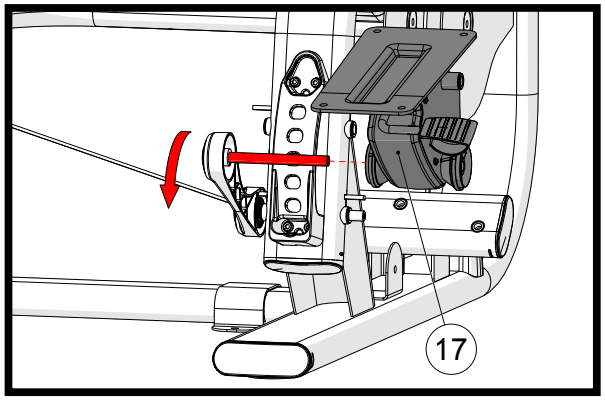


Ensure bottom links are assembled correctly by testing spring tension

Outer tab of spring must be secured behind frame reaction bar

STEP 2 | SEAT ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
12	M8 X 25L SHC	6
13	Medium Pivot Cap	6
14	Seat Link	3
15	Axle	2
16	Spring	2


Torque all to: 39 N-m/29 ft-lbs.

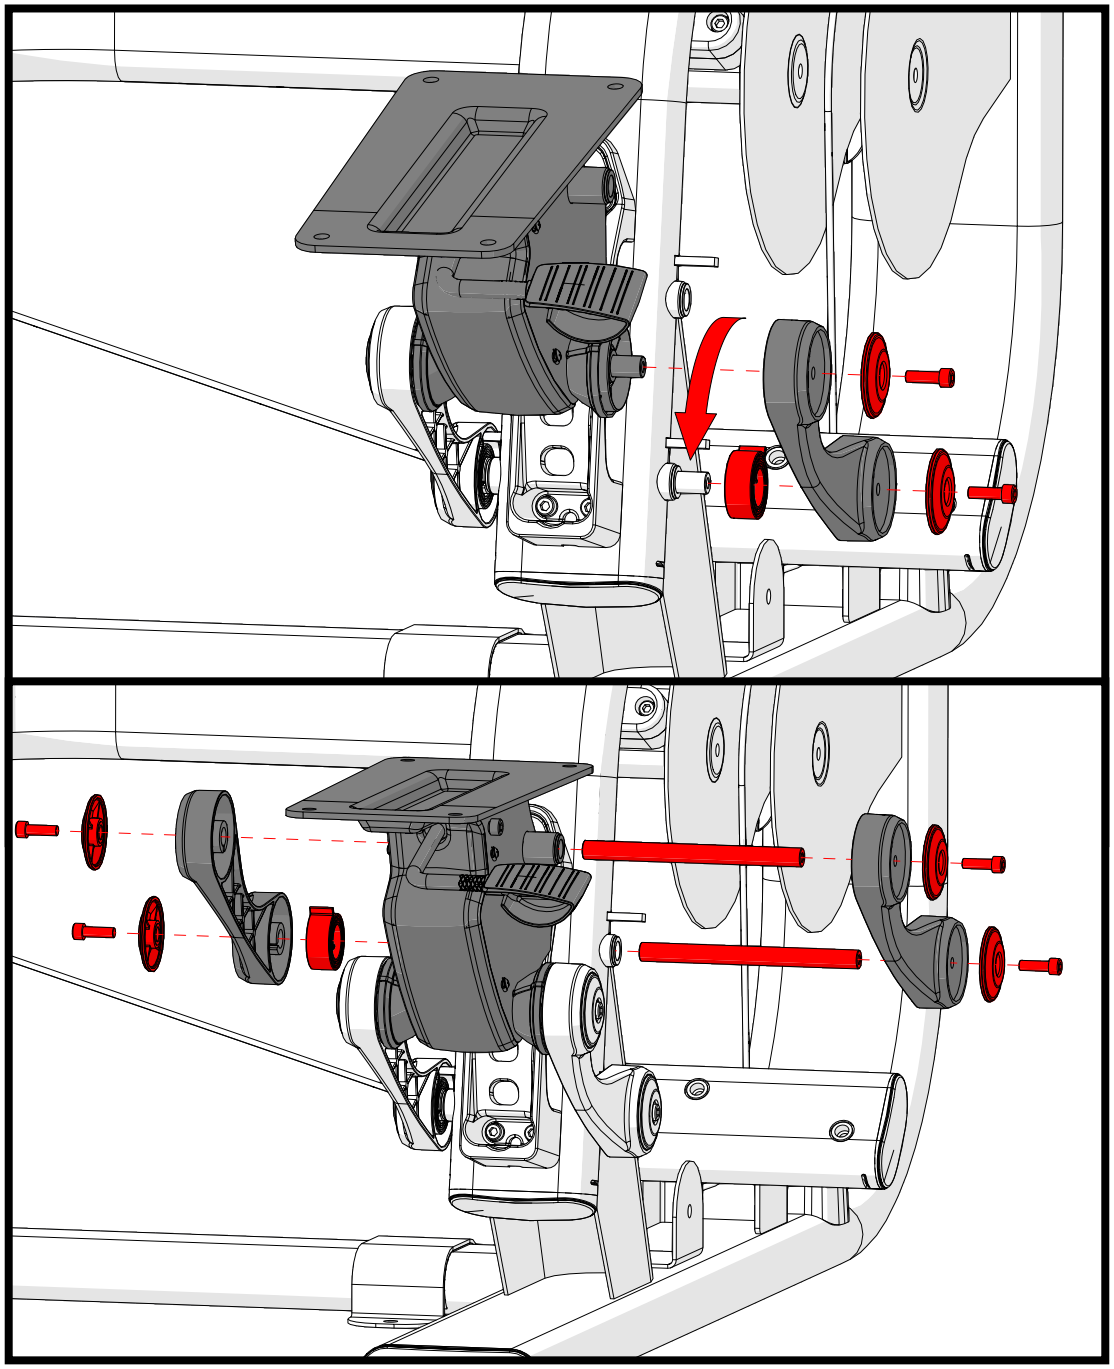

STEP 1 | PIVOT BLOCK ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
18	Pivot Block Assembly	1
19	M10 X 55L SHC	4


Axles must be red Loctited (Loctite 272) and torqued to: 180 N-m/133 ft-lbs.

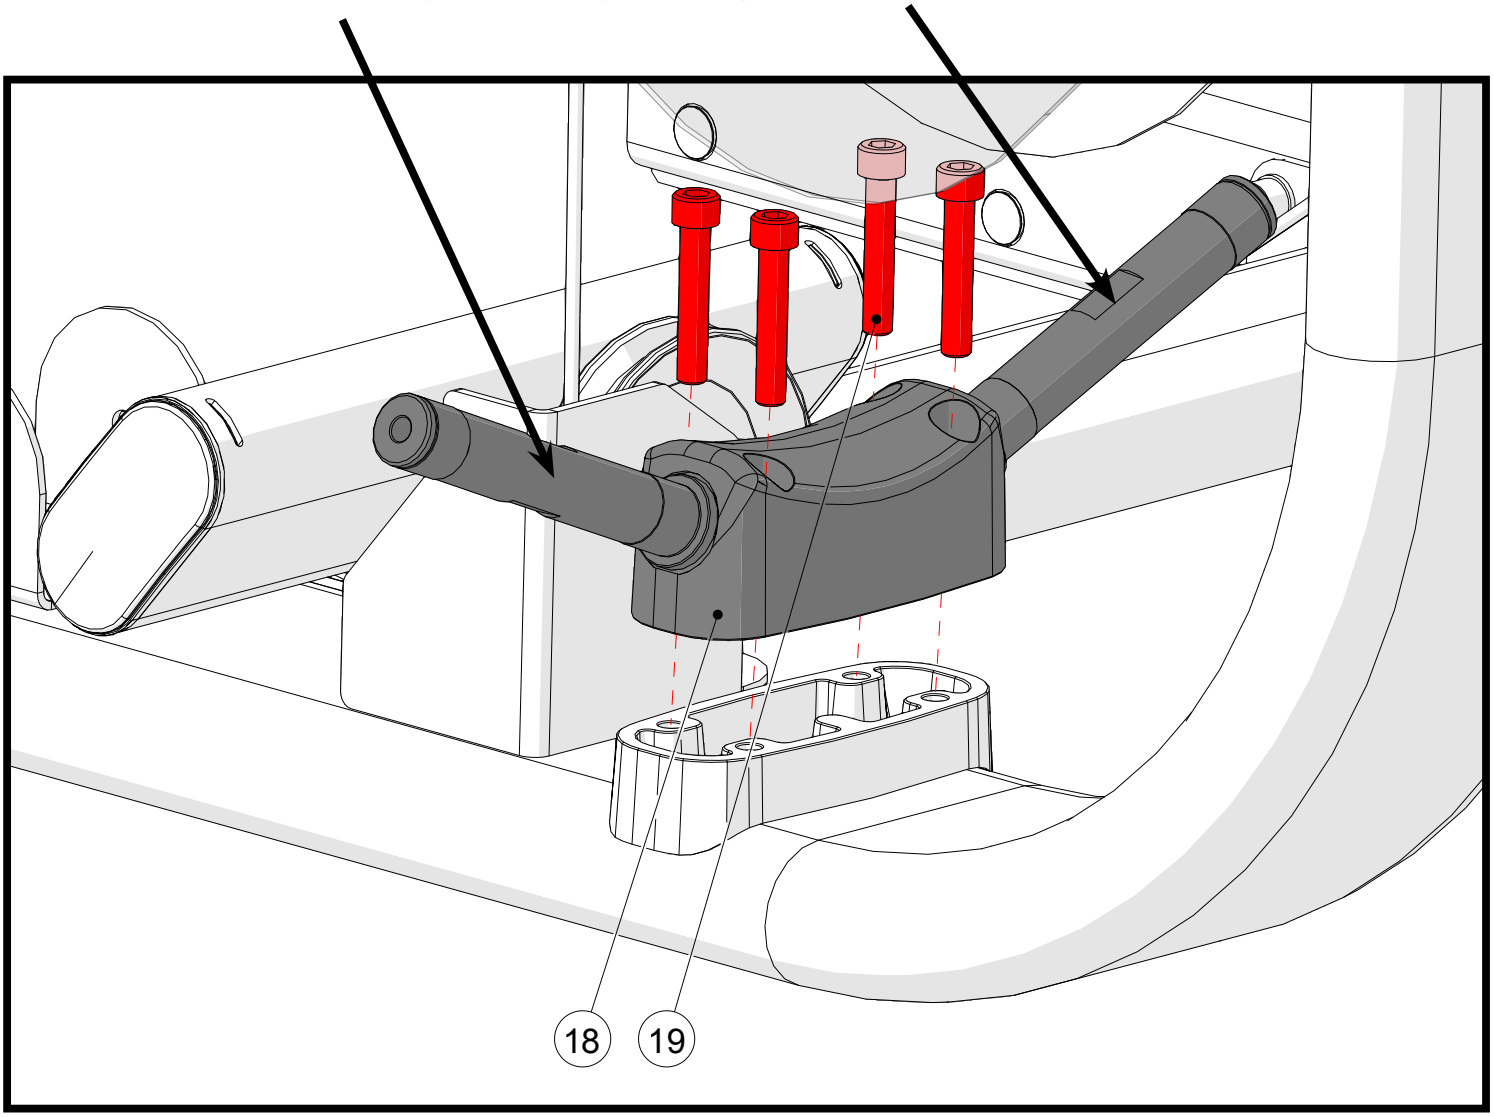

Hand thread - do not fully tighten
NOTE: Pivot Block is symmetrical

STEP 1 | FOOT PLATE INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
20	Rubber Footpad	1
21	M10 X 20L FHCS	3
22	Foot Plate	1

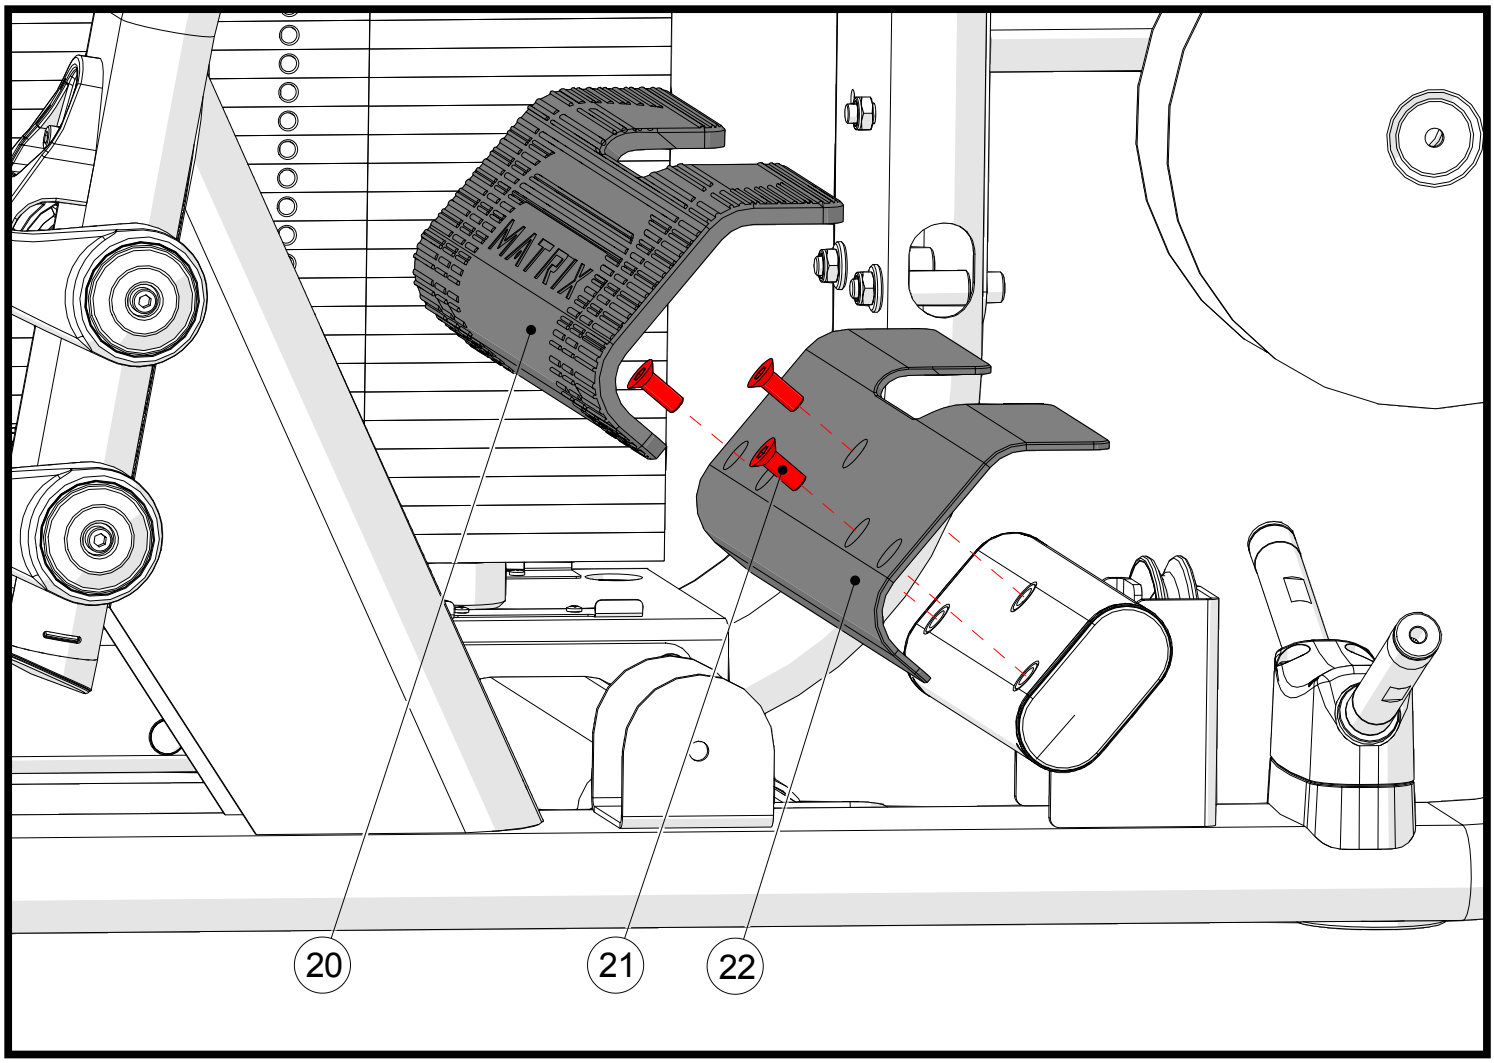


Torque to: 56 N-m/41 ft/lbs.

STEP 1 | CAM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
3	M10 Flat Washer	1
5	M10 Nylock Nut	1
23	CAM	1
24	Large Pivot Cap	1
25	M10 X 105L SHC	1

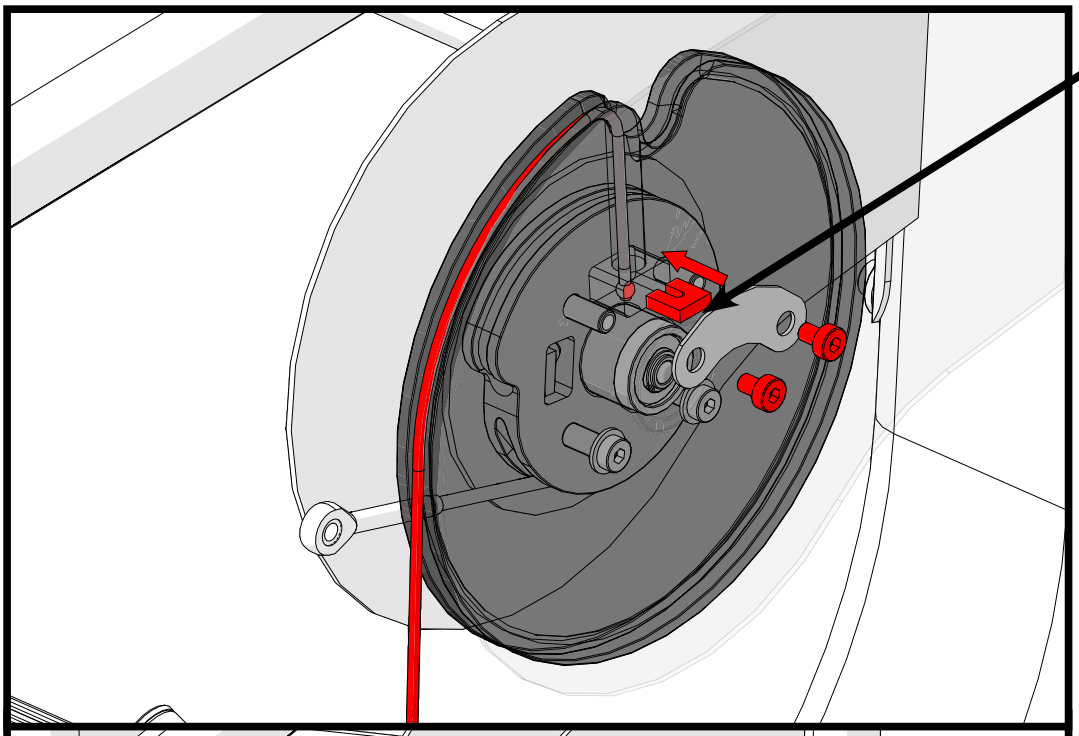


Separate CAM to assemble weight stack cable as shown. Capture cable with forked clip and orient as shown. Tighten to 16 N-m/142 in-lbs.

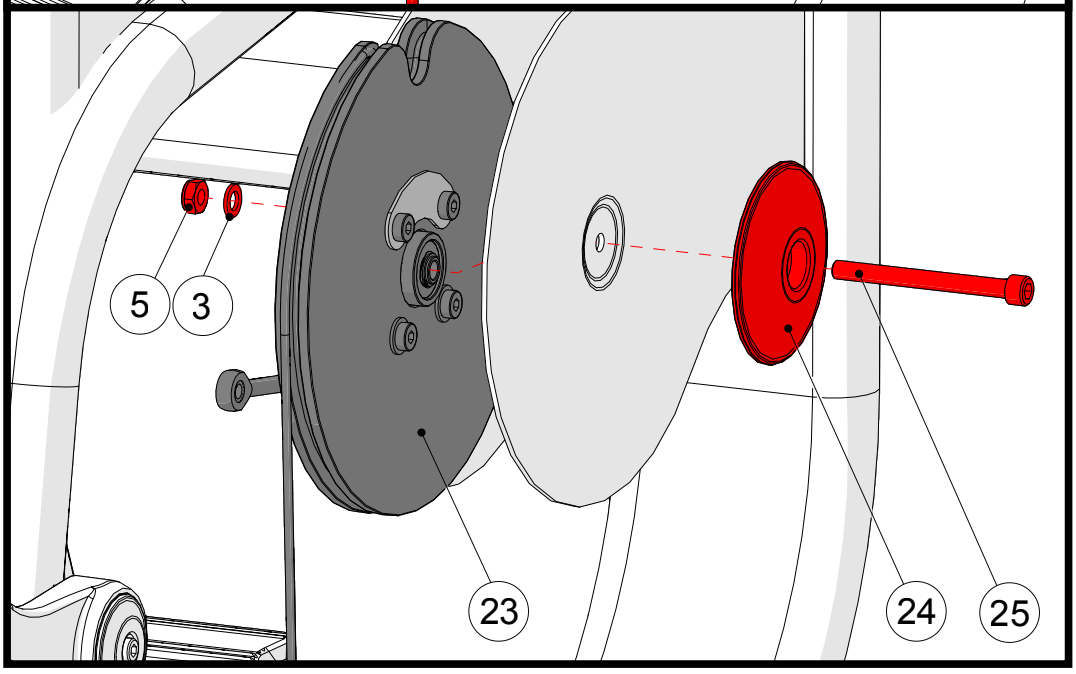

Assemble CAM as shown, locating the smaller CAM towards the weight stack. Tighten to 77 N-m/57 ft-lbs.

STEP 1 | SWINGARM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
3	M10 Flat Washer	1
5	M10 Nylock Nut	1
25	M10 X 105L SHC	1
26	Swingarm	1
27	M6 Nylock nut	1
28	M6 Shoulder Bolt	1
29	Small Pivot Cap	1

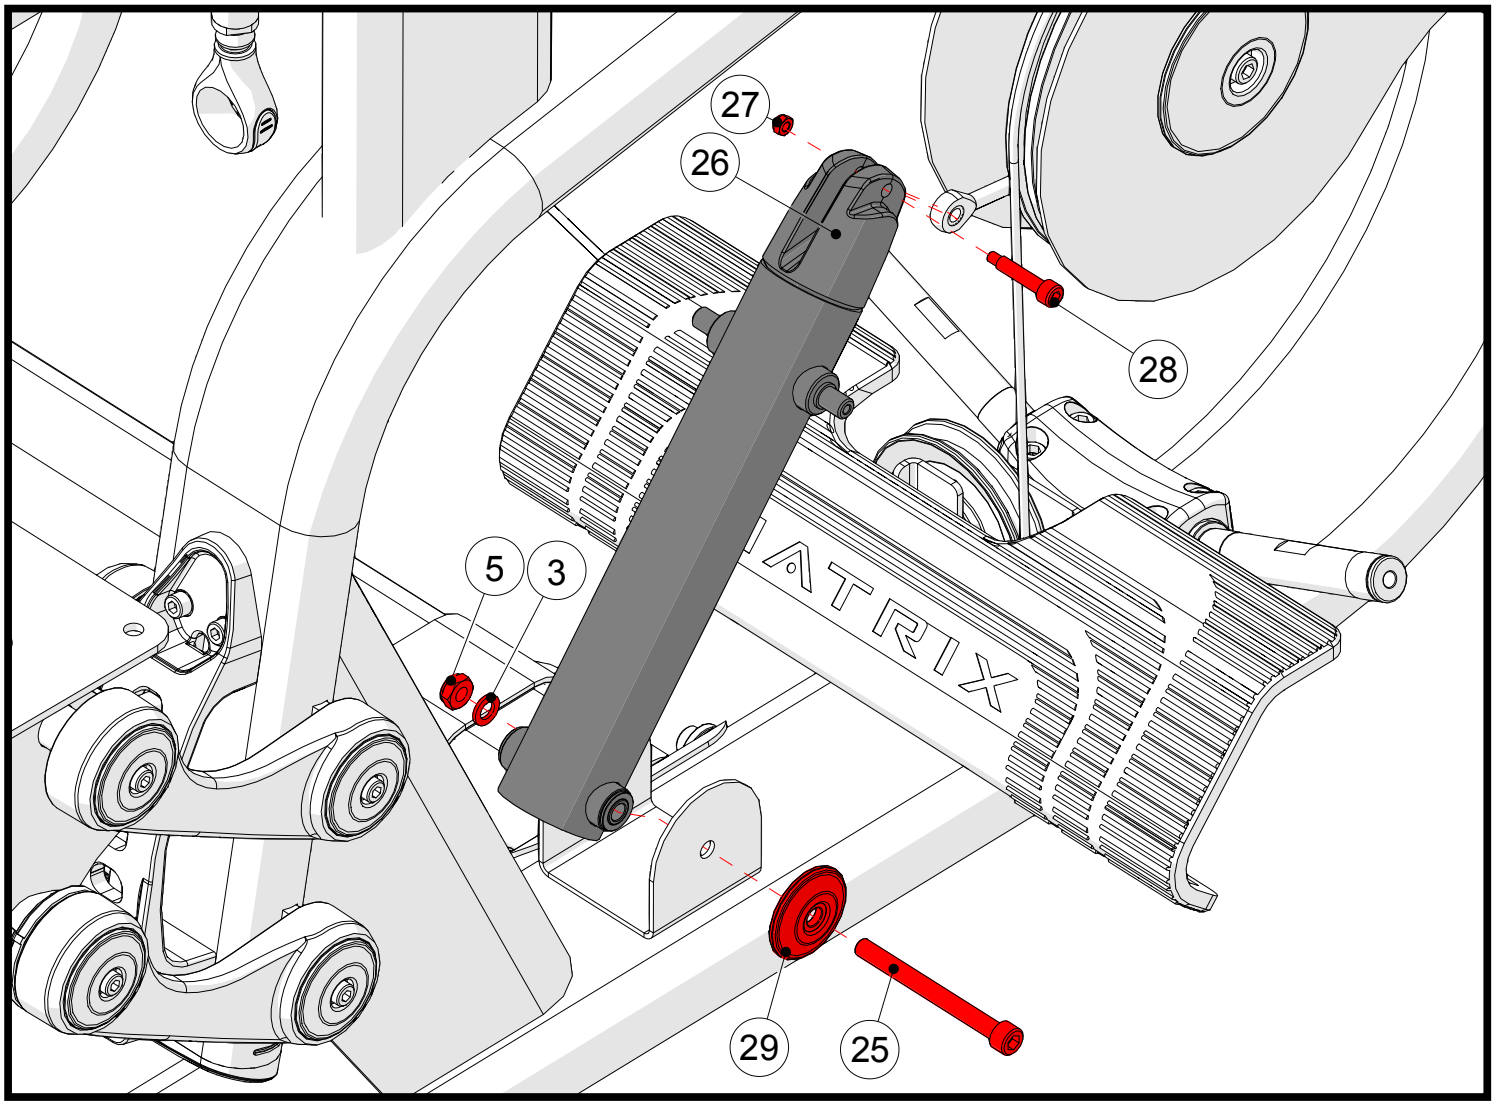

Assemble cable into swingarm and tighten M6 to 16 N-m/142 in-lbs.
Tighten M10 to 77 N-m/57 ft-lbs.

STEP 2 | TIE ROD TO SWINGARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
30	Tie Rod (Left Side Not Shown)	2
31	M6 Flat Washer (Left Side Not Shown)	2
32	M6 X 12L SHC (Left Side Not Shown)	2

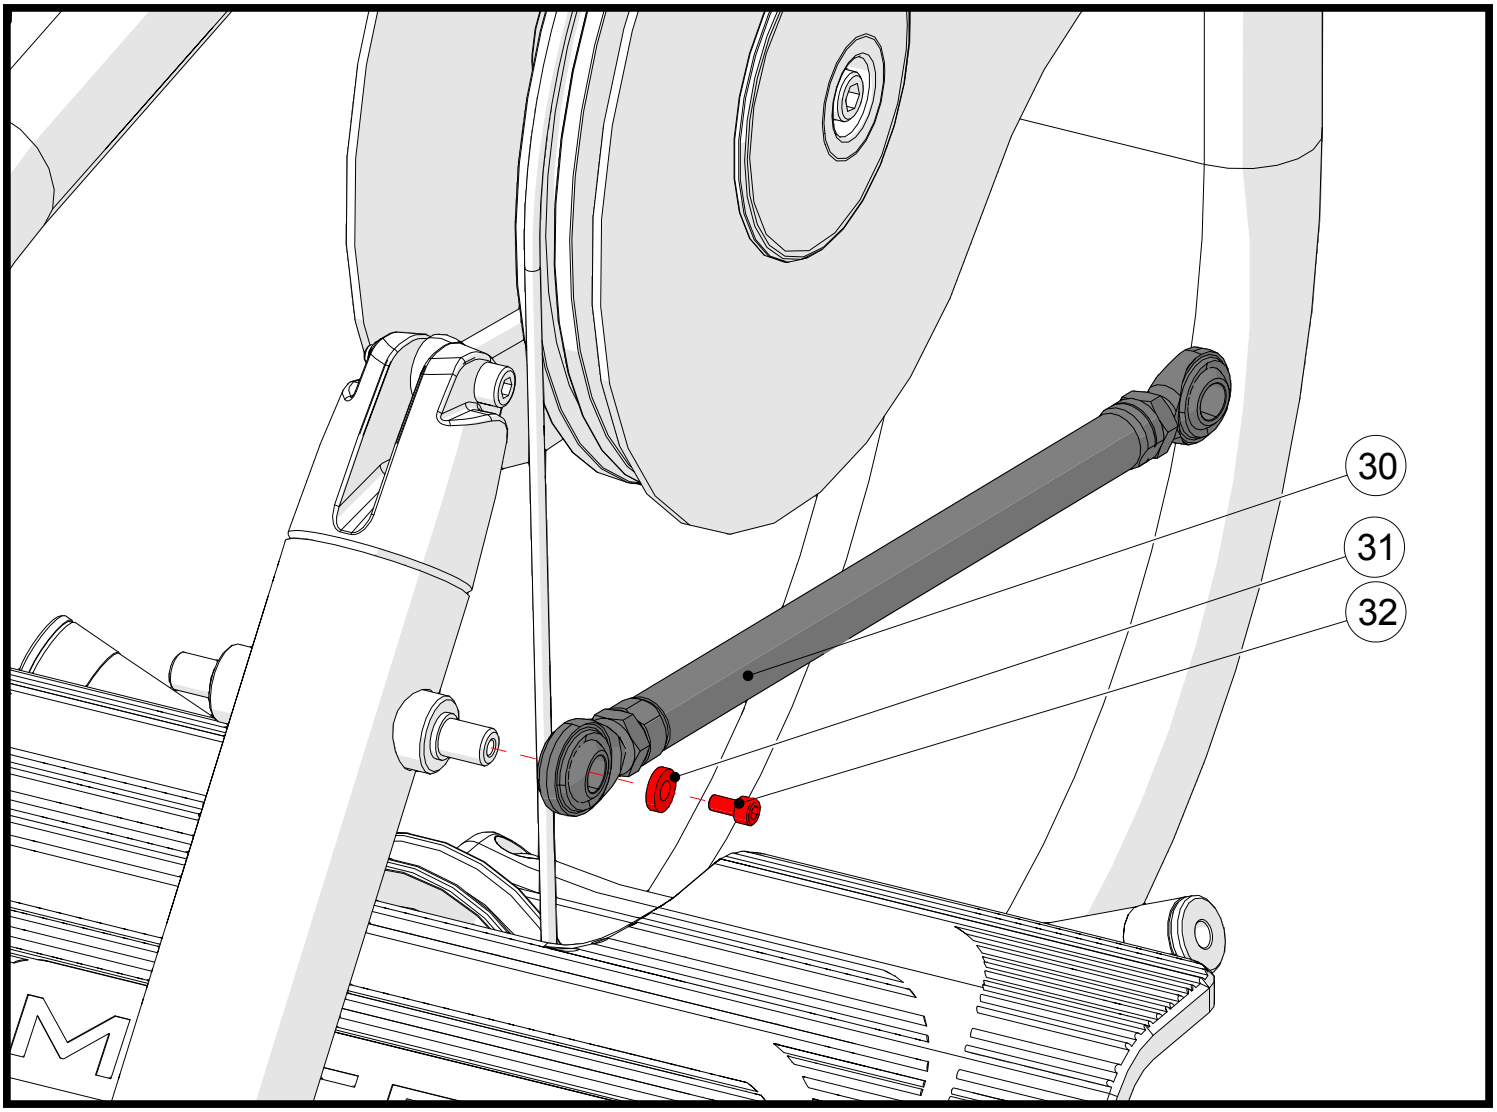


Torque to 16 N-m/142 in-lbs.

STEP 3 | LEFT AND RIGHT* LOWER ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
29	Small Pivot Cap*	2
33	Wave (Spring) Washer*	2
34	Right Lower Arm	1
35	Snap Ring*	2
36	Left Lower Arm*	1
37	M10 X15L SHC*	2


*Only right arm is shown

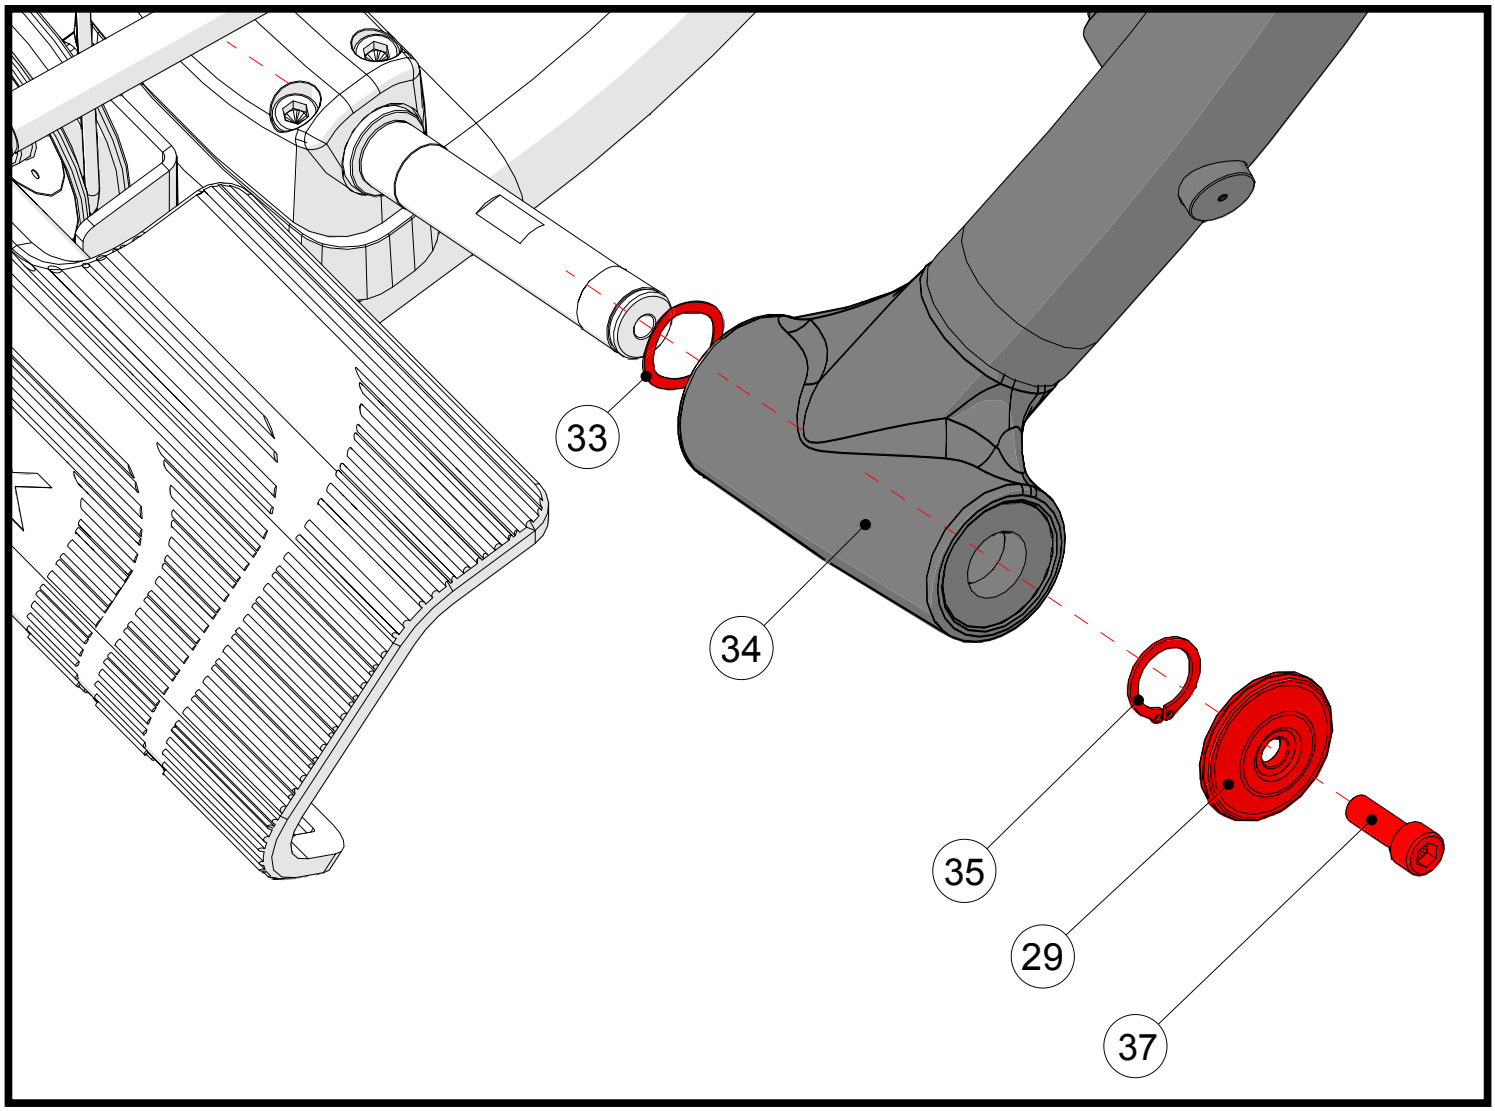

Apply blue Loctite 242 and tighten to 77 N-m/57 ft-lbs.

STEP 4 | TIE ROD TO ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
31	M6 Flat Washer (Left Side Not Shown)	2
32	M6 X 12L SHC (Left Side Not Shown)	2

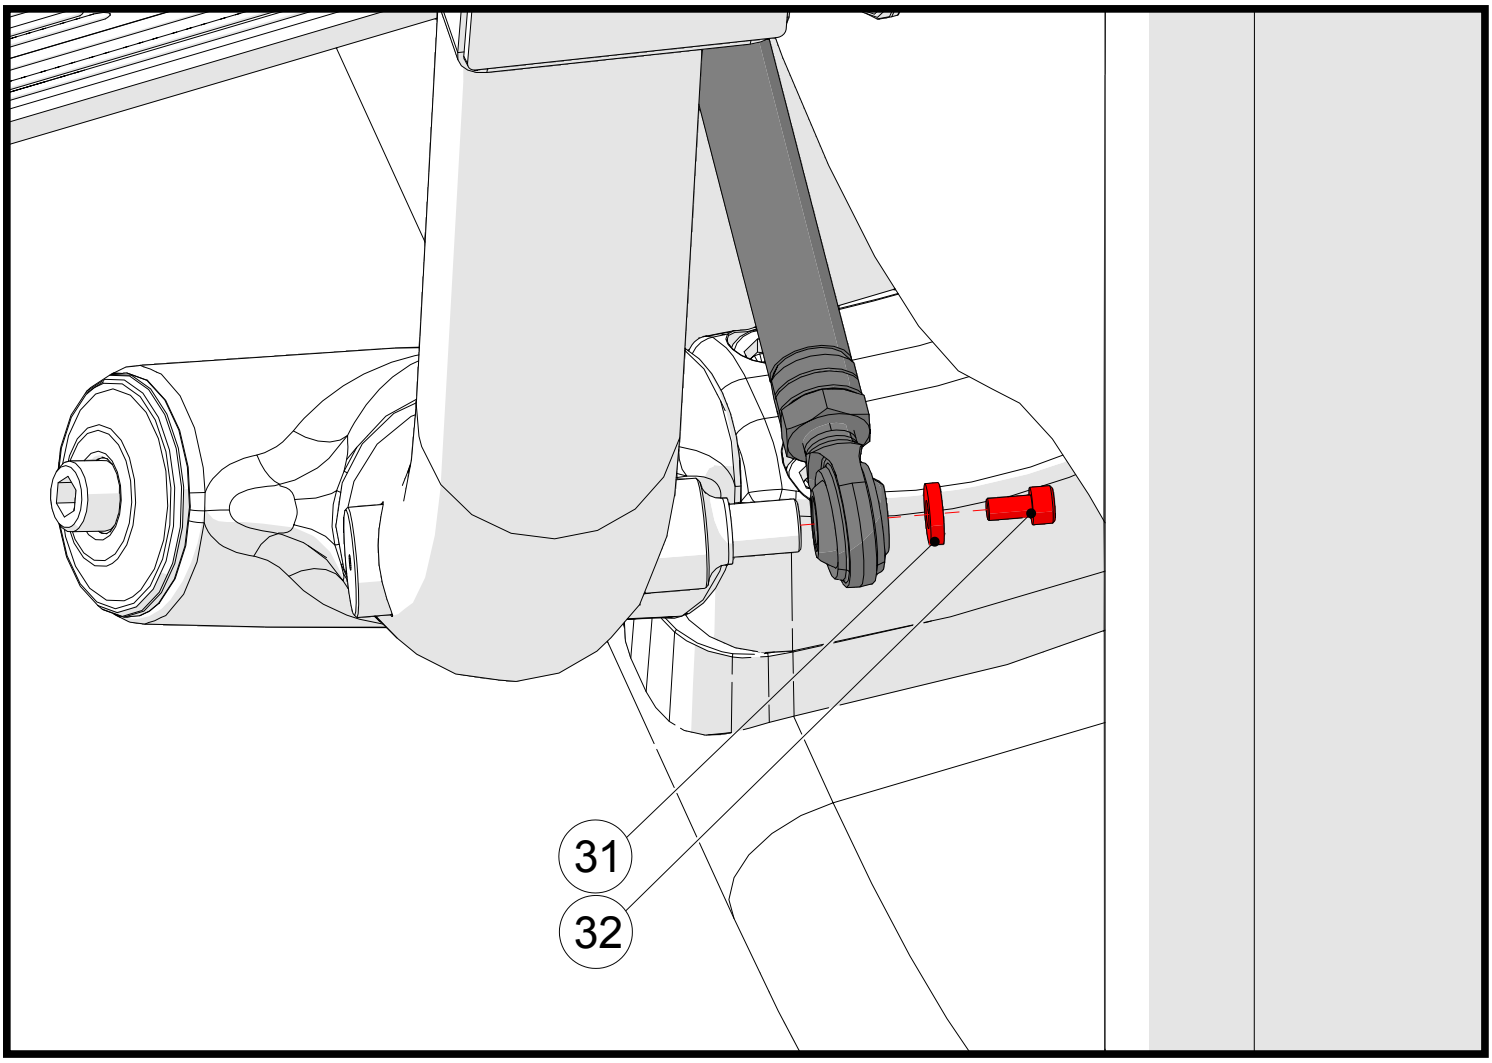


Torque to 16 N-m/142 in-lbs.

STEP 5 | LEFT AND RIGHT* UPPER ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
3	M10 Flat Washer*	4
5	M10 Nylock Nut*	2
38	Left Upper Arm	1
39	Right Upper Arm (Not shown)	1
40	M10 X 95L SHC*	2

*Only left arm is shown

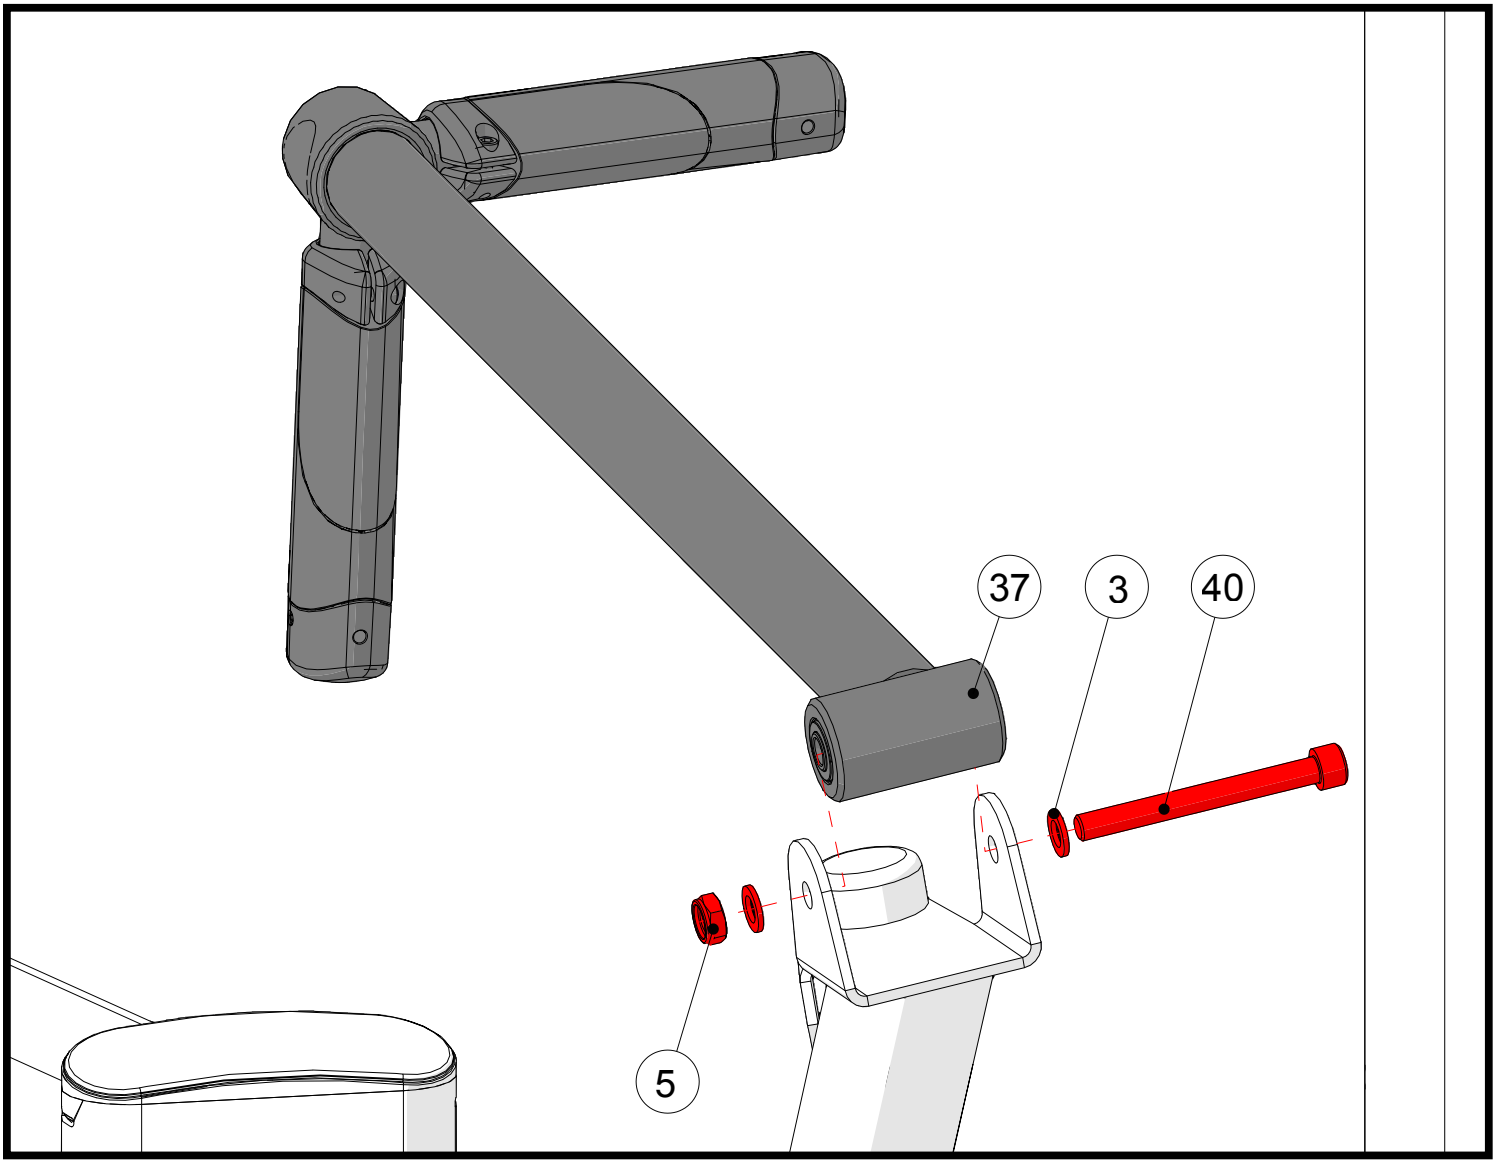


Tighten to 77 N-m/57 ft-lbs.

STEP 6 | ARM POSITIONING INSTRUCTIONS & NOTES

Before fully tightening the pivot block, ensure that the arms are symmetrical about the centerline of the machine. The left and right hand grips should be centered to the user.

Tighten four bolts of pivot block, and then back out one bolt to apply red Loctite 272, replace bolt to proper torque. Repeat steps for three remaining bollts

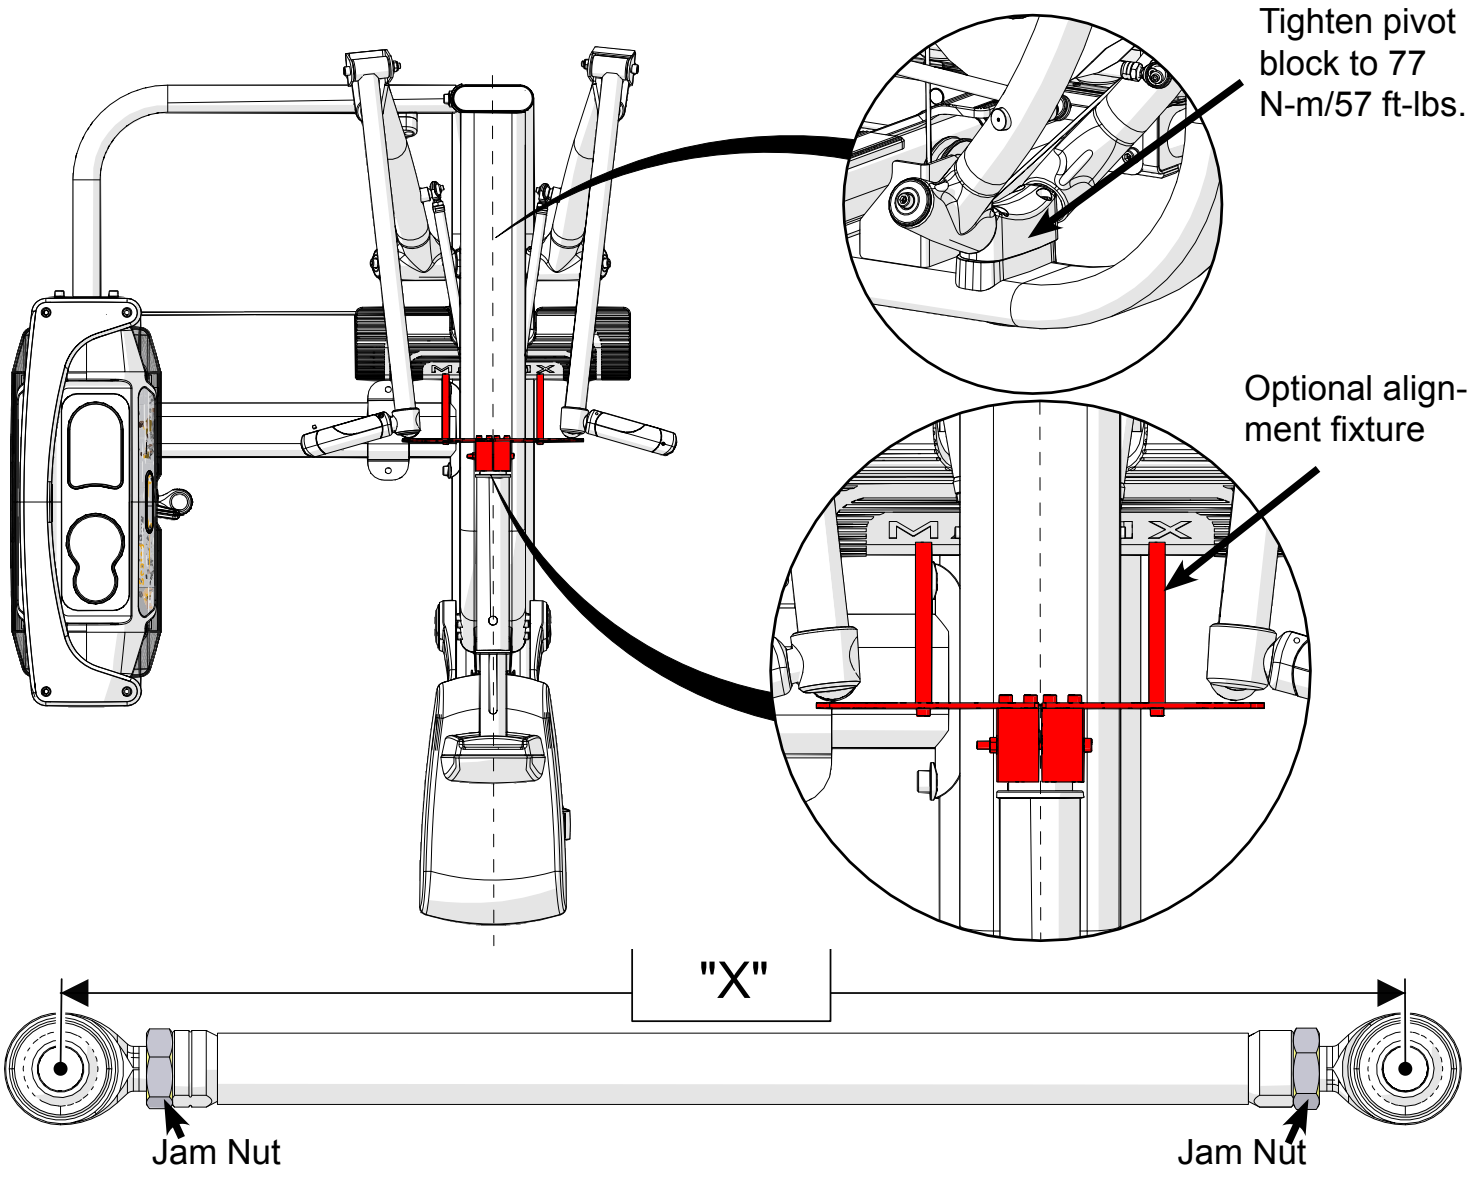


To adjust length: loosen jam nuts, turn center rod, tighten jam nuts

Machine	Tie Rod Length (“X”)
Chest Press	722.5 mm (28.4”)
Shoulder Press	360.0 mm (14.2”)
Lat Pulldown	555.0 mm (21.9”)
Seated Row	350.0 mm (13.8”)

Tie Rod lengths must be adjusted according to machine.

STEP 1 | THIGH PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
41	Chest Pad Assembly	1
42	M10 X 25L BHC	4

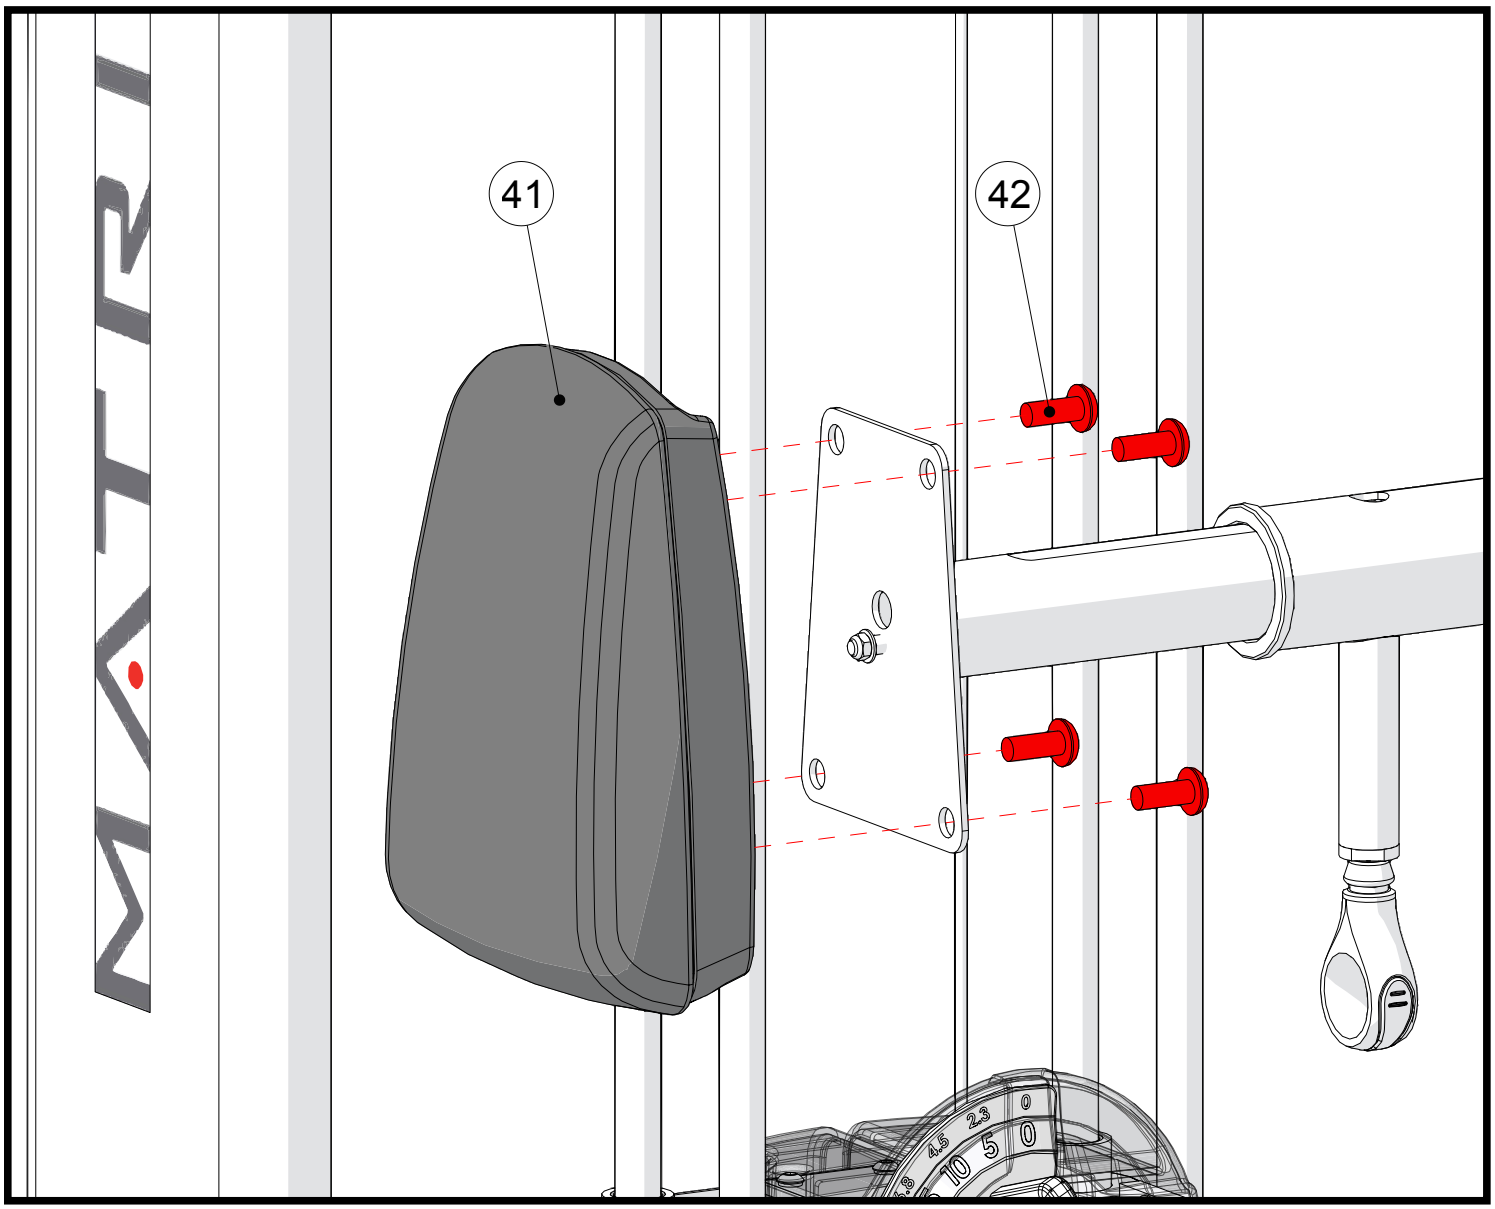

Install the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 2 | BOTTOM PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
43	Pad	1
44	M10 X 25L Hex Bolt	4

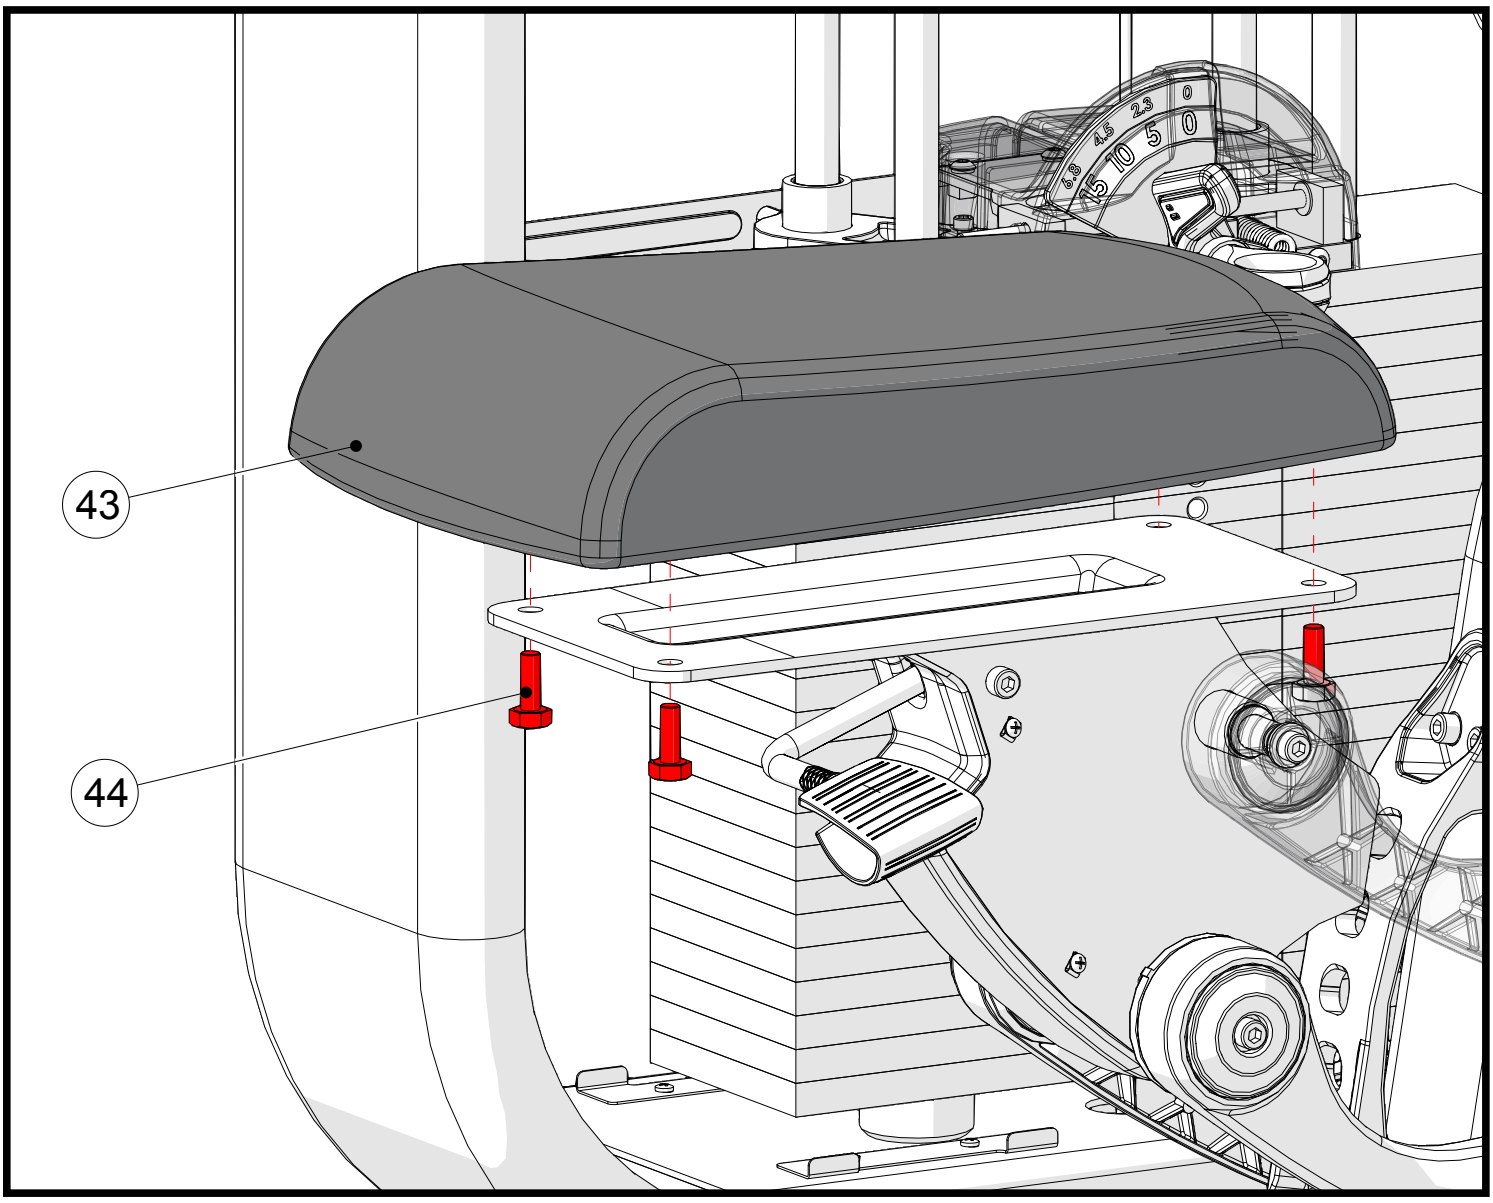

Install the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 1 | SHROUD ASSEMBLY ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANITY
45	Left Front Shroud	1
46	Rear Shroud	1
47	Right Front Shroud	1

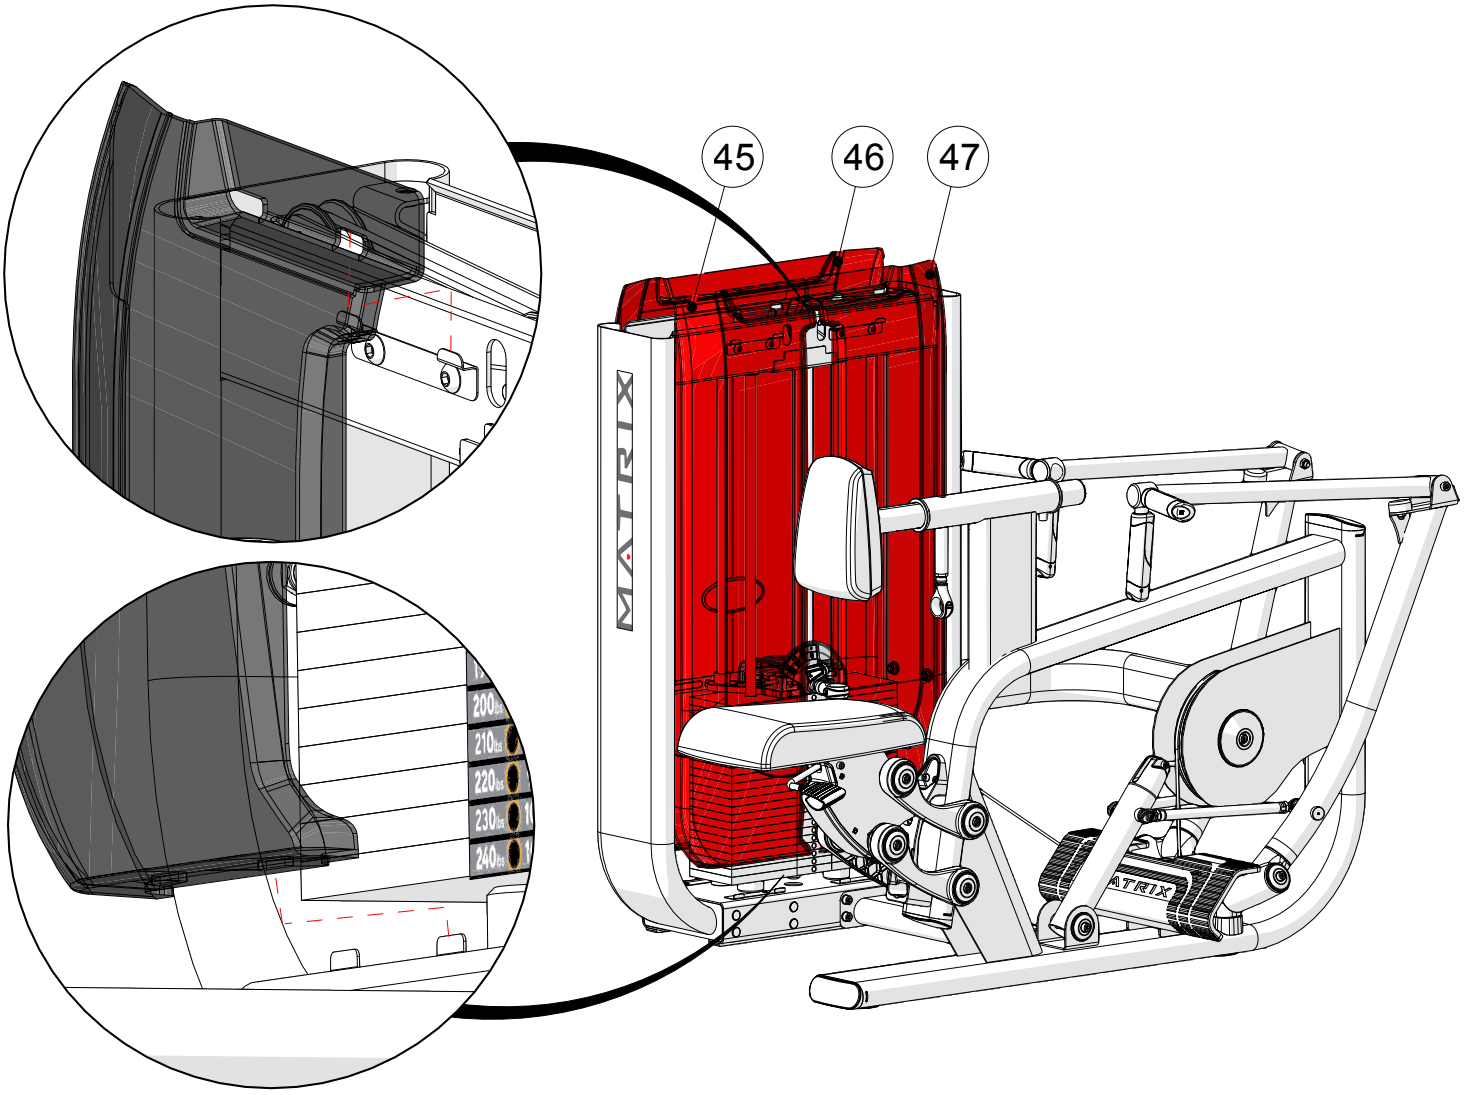

Install the weight stack shrouds as shown.

STEP 2 | TOP CAP ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANITY
48	M8 X 60L SHC	4
49	Top Cap	1

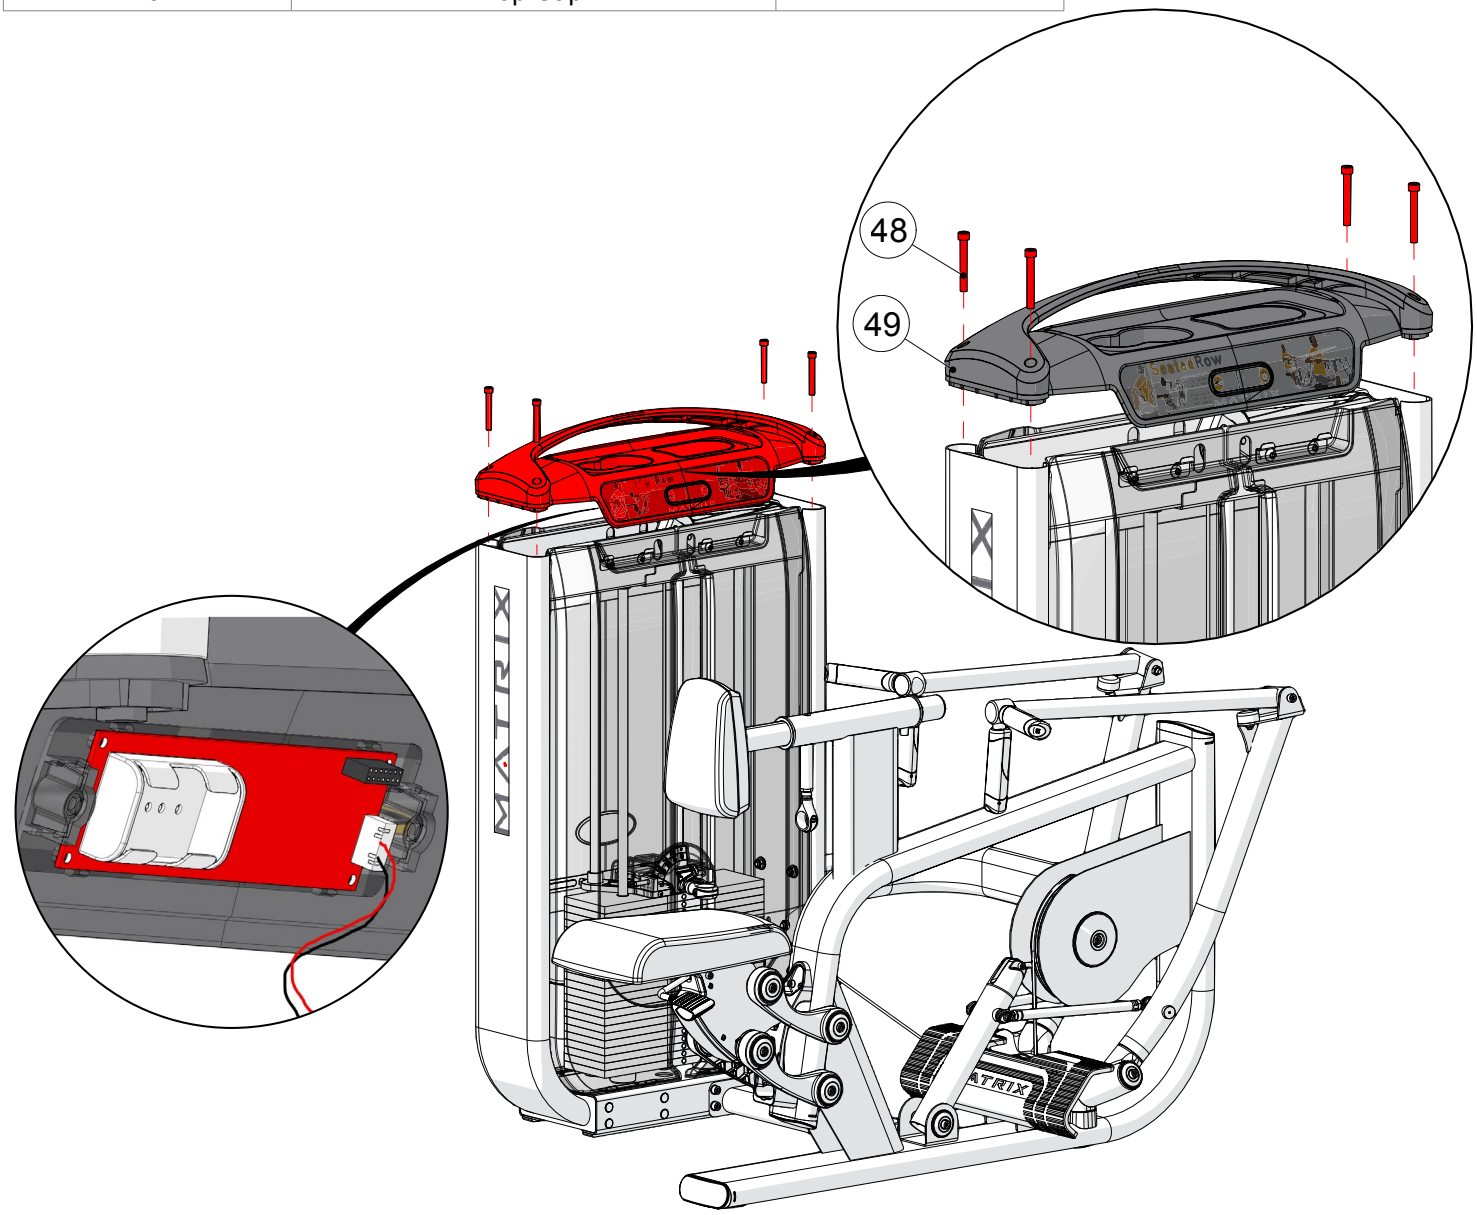


Install the top cap and connect rep counter plug as shown.

Torque to 17 N-m/147 in-lbs.

Position top cap so Rep Counter faces the user.

MATRIX® | IMPORTANT NOTICE

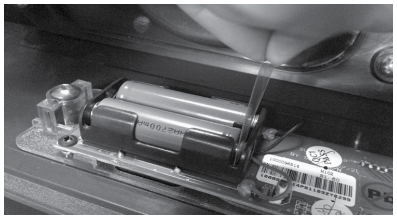

PLEASE NOTE:

Be sure to remove the insulating sheet when installing the Rep Counter.

MATRIX

Strong • Smart • Beautiful

Matrix Fitness
1600 Landmark Drive
Cottage Grove WI 53527

matrixfitness.com
Toll-free 866.693.4863
Facsimilie 608.839.8687

ULTRA Seated Row Owners Guide rev.1.2 Copyright© 2014 Matrix Fitness