NAUTILUS®

# CORE HEALTH & FITNESS

## LEVERAGE BICEP CURL

# OWNER'S MANUAL



# IMPORTANT SAFETY INSTRUCTIONS

**WARNING!**

Before using this product, it is essential to read the ENTIRE Owner's Manual and ALL installation instructions. The Owner's Manual describes equipment operation and instructs members on how to use correctly and safely.

Read all warnings posted on the machine.

Health related injuries may result from incorrect or excessive use of exercise equipment. Core Health & Fitness strongly recommends you to encourage your members to discuss their health program or fitness regimen with a health care professional, especially if you or they have not exercised for several years, are over 35, or have known health conditions.

**WARNING:** to reduce the risk of serious injury to persons using this equipment, read and follow all of these warnings:

1. Assemble and operate the machine on a solid level surface. Position the machine with a minimum of 24 inches (0.6 meters) of clearance on at least one side to allow for ease of mounting and dismounting. Allow for 24 inches (0.6 meters) of clearance behind the machine (See Fig. 1). These dimensions are the recommended minimum distances.

   The actual area for access and passage shall be the responsibility of the facility and should take into account this training envelope, Americans with Disabilities Act Accessibility Guidelines (ADAAG) requirements and any required local codes or regulations (www.access-board.gov/ada).
2. Do not exceed the maximum allowable weight limit of:
   - 350 lbs. / 160 kg.
3. Load plates evenly and carefully to avoid tipping equipment and possible crushing injuries. DO NOT exceed 230 lbs. (104.5 kgs) per side of loaded weight.
4. Never exceed the load rating for any plate loaded station, body weight station, bench or other free weight device, including specific weight rod and band peg limits
5. Only add weight plates up to the load limits of the unit. Make sure all weight plates are completely placed on the weight rod.
6. Use only Olympic style weight plates (2.0" Bore) for training weight. Do not use dumbbells or any means other than those stated to increase weight resistance.
7. Always utilize weight plate retention devices such as clamps or pins.
8. Never exceed the load rating for any plate loaded station, body weight station, bench or other free weight device, including specific weight rod and band peg limits
9. Never use dumbbells or other means to incrementally increase the weight resistance. Use only those means provided by Core Heath & Fitness.
10. Ensure all adjustment and locking features are properly secured before using the equipment.
11. Care should be used when mounting or dismounting the equipment.
12. Keep top surface of the steps clean and dry. If the steps surface becomes wet, dry the surface before using. Do not use with wet shoes, wet feet, or socks.

    *Gardez la surface supérieure des marches propre et sèche. Si la surface est mouillée, séchez-la avant utilisation. Ne pas utiliser avec des chaussures, des pieds ou des chaussettes mouillés.*
13. When adjusting any seat, knee stabilization pad, range of motion limiter, foothold pad or any other type of adjuster, make certain that the adjusting pin is fully engaged in the hole to avoid injury. If any of the adjustment devices are left projecting, they could interfere with the user's movement.
14. Do not over exert yourself during exercise. Stop exercising if you feel pain or tightness in your chest, become short of breath or feel faint. If you feel pain or experience any abnormal symptoms, stop exercising and consult your health care provider.
15. **WARNING**: Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint stop exercising immediately
16. **WARNING**: Risk of personal injury – Keep children under the age of 13 away from machine.
17. This machine is not intended to be used by children. It is not intended to be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless given instruction and under the personal supervision concerning use of the machine by a person responsible for their safety. Do not leave children unsupervised around the machine, keep them away from extended foot support (or other similar parts).
18. This equipment is designed for use in a commercial gymnasium or health club only. To ensure the proper use of the equipment in a safe manner, all users of the equipment should read this manual before using the machine. This machine should be made a part of your club training program in order that the equipment is used by your members in a safe manner as intended. In addition to instructing the club members in the proper use of the equipment, the club member should obtain a complete physical examination form their health care provider before beginning any exercise program.
19. This machine is for indoor use only.
20. The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.
21. Use only replacement components supplied by Core Heath & Fitness. Substitutes are forbidden and will void all warranties.
22. It is the purchaser's sole responsibility to properly instruct its end users and supervising personnel as to the proper operating procedures of all equipment.
23. All facilities in which Core Health & Fitness or any installer installs any Core Health & Fitness equipment assume all risks associated with the surfaces to which such equipment is fastened, anchored, or installed, including risk that the installation is not proper owing to that structure.

## SAVE THESE INSTRUCTIONS


This page shows the location of the warning labels and communication stickers placed on the equipment as part of the manufacturing process. It is critical that owners maintain the integrity and placement of these stickers. If you find any stickers missing or damaged the replacement numbers are shown on the support site and in Fig. 1 above. See Support and Service to order replacements.

**Note:** Sticker/Label images are not to scale.

| | |
|---|---|
| **731-0510** | STICKER, SEAT ADJ, 1-9 |
| **731-0512** | STICKER, CAUTION, PINCH POINT ICON |
| **731-0517** | STICKER, WARNING, BOLT DOWN |
| **731-0660** | STICKER,AXIS/ROTATION,END CAP |
| **731-2755** | LOGO, LEVERAGE |
| **731-7311** | STICKER, NLS, DECO, 45MMX191MM |
| **731-7320** | PLACARD, BICEP CURL, LEVERAGE 2 |
| **731-7322** | STICKER, NAUTILUS, 70MM |



731-0510

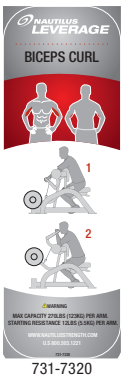

731-7320


731-0512



731-0517

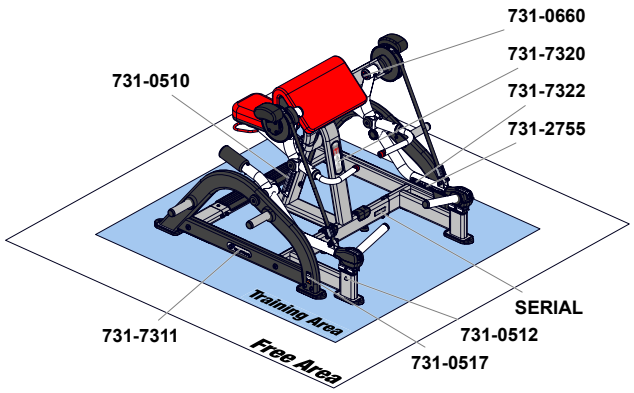



Fig. 1 Required Clearance & Label Locations

## Product Details

| Product SKU | Name | |
|---|---|---|
| **NP3-L5002** | **Leverage Bicep Curl** | |
| **Weight:** | 470 lbs 217 kg | |
| **Dimensions:** | 60 x 62 x 43 | in |
| | 154 x 157 x 111 | cm |

## Maintenance

Working on this product will require basic and/or sometimes specialty tools based on the type of service that will be performed at any time. To assist, we recommend having the tools listed available when performing maintenance.

- Metric Allen Key Set
- Torque Wrench
- Metric Open-Ended Wrench Set
- Large Adjustable Crescent Wrench
- Metric Socket Set

**MAINTAIN ALL EQUIPMENT:** Preventative maintenance is the key to smooth operating equipment as well as keeping the product in safe operating condition. Failure to conduct preventative maintenance by the owner may cause the product to operate in an unsafe manner. Equipment needs to be inspected and maintained at regular intervals per the preventative maintenance schedule provided in this manual.

**Cleaning**

Keeping your Strength units clean is an important component of preventative maintenance and the overall aesthetics of your product. While your clients will appreciate clean equipment free of sweat, dirt and other contaminants proper care and cleaning will extend the life of your product and reduce premature aging and wear. See the maintenance schedule for recommended frequency. Cleaners/ Disinfectants should be used at manufacturer recommended dilutions and never in concentrated form.

**Inspection**

Visual inspection of your units will insure a safe environment for your clients and alert you to any issues that may require maintenance prior to equipment failure. Proper, timely visual inspection is a critical component to the long term care of your product.

- Fasteners, hardware and attachments should be checked monthly for looseness. Tighten as required using appropriate tools.
- Handgrips should be checked for wear or damage monthly and replaced as needed.
- Main frame should be inspected every six months for signs of unusual wear, corrosion or structural integrity issues.

## SAVE THESE INSTRUCTIONS

## MAINTENANCE SCHEDULE

With durable, high performance components, this equipment is designed for heavy usage with minimal maintenance required. To keep it in top condition, perform regular daily, weekly and monthly preventive maintenance routines outlined below.

The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.

| | Daily | Weekly | Monthly | Bi-Annually |
|---|---|---|---|---|
| **Inspect** | | | | |
| Fasteners | | | X | |
| Handgrips | | | X | |
| Labels | | | X | |
| Main Frame | | | | X |
| **Cleaning** | | | | |
| Main Frame | | X | | |

Table 1



731-2755



731-7311



731-7322


731-0660



CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer

# ASSEMBLY

**REQUIRED TOOLS**

- Metric Allen Key Set
- Metric Open-Ended Wrench Set
- Large Adjustable Crescent Wrench




**PACKAGING REMOVAL:**

Carefully remove all packaging materials that wrap the equipment. If parts are missing see **Support & Service**

**DO NOT USE A KNIFE OR BOX CUTTER AS YOU MAY DAMAGE THE EQUIPMENT.**

Before beginning to assemble the product, remove any sub-components from the pallet and set aside for later assembly. Once all packaging has been removed, lay all parts out in a clean open area to prepare for assembly. The list of included parts is in Fig. 2 and Table 2to the right.

Should any component not be present or if you have any operational questions, please refer to **SUPPORT & SERVICE**.

All equipment MUST be secured (bolted and tightened) to a solid, level surface, using all of the anchoring holes provided, to stabilize and eliminate rocking or tipping over. Shim any mounting surface that does not rest thoroughly on the floor using flat washers, DO NOT force the foot to contact the ground with anchors. Fasteners must be a 16mm bolt of grade 12.9 or a 5/8" bolt of grade 8 or better and be installed per the bolt manufacturer's specifications. Due to the wide variety of flooring on which equipment may be anchored or installed and differences in applicable local building codes, Core Health & Fitness is not responsible for any damage to the flooring that may result due to anchoring or installing equipment to the floor and for compliance with local building codes. Only licensed contractors or certified installers should be used to insure proper anchoring, installation, and compliance with local building code.

**After assembly, a complete visual inspection, and test of the features and functions of the assembled unit must be made prior to use.**

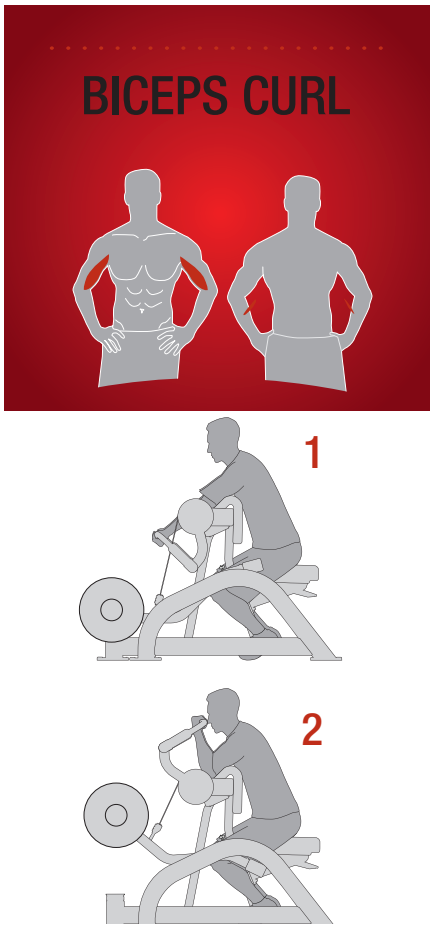



Fig. 3 How to use this machine

## INCLUDED PARTS


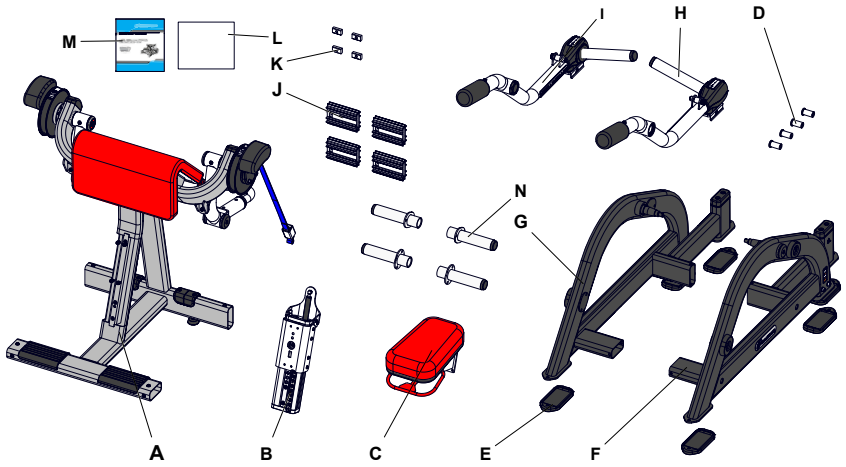



Fig. 2 Included Parts

| # | PN | Description |
|---|---|---|
| A | 731-6625-XX | ASSY,WELD,LEVERAGE,CURL |
| B | IPAC4-05-03-XX | ASSY,SEAT,TROLLEY |
| C | 731-0979-XX | WELD, MOUNT, SEAT, LPD |
| D | 731-8466 | COMPRESSION, LEV, 2 |
| E | 731-2647 | FOOT,LONG,LEVERAGE |
| F | IP3-L5002-03-02 | WELD,L3 WEIGHT FRAME,LEFT,CURL |
| G | IP3-L5002-02-02 | WELD,L3 WEIGHT FRAME,LEFT,CURL |
| H | NP3-L5002-02-XX | ASSY,LEFT ARM,WEIGHTS,L3,L5002 |
| I | NP3-L5002-04-XX | ASSY,RIGHT ARM,WEIGHTS,L3,L5002 |
| J | 731-6617 | SPACER, STIFFENING, LEVERAGE |
| K | 731-6619 | INSERT, THREADED, LEVERAGE |
| L | NP-L5002-HC-01 | HARDWARE CARD, L5002 |
| M | 620-7942 | MANUAL, OWNERS, NP |
| N | 731-5256 | WELD,WEIGHT HORN,SINGLE |

Table 2

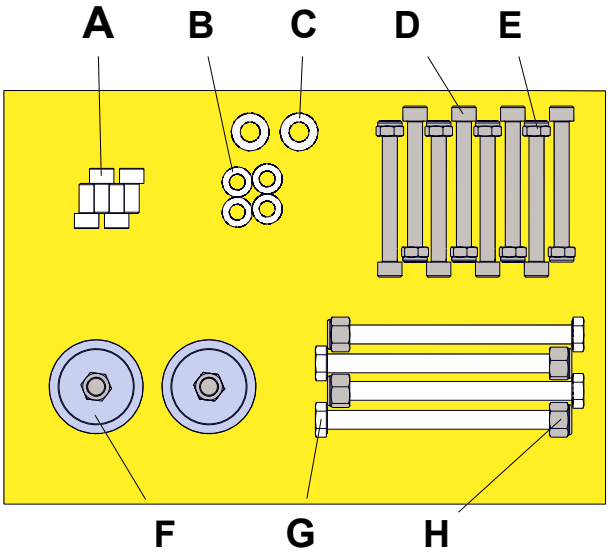


| # | PN | Qty | Description |
|---|---|---|---|
| A | 731-0570 | 4 | SCREW,M8x1.25,16mm,SHC,HK,AS,GR12.9,NKL,FT |
| B | 731-0355 | 18 | WASHER,PLAIN,M8,NARROW |
| C | 731-0367 | 8 | WASHER,PLAIN,M10 |
| D | 731-1450 | 8 | SCREW,M8 X 1.25,75mm,SHC,HK,AS,ZP |
| E | 731-0562 | 8 | NUT,M8 X 1.25,NYLOC |
| F | 731-2447 | 2 | FOOT,ADJ,3/8-16 |
| G | 731-7706 | 4 | SCREW,M10x1.5,130mm,HHC,HE,AS,ZC,GR12.9 |
| H | 731-0363 | 4 | NUT,M10X1.5,NYLOC |

Table 3

## ASSEMBLY PROCEDURE

1. Install the Right Weight Frame (NP3-L5002-01) by sliding it onto the Stiffening Spacers (731-6617) and into the Movement Arm (NP3-L5002-02-XX). (Fig. 4)
2. Torque the M16 Nyloc Nut (731-4894) to 60 ft-lbs (80 Nm). Then, back nut off half turn and torque again to 50 ft-lbs (67 Nm). (Fig. 5)
3. Insert a Cotter Pin (731-6107) through the hole of the Frame Shaft (IP3-L2002-01-05). (Fig. 6)
4. Snap the End Cap (731-7683) onto the Movement Arm (NP3-L5002-02-XX). (Fig. 6)
5. Repeat steps 1 through 4 on the left side.
6. Secure the Weight Frame with four M10 Hex Head Cap Screws (731-7706), eight M10 Washers (120-3301), and four M10 Nyloc Nuts (731-0363). (Fig. 7)
7. Insert two Weight Horns (731-5256) into the Weight Frame (NP3-L5002-01). (Fig. 8)
8. Secure the Weight Horns (731-5256) to the Weight Frame using two M8 Socket Head Cap Screws (731-1450), four M8 Washers (731-0355), and two M8 Nyloc Nuts (731-0365), and one Mount Plate (731-2299-XX). (Fig. 8)
9. Repeat Steps 6 through 8 on the left side.
10. Install two Leveling Feet (731-2447) to the Frame (731-6625-XX) and tighten with two M10 Nuts (UN50112000). (Fig. 9)
11. Align the Seat Weldment (731-0979-XX) with the Trolley Mount (731-0553) and secure with four M8 Socket Head Cap Screws (731-0570) and four M8 Washers (731-0355). (Fig. 10)
12. Assembly is complete.

**After assembly, a complete visual inspection, and test of the features and functions of the assembled unit must be made prior to use.**

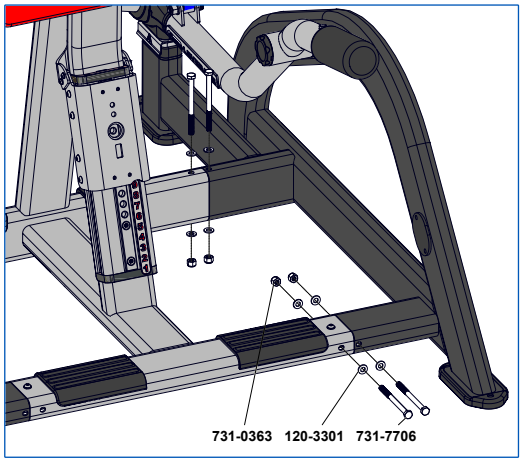



Fig. 7

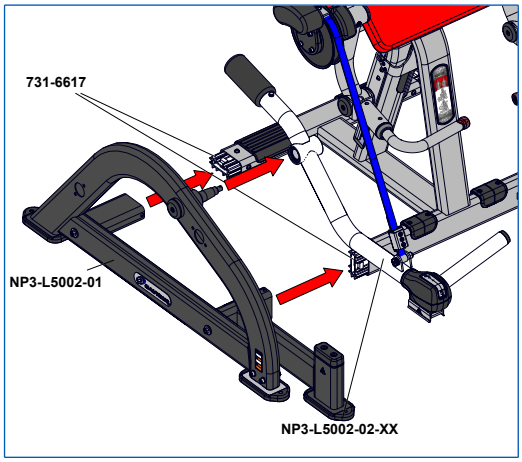



Fig. 4

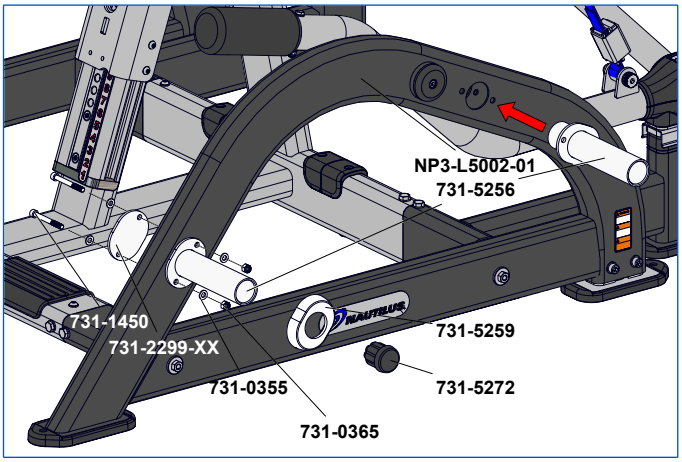



Fig. 8

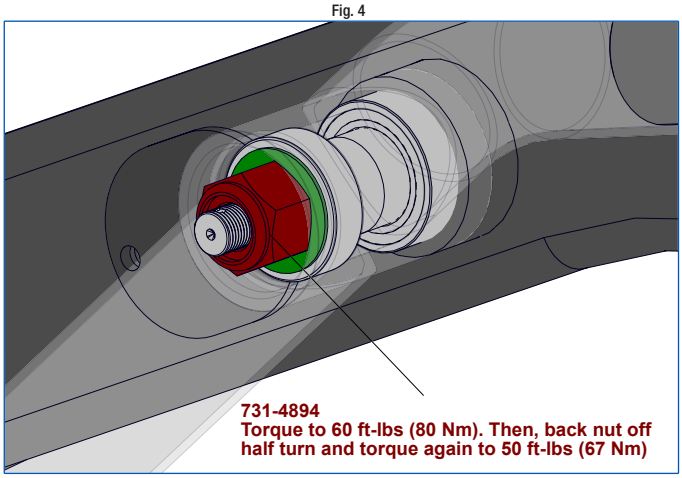



Fig. 5

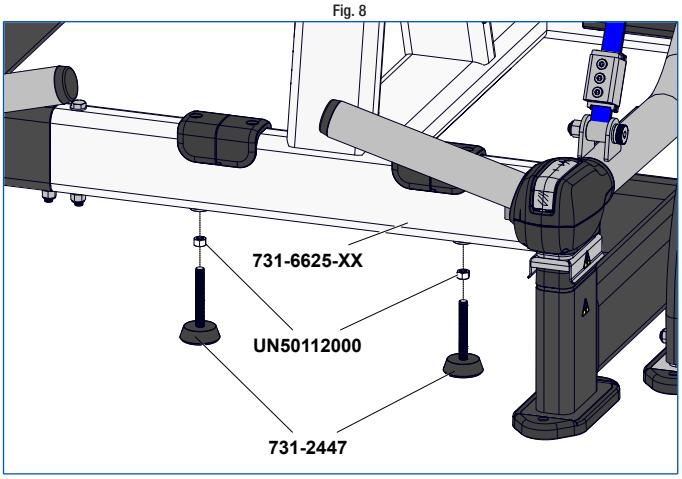



Fig. 9

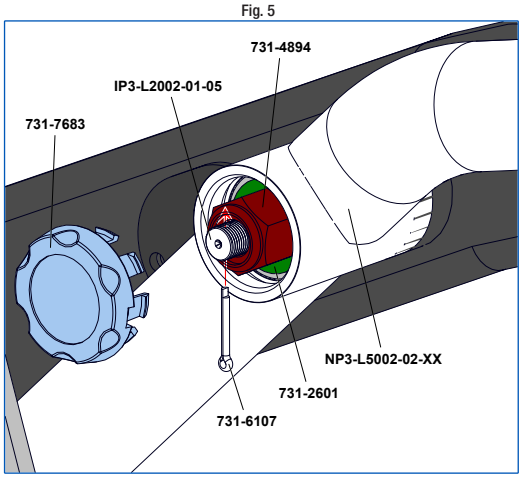



Fig. 6

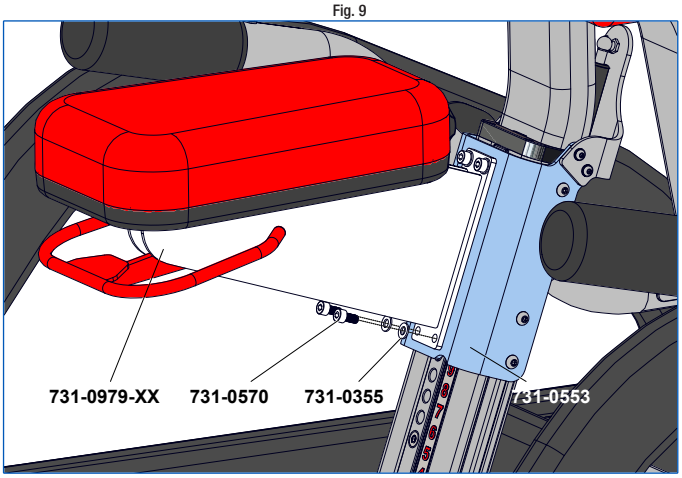



Fig. 10



CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer

# REPLACEMENT PARTS

Replacement parts for this unit are available through SUPPORT & SERVICE. Parts listed are shown on the following pages and interactive drawings available on Core Connect. Listed parts may change, please check Core Connect for latest versions and other SKU's covered by this manual:

## 9NP3-L5002-XXXXX - BICEP CURL

| Part Number | Qty | Description |
|---|---|---|
| 110-3674 | 4 | SCREW, M6x1.0, 20mm, FHM, CS, GR 8.8, BLK E-COAT |
| 110-3899 | 4 | SCREW,M8x1.25,30,HHC,HE,AS,12.9,ZP,FT |
| 110-3922 | 2 | SCREW,M8x1.25,45mm,HHC,HE,AS,GR12.9,NKL,PT |
| 140-3780 | 2 | Heavy-Duty Internal Retaining Rings |
| 300-0155 | 4 | KIT, REPLACEMENT, RIVET NUT, M8, M6, M5 |
| 731-0040 | 2 | STOP, 50X26,RUBBER |
| 731-0073 | 4 | BUSHING,FLANGE,20.2 ID,26 OD |
| 731-0074 | 2 | RACE,8.5 ID,20 OD,24 L |
| 731-0076 | 1 | PULL PIN, SEAT ADJ |
| 731-0077 | 2 | LINKAGE,PULL PIN,SEAT ADJ |
| 731-0119 | 2 | NUT,M12X1.75, NYLOC |
| 731-0137 | 8 | BEARING,52 OD,25 ID,X 15MM |
| 731-0199 | 4 | NUT, M10X1.5, JAM, RH |
| 731-0208 | 8 | MACHINE WASHER 25MM ID |
| 731-0256 | 6 | SCREW,M6,25mm,W,HE,ZP |
| 731-0294 | 6 | Washer, M8, Ø8.6xØ16.6x2.2mm, NY |
| 731-0312 | 2 | CAP, END, 65MM |
| 731-0352 | 4 | SCREW,M6X0.8,10MM,BHC,HK |
| 731-0354 | 2 | SCREW,M8 X 1.25,25MM,HHM,HE |
| 731-0355 | 49 | WASHER,PLAIN,M8,NARROW |
| 731-0357 | 4 | WASHER,PLAIN,M12 |
| 731-0363 | 12 | NUT,M10X1.5,NYLOC |
| 731-0365 | 21 | NUT,M8 X 1.25,NYLOC JAM |
| 731-0372 | 8 | SCREW,M8 X 1.25,85mm,BHC,HE,SS |
| 731-0373 | 5 | WASHER,PLAIN,M6 |
| 731-0379 | 13 | SCREW,M8 X1.25,20mm,SHC,HK |
| 731-0382 | 1 | ROLL PIN,M6 X 20mm |
| 731-0390 | 7 | SCREW,M8 X1.25,20mm,SHC,HK |
| 731-0421 | 4 | SCREW, M8 X 1.25, 30MM, SHC, HK, CS |
| 731-0510 | 1 | STICKER,SEAT ADJ,1-9 |
| 731-0512 | 6 | STICKER,WARNING,PINCH |
| 731-0517 | 1 | STICKER, WARNING, BOLT DOWN |
| 731-0530 | 1 | SPRING,SEAT ADJ,SEAT 1 |
| 731-0570 | 4 | SCREW,M8 X1.25,16mm,SHC,HK |
| 731-0574-XX | 1 | MOUNT,SHOCK,SEAT |
| 731-0577 | 1 | ASSY,SHOCK,SEAT SLED,30LBS |
| 731-0628 | 1 | WELD,HANDLE,SEAT,ROW |
| 731-0634 | 1 | LINKAGE, SEAT ADJ, ROW |
| 731-0635-00XX | 1 | ASSY, SEAT BOTTOM, ROW |
| 731-0660 | 2 | STICKER,AXIS/ROTATION,END CAP |
| 731-0867 | 1 | SHROUD, SEAT BOTTOM, VERT. ROW |
| 731-0977 | 1 | ASSY,HANDLE,SEAT,ROW |
| 731-0979-XX | 1 | WELD, MOUNT, SEAT, LPD |
| 731-1030 | 3 | PIN, SPLIT, 2MM X 12 |
| 731-1044-KT | 2 | KIT, COVER PROTECTIVE |
| 731-1098 | 2 | ENDCAP, 110 X 50, ROUND |
| 731-1265 | 6 | CAP,END,65MM,NO GROOVE |
| 731-1363 | 2 | NUT, M6X1.0, NYLOC |
| 731-1373 | 1 | BUMPER,STOP,WGT |
| 731-1450 | 8 | SCREW, M8X1.25, 75MM, SHC, HK, AS, ZP |
| 731-1536-KT | 2 | ASSY, HOOK, WEIGHT, BOTTOM CAP |
| 731-1713 | 3 | PIN,CLEVIS,M6 X 22,15.9UL |
| 731-1720 | 2 | SCREW,M8 X 45,SHS,HK,CS,NI |
| 731-2130-00XX | 1 | ASSY,TRI PAD,BENCH |
| 731-2155-KT | 2 | KIT, ASSY HOOK, WEIGHT, TOP, CAP 2 |
| 731-2299-XX | 4 | PLATE,MOUNT,WGT HOLDER,BLANK |
| 731-2356 | 2 | SCREW,M8x1.25,70,HHC,HE,AS,12.9,ZP,PT |
| 731-2447 | 2 | FOOT,ADJ,3/8-16 |
| 731-2580 | 4 | GB-T70.1 M10X65 |
| 731-2596 | 2 | O-RING, LARGE, LEV, BEARING |
| 731-2606-KT | 2 | KIT, DIE CAST END CAP, L2 |
| 731-2609 | 2 | BASE,HANDLE GRIP,ARMS,L2 |
| 731-2640-XX | 2 | WELD, FOOT, FREDOM RACK, RH, CUSTOM |
| 731-2647 | 6 | FOOT,LONG,LEVERAGE |
| 731-2755 | 2 | LEVERAGE LOGO |
| 731-2756 | 2 | DBL STICK TAPE,LEVERAGE,LOGO |
| 731-2762 | 2 | RUBBER BUMPER |
| 731-2858-KT | 1 | COVER,WEIGHT ARM,LEV,LEFT |
| 731-2867-KT | 1 | COVER,WEIGHT ARM,LEV,RIGHT |
| 731-2967 | 2 | BELT,PIVOT,MOUNT |
| 731-2968 | 2 | SCREW, M16X45, SHS, HK, CS, NP |
| 731-2976 | 2 | C-BALANCE, BICEPS, LEV |
| 731-2983 | 1 | LEVERAGE CURL,TRI PAD,TRIM PLATE |
| 731-2984 | 2 | SHAFT, Ø20mm X 87mm, D CUT |
| 731-2985 | 4 | CAM,GUIDE PLATE, SMALL |
| 731-2988 | 2 | BELT,BLOCK |
| 731-2989 | 2 | CLAMP,CAM,BELT |
| 731-3391 | 2 | HOUSING, BELT CLAMP |
| 731-3392 | 2 | PLATE,THREADED,BELT CLAMP |

| Part Number | Qty | Description |
|---|---|---|
| 731-3850 | 2 | PLATE,CAM,REINFORCEMENT |
| 731-3872 | 2 | COUNTERWEIGHT, BICEPS |
| 731-5256 | 4 | WELD,WEIGHT HORN,SINGLE |
| 731-5259 | 6 | BUMPER,STOP,WGT |
| 731-5272 | 6 | CAP,PLUG,WEIGHT HORN,BLANK |
| 731-5600-XX-KT | 2 | KIT, RH, BICEPS ARM, LEV, CUSTOM |
| 731-5601-XX-KT | 2 | KIT, LH, BICEPS ARM, LEV |
| 731-5727 | 4 | RIVET NUT,HEX HEAD,M8 |
| 731-6019 | 2 | SCREW, M8 X 1.25, 50MM, SHC, HK, CS |
| 731-6104 | 2 | Slotted Hex Nut,M16X1.5mm |
| 731-6107 | 2 | PIN, COTTER,3.2mmDIA x 32mm LONG |
| 731-6617 | 4 | SPACER, STIFFENING, LEVERAGE |
| 731-6619 | 4 | INSERT, THREADED, LEVERAGE |
| 731-6629 | 4 | SCREW, 235MM |
| 731-7105 | 4 | WASHER, M8, BELLEVIEW LOCK |
| 731-7108 | 2 | ASSEMBLY, ARM COUPLING, LEVERAGE |
| 731-7111 | 2 | WASHER,M16,NP |
| 731-7311 | 2 | STICKER,NAUTILUS,DECO,45MMX191MM |
| 731-7320 | 1 | PLACARD,BICEP CURL,LEVERAGE 2 |
| 731-7322 | 2 | STICKER,NAUTILUS,70MM |
| 731-7683 | 2 | END CAP, BEARING,SEAL,NAUT. |
| 731-7706 | 8 | SCREW,M10X1.5,130MM,HHC,HE,AS,ZC,GR12.9 |
| 731-7876 | 2 | CAM.CENTER,MOLDED |
| 731-7878 | 2 | LEVERAGE,CAM, SHAFT ASSY |
| 731-7885 | 2 | BELT,LEV,NP-L5002 |
| 731-8466 | 4 | COMPRESSION, LEV, 2 |
| 740-4585 | 2 | BEARING,RADIAL BALL,6205-2RS |
| 2120-3347 | 2 | CLAMP,BELT,BARREL,1"X1.30,KNURLED |
| 2162-0047 | 4 | PLATE,BELT CLAMP |
| 120-3301 | 24 | WASHER, M10X20, 18-8 SS DIN |
| GB-T 276 61907-2Z | 2 | BEARING,DOUBLE ROW,SEALED,35X55X20 |
| GB-T70.1 M12X45 | 2 | SCREW, M12X45MM, SHCS |
| 731-2400 | 2 | SCREW, M10X1.0, 80MM, HHC, HE, CS, BZ |
| IP3-L5002-02-02 | 1 | WELD,L3 WEIGHT FRAME,LEFT,CURL |
| IP3-L5002-03-02 | 1 | WELD,L3 WEIGHT FRAME,LEFT,CURL |
| IPAC4-05-03-XX | 1 | ASSY,SEAT,TROLLEY |
| NP-L5002-HC-01 | 1 | HARDWARE CARD, L5002 |
| NP3-L5002-02-XX | 1 | ASSY,LEFT ARM,WEIGHTS,L3,L5002 |
| NP3-L5002-04-XX | 1 | ASSY,RIGHT ARM,WEIGHTS,L3,L5002 |
| UN50112000 | 2 | NUT, M10, DACROMET |

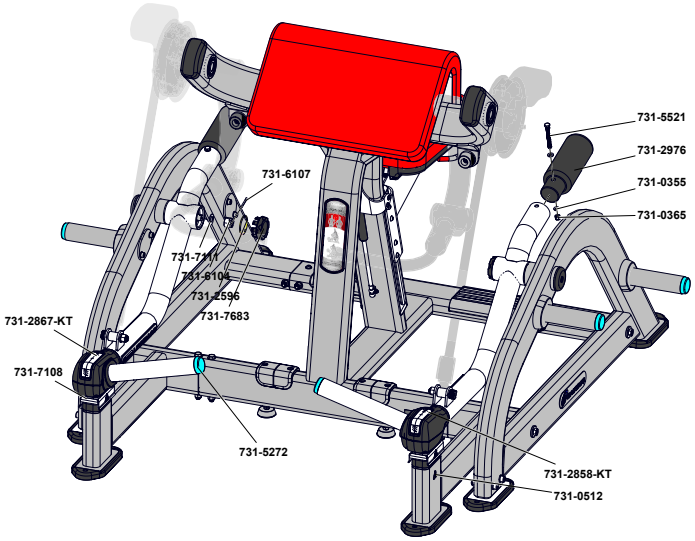



Fig. 11

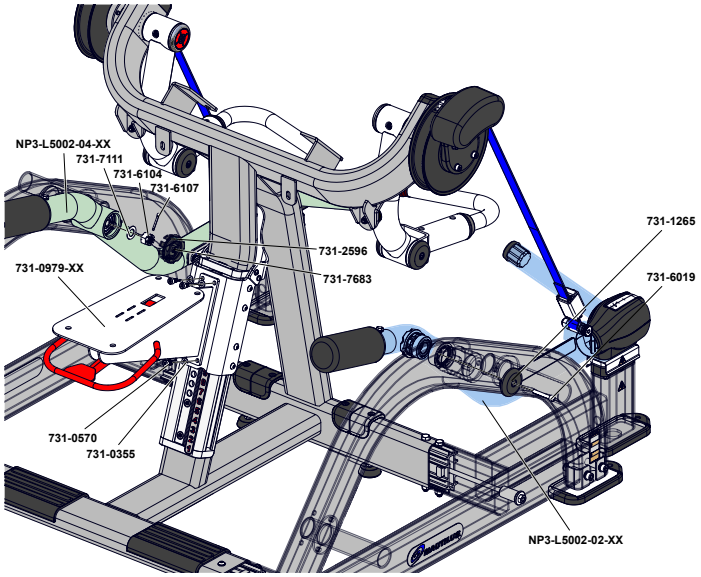



Fig. 12

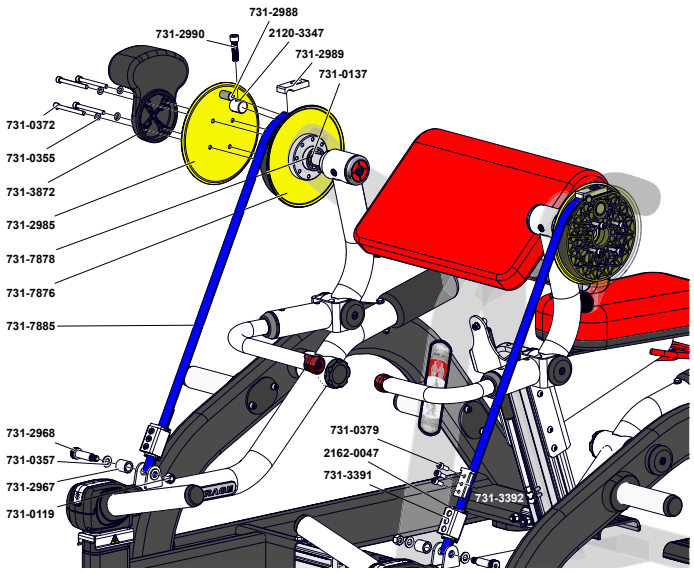



Fig. 13

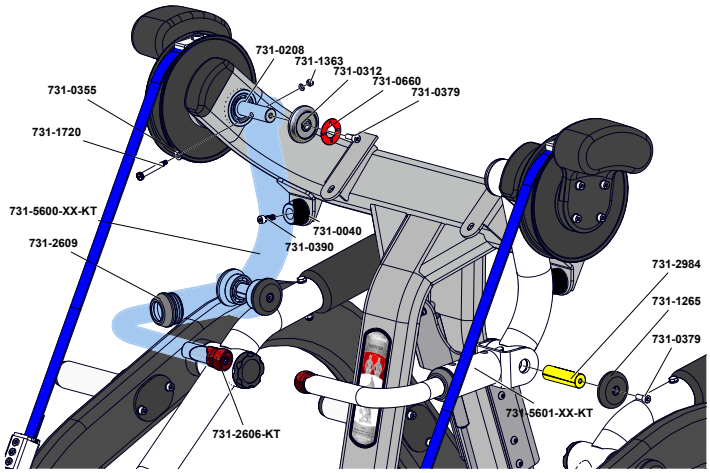



Fig. 14

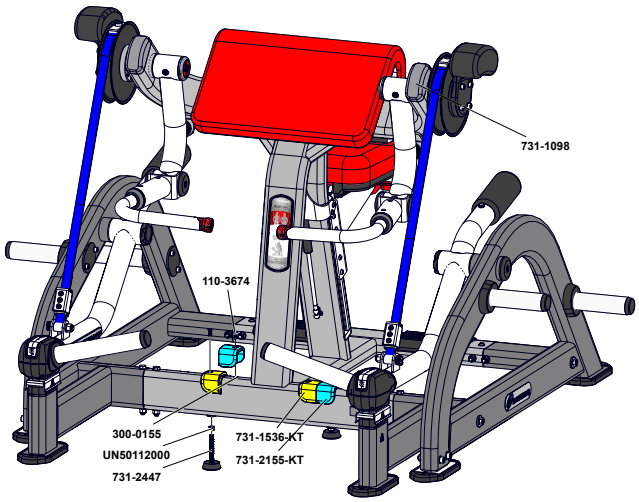



Fig. 15

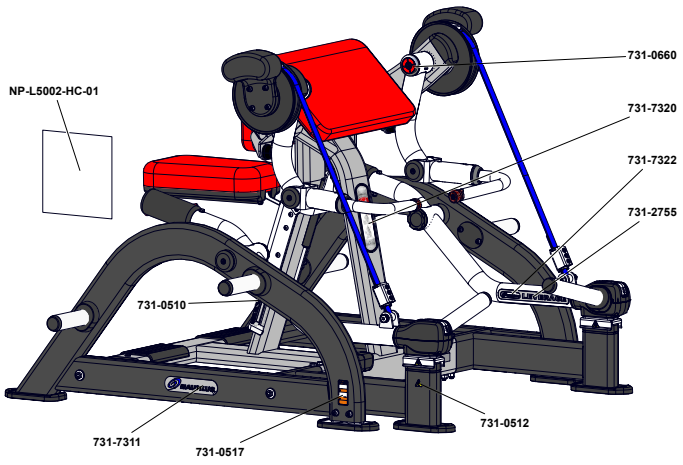



Fig. 16

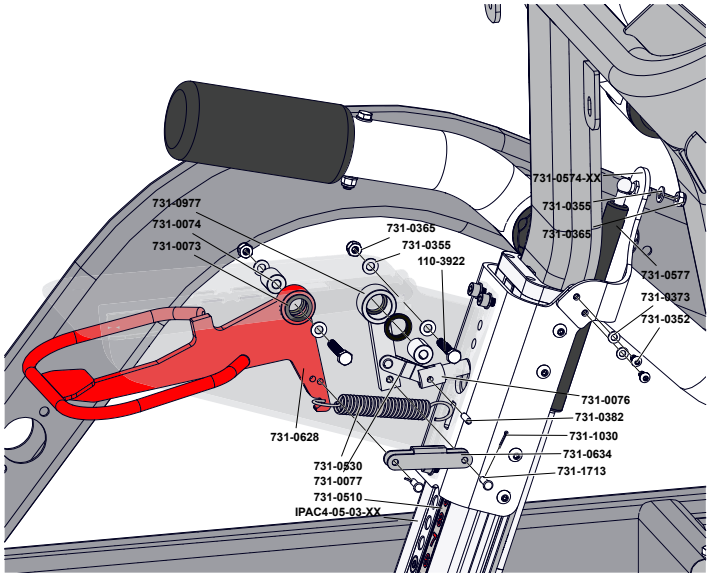



Fig. 17

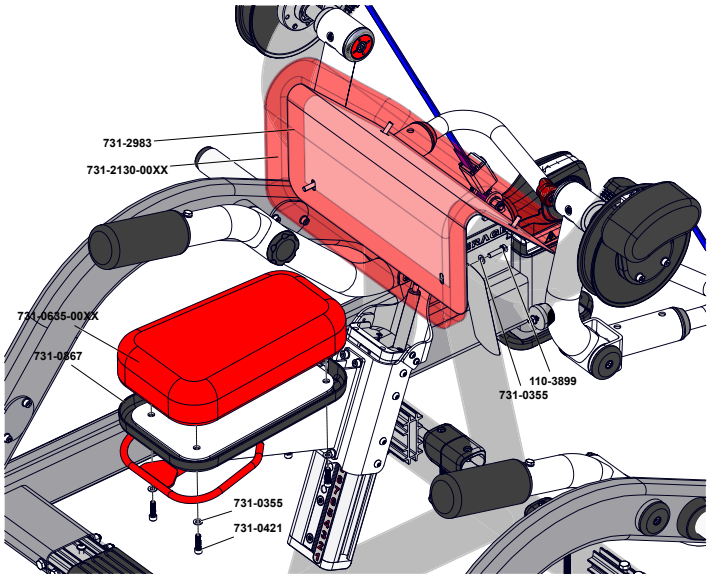



Fig. 18


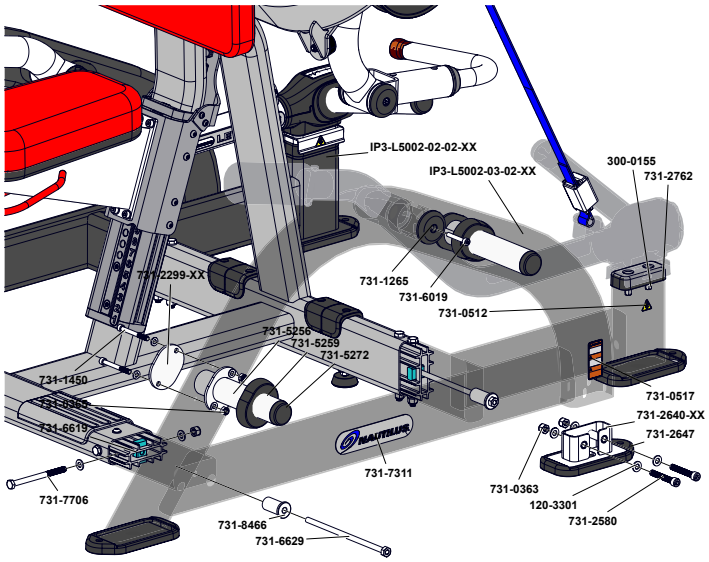



Fig. 19

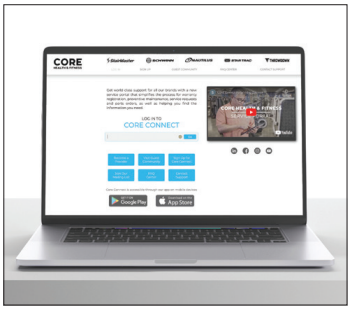

## CORE CONNECT

Get world class support for all of our brands with our Core Connect portal, a platform that simplifies the process for warranty registration, preventive maintenance, service requests, parts orders and allows you to get help with your general inquiries.

**CONNECT.COREHANDF.COM**



## CORE ADVANTAGE

Our preventative maintenance program, Core Advantage, will help preserve your equipment as excessive use takes its toll and ensures the longest possible life of your products while reducing downtime. We offer programs for all aspects of gym equipment, in every category and for every Core Health & Fitness brand. Core Advantage provides the industry's most complete programs; including one-time, monthly, once every other month, semi-annual and quarterly options available.

### BENEFITS OF CORE HEALTH & FITNESS CUSTOMER SERVICE

connect.corehandf.com
for preventative maintenance schedules, owner's manuals, and other online support

Customer Support Center

24/7 Chat Support
hosted by AI agents

Live Agent Support
available from
6am to 4pm PST

Network of 600+ factory-trained, annually-certified service providers

In-service seminars for staff

**SCAN THE QR CODE TO LEARN MORE ABOUT OUR WORLD-CLASS CUSTOMER SERVICE**

© 2025 CORE HEALTH & FITNESS LLC

PART NUMBER 620-8421, REV C

All rights reserved. Star Trac, the Star Trac logo and StairMaster are registered trademarks of Core Health & Fitness, LLC. Schwinn and Nautilus are registered trademarks of Nautilus Inc. used under license to Core Health & Fitness LLC. Throwdown is a registered trademark of Throwdown Industries, LLC.