CORE
HEALTH & FITNESS

CORE HEALTH & FITNESS

FREEDOM RACK



OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

Before using this product, it is essential to read the ENTIRE Owner's Manual and ALL installation instructions. The Owner's Manual describes equipment operation and instructs members on how to use correctly and safely.

Read all warnings posted on the machine.

Health related injuries may result from incorrect or excessive use of exercise equipment. Core Health & Fitness strongly recommends you to encourage your members to discuss their health program or fitness regimen with a health care professional, especially if you or they have not exercised for several years, are over 35, or have known health conditions.

WARNING: to reduce the risk of serious injury to persons using this equipment, read and follow all of these warnings:

1. Assemble and operate the machine on a solid level surface. Position the machine with a minimum of 24 inches (0.6 meters) of clearance on at least one side to allow for ease of mounting and dismounting. Allow for 24 inches (0.6 meters) of clearance behind the machine (See Fig. 1). These dimensions are the recommended minimum distances.

   The actual area for access and passage shall be the responsibility of the facility and should take into account this training envelope, Americans with Disabilities Act Accessibility Guidelines (ADAAG) requirements and any required local codes or regulations (www.access-board.gov/ada).
2. Do not exceed the maximum allowable weight limit of:
   - 350 lbs. / 160 kg.
3. Load plates evenly and carefully to avoid tipping equipment and possible crushing injuries. DO NOT exceed 230 lbs. (104.5 kgs) per side of loaded weight.
4. Never exceed the load rating for any plate loaded station, body weight station, bench or other free weight device, including specific weight rod and band peg limits
5. Only add weight plates up to the load limits of the unit. Make sure all weight plates are completely placed on the weight rod.
6. Use only Olympic style weight plates (2.0" Bore) for training weight. Do not use dumbbells or any means other than those stated to increase weight resistance.
7. Always utilize weight plate retention devices such as clamps or pins.
8. Never exceed the load rating for any plate loaded station, body weight station, bench or other free weight device, including specific weight rod and band peg limits
9. Never use dumbbells or other means to incrementally increase the weight resistance. Use only those means provided by Core Heath & Fitness.
10. Ensure all adjustment and locking features are properly secured before using the equipment.
11. Care should be used when mounting or dismounting the equipment.
12. Keep the top surface of the platform clean and dry.
13. When adjusting any seat, knee stabilization pad, range of motion limiter, foothold pad or any other type of adjuster, make certain that the adjusting pin is fully engaged in the hole to avoid injury. If any of the adjustment devices are left projecting, they could interfere with the user's movement.
14. Do not over exert yourself during exercise. Stop exercising if you feel pain or tightness in your chest, become short of breath or feel faint. If you feel pain or experience any abnormal symptoms, stop exercising and consult your health care provider.
15. **WARNING**: Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint stop exercising immediately
16. **WARNING**: Risk of personal injury – Keep children under the age of 13 away from machine.
17. This machine is not intended to be used by children. It is not intended to be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless given instruction and under the personal supervision concerning use of the machine by a person responsible for their safety. Do not leave children unsupervised around the machine, keep them away from extended foot support (or other similar parts).
18. This equipment is designed for use in a commercial gymnasium or health club only. To ensure the proper use of the equipment in a safe manner, all users of the equipment should read this manual before using the machine. This machine should be made a part of your club training program in order that the equipment is used by your members in a safe manner as intended. In addition to instructing the club members in the proper use of the equipment, the club member should obtain a complete physical examination form their health care provider before beginning any exercise program.
19. This machine is for indoor use only.
20. The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.
21. Use only replacement components supplied by Core Heath & Fitness. Substitutes are forbidden and will void all warranties.
22. It is the purchaser's sole responsibility to properly instruct its end users and supervising personnel as to the proper operating procedures of all equipment.
23. All facilities in which Core Health & Fitness or any installer installs any Core Health & Fitness equipment assume all risks associated with the surfaces to which such equipment is fastened, anchored, or installed, including risk that the installation is not proper owing to that structure.

SAVE THESE INSTRUCTIONS

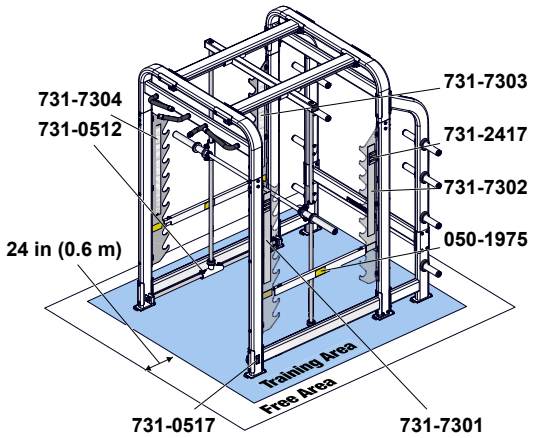


Fig. 1 Required Clearance & Label Locations

Product Details

Product SKU	Name
9NP-B8507	**Freedom Rack**
Weight:	655 lbs 297 kg
Dimensions:	75x 83x 90 in 191x 211x 229 cm

Maintenance

Working on this product will require basic and/or sometimes specialty tools based on the type of service that will be performed at any time. To assist, we recommend having the tools listed available when performing maintenance.

- Metric Allen Key Set
- Torque Wrench
- Metric Open-Ended Wrench Set
- Large Adjustable Crescent Wrench
- Metric Socket Set

MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping the product in safe operating condition. Failure to conduct preventative maintenance by the owner may cause the product to operate in an unsafe manner. Equipment needs to be inspected and maintained at regular intervals per the preventative maintenance schedule provided in this manual.

Cleaning

Keeping your Strength units clean is an important component of preventative maintenance and the overall aesthetics of your product. While your clients will appreciate clean equipment free of sweat, dirt and other contaminants proper care and cleaning will extend the life of your product and reduce premature aging and wear. See the maintenance schedule for recommended frequency. Cleaners/Disinfectants should be used at manufacturer recommended dilutions and never in concentrated form.

Inspection

Visual inspection of your units will insure a safe environment for your clients and alert you to any issues that may require maintenance prior to equipment failure. Proper, timely visual inspection is a critical component to the long term care of your product.

- Fasteners, hardware and attachments should be checked monthly for looseness. Tighten as required using appropriate tools.
- Handgrips should be checked for wear or damage monthly and replaced as needed.
- Main frame should be inspected every six months for signs of unusual wear, corrosion or structural integrity issues.
- Upholstery should be inspected for wear or damage monthly and replaced as needed.

SAVE THESE INSTRUCTIONS

MAINTENANCE SCHEDULE

With durable, high performance components, this equipment is designed for heavy usage with minimal maintenance required. To keep it in top condition, perform regular daily, weekly and monthly preventive maintenance routines outlined below.

The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.

	Daily	Weekly	Monthly	Bi-Annually
Inspect				
Fasteners			X	
Handgrips			X	
Labels			X	
Main Frame				X
Cleaning				
Main Frame		X		

Table 1

CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer

The next page shows the location of the warning labels and communication stickers placed on the equipment as part of the manufacturing process. It is critical that owners maintain the integrity and placement of these stickers. If you find any stickers missing or damaged the replacement numbers are shown on the support site and in Fig. 1 above. See Support and Service to order replacements.

Note: Sticker/Label images are not to scale.

050-1975 LABEL, SAFETY CATCH

731-0512 STICKER, CAUTION, PINCH POINT ICON

731-0517 STICKER, WARNING, BOLT DOWN

731-2417 STICKER, WARNING, DO NOT OVERLOAD

731-7301 STICKER, WORKOUT, 1,FREEDOM RACK


731-7302 STICKER, WORKOUT, 2 FREEDOM RACK

731-7303 STICKER, WORKOUT 3,FREEDOM RACK

731-7304 STICKER, WORKOUT 4, FREEDOM RACK



731-0512

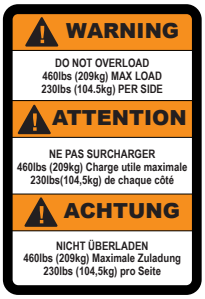


731-2417




050-1975




731-0517

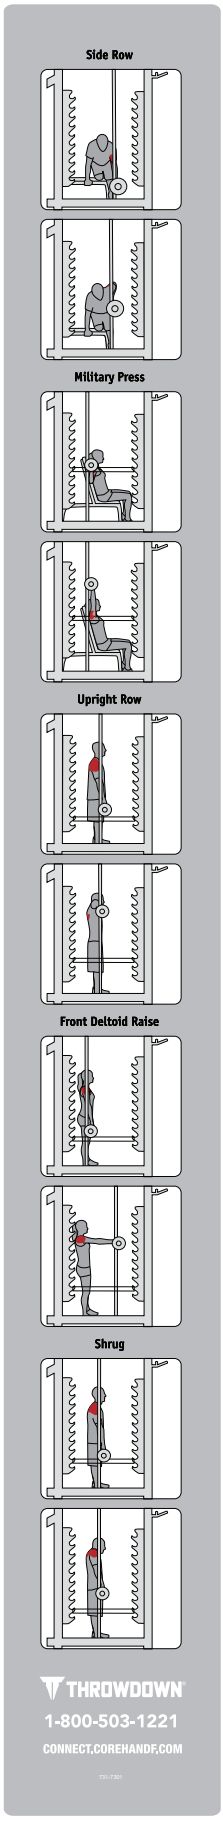


731-7301

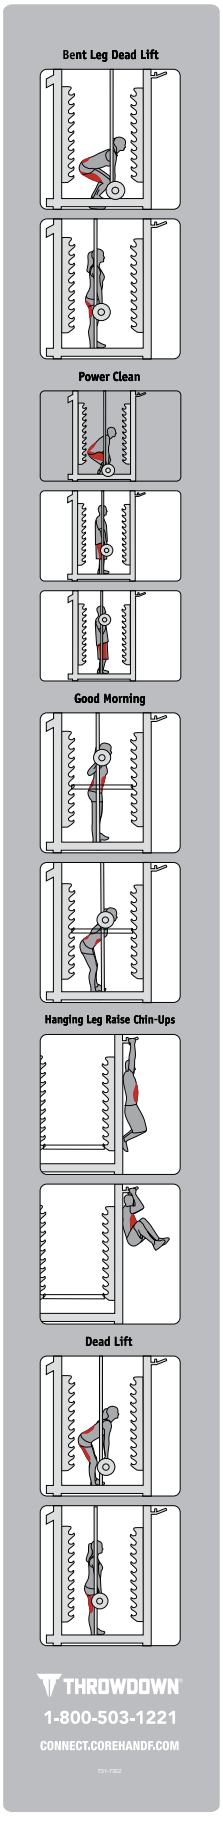

731-7302

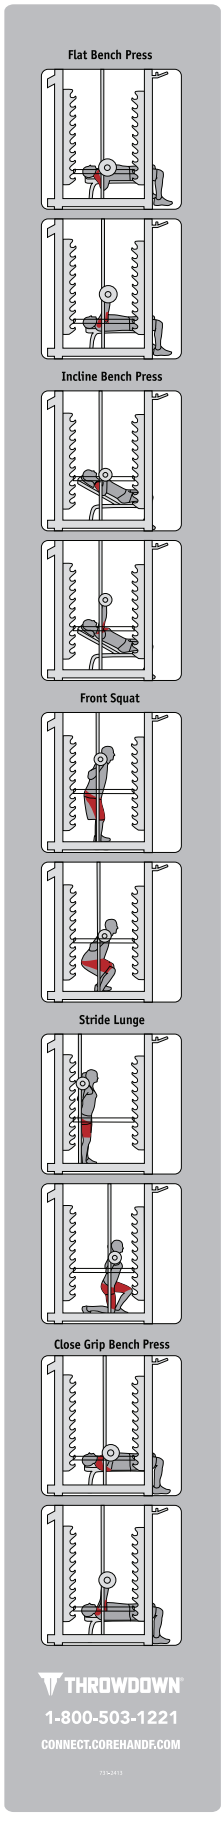

731-7303

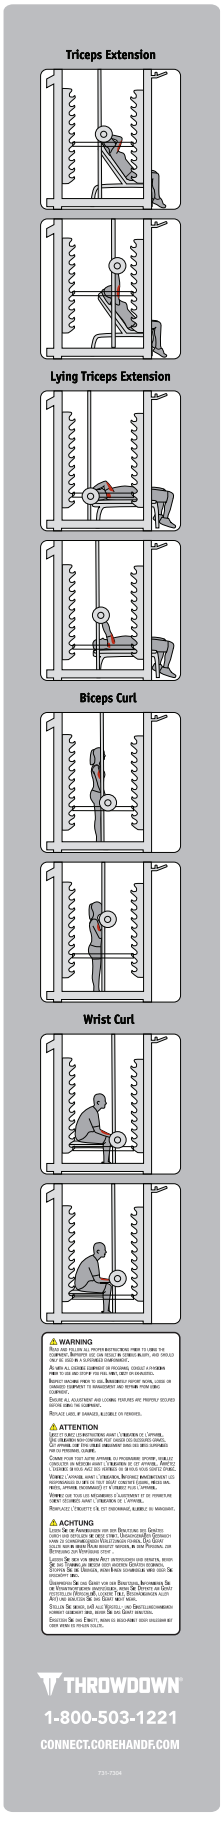

731-7304

ASSEMBLY

REQUIRED TOOLS

- Metric Allen Key Set
- Torque Wrench
- Metric Open-Ended Wrench Set
- Large Adjustable Crescent Wrench



PACKAGING REMOVAL:

Carefully remove all packaging materials that wrap the equipment. If parts are missing see **Support & Service**

DO NOT USE A KNIFE OR BOX CUTTER AS YOU MAY DAMAGE THE EQUIPMENT.

Before beginning to assemble the product, remove any sub-components from the pallet and set aside for later assembly. Once all packaging has been removed, lay all parts out in a clean open area to prepare for assembly. The list of included parts is in Table 2 and Fig. 2 to the right.

Should any component not be present or if you have any operational questions, please refer to **SUPPORT & SERVICE** on the back page of this manual.

All equipment MUST be secured (bolted and tightened) to a solid, level surface, using all of the anchoring holes provided, to stabilize and eliminate rocking or tipping over. Shim any mounting surface that does not rest thoroughly on the floor using flat washers, DO NOT force the foot to contact the ground with anchors. Fasteners must be a 16mm bolt of grade 12.9 or a 5/8" bolt of grade 8 or better and be installed per the bolt manufacturer's specifications. Due to the wide variety of flooring on which equipment may be anchored or installed and differences in applicable local building codes, Core Health & Fitness is not responsible for any damage to the flooring that may result due to anchoring or installing equipment to the floor and for compliance with local building codes. Only licensed contractors or certified installers should be used to insure proper anchoring, installation, and compliance with local building code.

#	PN	Description
A	731-2315-XX	BRKT, MOUNT, FREEDOM RACK
B	731-2410	ASSY, OLY BAR, FREEDOM RACK
C	620-8364	MANUAL, INSTALL, FREEDOM RACK
D	731-2393	GUIDE ROD, VERTICAL, FREEDOM RACK
E	731-2385-XX	ASSY, BEARING HOUSING, 30MM, FREEDOM RACK
F	731-2391	GUIDE ROD, LOWER, FREEDOM RACK
G	731-2392	GUIDE ROD, UPPER, FREEDOM RACK
H	731-5592-XX	WELD, UPRIGHT, FRONT, RIGHT, FREEDOM RACK
I	731-5593-XX	WELD, UPRIGHT, FRONT, LEFT, FREEDOM RACK
J	731-2317-XX	WELD, TUBE, BRACE, FREEDOM RACK
K	731-2647	FOOT,LONG,LEVERAGE
L	731-2377-XX	BRKT, MOUNT, FREEDOM RACK
M	731-2379-XX	WELD, CROSS BRACE, BACK, FREEDOM RACK
N	731-2390-XX	ASSY, HOLDER, UPRIGHT RODE, FREEDOM RACK
O	731-5591-XX	WELD,UPRIGHT,SIDE,FREEDOM RACK
P	731-2331	WELD, HOOKS, FREEDOM RACK
Q	731-5259	BUMPER,STOP,WGT
R	731-5263	CAP,PLUG,WEIGHT HORN,20
S	731-5266	CAP,PLUG,WEIGHT HORN,5
T	731-5265	CAP,PLUG,WEIGHT HORN,10
U	731-5267	CAP,PLUG,WEIGHT HORN,2.5
V	731-5264	CAP,PLUG,WEIGHT HORN,15
W	731-5268	CAP,PLUG,WEIGHT HORN,1.25
X	731-5589-XX	WELD,CROSS-SUPPORT,FREEDOM RACK
Y	731-5590-XX	WELD,UPPER,FREEDOM RACK
Z	731-2349-XX	WELD, BEARING SUPPORT, TOP, FREEDOM RACK
AA	731-2355-XX	WELD,WGT HOLDER,FREEDOM RACK
AB	731-2337	WELD, SAFETY HOOK, FREEDOM RACK
AC	731-5256	WELD,WEIGHT HORN,SINGLE
AD	731-5248	WELD, WGT HOLDER, 25LB

Table 2

INCLUDED PARTS

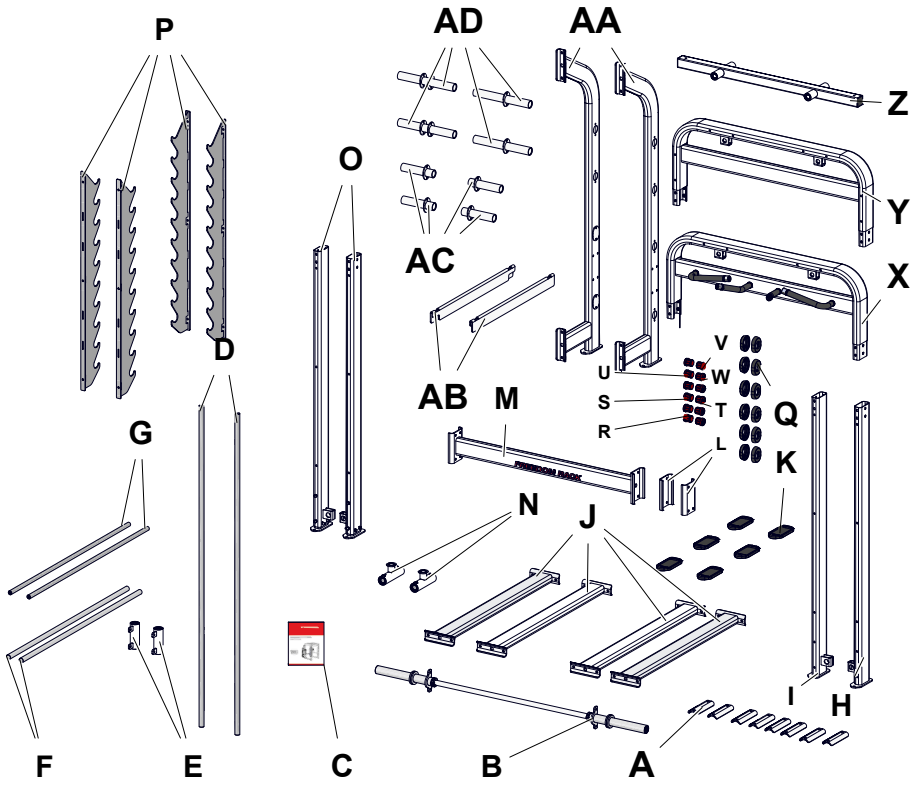


Fig. 2 Included Parts

CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer

ASSEMBLY PROCEDURE

1. Take the front (731-5589-XX) and back upper weldments (731-5590-XX) and place them on a soft surface. (A moving blanket will help reduce damage from hard surfaces)
2. Take (2) of the cross weldments (731-2317-XX) and lay them between the upper weldments.
3. Take (4) mount plates (731-2315) and lay one at each end as shown below in Fig. 3.
4. Use (2) 17mm open-ended wrenches to assemble the weldments shown in Fig. 3 using (8) m10 x 140mm Hex Head bolts (731-2398), (16) m10 washers (731-0367), and (8) m10 Nyloc nuts - **DO NOT FULLY TIGHTEN**.

   NOTE: Be sure to use the right length of bolt as there are several similar bolts.
5. Take the (4) upright weldments (2x 731-5592-XX + 2x 731-5593-XX) and slide them onto the correct post sleeve indicated in Fig. 4.

   NOTE: All mounting holes are to the outside of the user area.
6. Use a ratchet wrench with a 17mm socket to secure the upright weldments using (20) m10 washers (731-0367) and (20) m10 x 25 Hex Head bolts (731-2333), apply thread-locker to hardware before installing - **DO NOT FULLY TIGHTEN**.
7. Upright the Main Assembly.
   a. Lay assembly on its side and install the rubber feet (731-2647). Support legs as assembly is rotated. Note: take special care not to drop the assembly.
   b. Lift the top weldments to upright the Main frame.
   c. Move assembly to the position where it will be used, remember to leave room behind for the rest of the assembly.

   NOTE: Due to the weight of the assembly, you should always have at least 2 people when moving these.

   NOTE: Make sure you leave enough space to allow a safe and clear workout area.
8. Install (2) rubber feet onto the bottom of the weight holder weldments (731-2355-XX), then use two open-ended wrenches to install the weldments onto the rear of the Main Assembly using (2) mount plates (731-2315), (4) m10 x 140 Hex Head Bolts (731-2398), (8) m10 Washers (731-0367), and (4) m10 Nyloc nuts as shown in Fig. 5 - **DO NOT FULLY TIGHTEN**.
9. Using (2) mount plates, (8) m10 x 140 Hex Head Bolts (731-2398), (16) m10 Washers (731-0367), and (8) m10 Nyloc nuts, install the cross-brace weldments (2x 731-2317-XX) between the legs of the Main Assembly as shown in Fig. 5.
10. Use (2) 17mm open-ended wrenches tighten **ALL** fasteners from all previous steps
11. Use (2) 17mm open-ended wrenches to install the support weldment (731-2379-XX) between the two weight holder weldments using (2) large mount plates (731-2377-XX), (8) m10 x 80 Hex Head Bolts (731-2400), (16) m10 Washers (731-0367), and (8) m10 Nyloc nuts.
12. Use (2) 17mm open-ended wrenches to secure the (4) bar catch weldments (731-2331-KT) to the upright weldments using (12) m10 x 135 Hex Head Bolts (731-2334), (12) m10 Washers (731-0367), (12) M10 Large Washers (731-0363), and (12)m10 Nyloc nuts as shown in Fig. 6 and Fig. 7. Take note of the Workout Placards, ensuring they face the inside of the unit. Look at the bottom of each placard for the number and use Fig. 6 for placement on the unit.
13. Use a 17mm open-ended wrench to install a Spacer ring (731-2342), a m10 Large Washer (731-2396), and a m10 x 25 Hex Head Bolt into one side of each upper Guide Rod (731-2392 x2).
14. Slide the rods through the front upper mounts taking care not to scratch rods. With the rods through the first mounts, slide the Bearing Weldment (731-2349-XX) over the rods ensuring the larger hole at the ends of the weldment is facing downward.

    NOTE: **DO NOT** force the bearing onto the rods as this may damage the bearings.
15. Once the bearing weldment is mounted, slide a rubber cushion (731-8490) onto the end of each rod then slide the rods through the rear upper mounts. Use a 17mm open-ended wrench to install a Spacer ring (731-2342), a m10 Large Washer (731-2396), and a m10 x 25 Hex Head Bolts into the end of each Guide Rod.
16. Use (2) 17mm open-ended wrenches to secure the bearing mounts (731-2385-XX) to the weight bar (731-2410) using (4) m10 x 35 Hex Head Bolts (731-2399), (8) m10 Washers (731-0367), and (4) m10 Nyloc Nuts (731-0363) as shown in Fig. 9.

    NOTE: The weldments install to the outside of the bar flange.
17. Install the Safety Stops (731-2337 x2) onto the bar catch weldments, ensuring they are level, then set the weight bar on top of stops as shown in Fig. 10.
18. Install the side guide rods (731-2393 x2) through the weight bar bearings and up into the bearing weldment. Use a 17mm open-ended wrench to secure the rods using (2) m10 Large Washers (731-2396) and (2) m10 x 25 Hex Head Bolts (731-2333) as shown in Fig. 11.

    NOTE: DO NOT force the rod through the bearing this may damage the bearings.
19. Use a 17mm open-ended wrench to install a Spacer ring (731-2397), a m10 Large Washer (731-2396), and a m10 x 25 Hex Head Bolt (731-2333) into one side of each lower Guide Rod (731-2391 x2), then slide the rods through the lower front mounts, taking care not to scratch the rods as shown in Fig. 12.
20. Slide a rubber bumper (731-2394) onto the end of each side guide rod, then install the side guide rods into the top of a "T" shaped bearing housing (731-2390) to lock the bumper in place.
21. Once the bearing housings are in place, slide the lower guide rods through the housings. Install a rubber cushion (731-8489) onto each guide rode, then slide the rod through the lower rear mounts.

    NOTE: DO NOT force the bearing onto the rods this may damage the bearings. Once the Bearing Weldment is on the rods, slide the rod through the back mount.
22. Use a 17mm open-ended wrench to install a Spacer ring (731-2397), a m10 Large Washer (731-2396), and a m10 x 25 Hex Head Bolt (731-2333) into the ends of each lower guide rod as shown in Fig. 12.
23. Use (2) 17mm open-ended wrenches to install the weight horns (x4 731-5248 + x4 731-5256) using (16) M8 x 75mm Hex Head Bolts (731-2356), (32) M8 Washers (731-0355), and (16) M8 Nyloc Nuts (731-0365). See Fig. 13 for placement and order. See image below for placement and order.
24. Once all the weight horns are installed, slide on the Base Covers (731-5259).
25. Install the caps as shown in Fig. 13 - use the "Weight Horn Cap Guide" table on page 6 for cap position.
26. Assembly is complete.

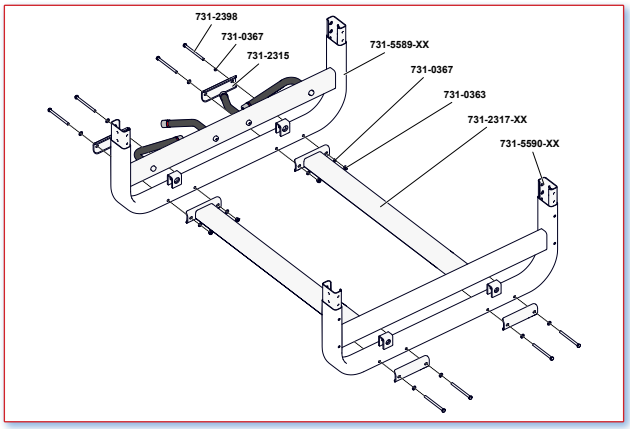


Fig. 3

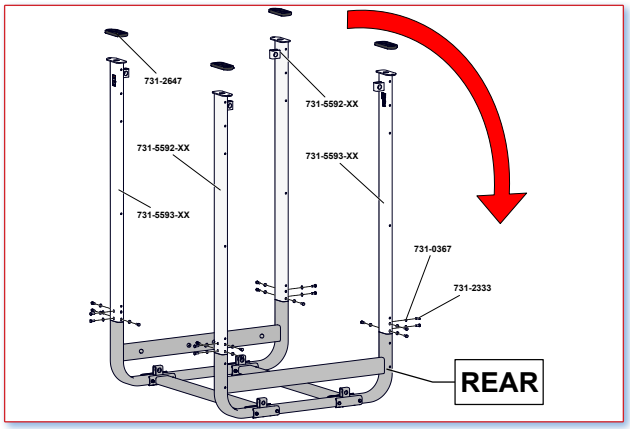


Fig. 4

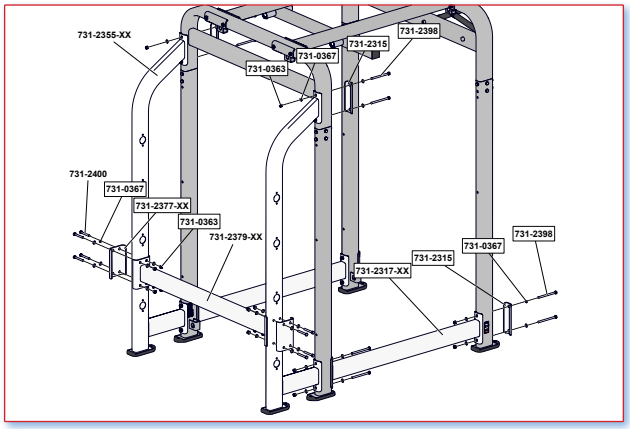


Fig. 5

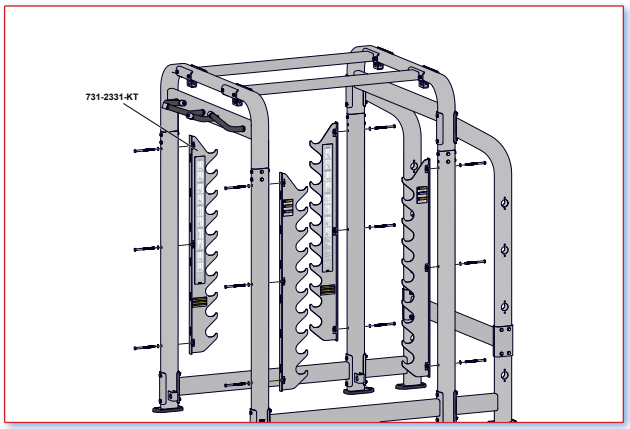


Fig. 6

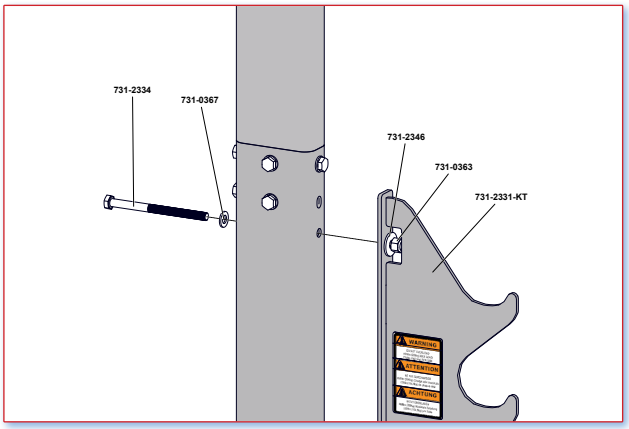


Fig. 7

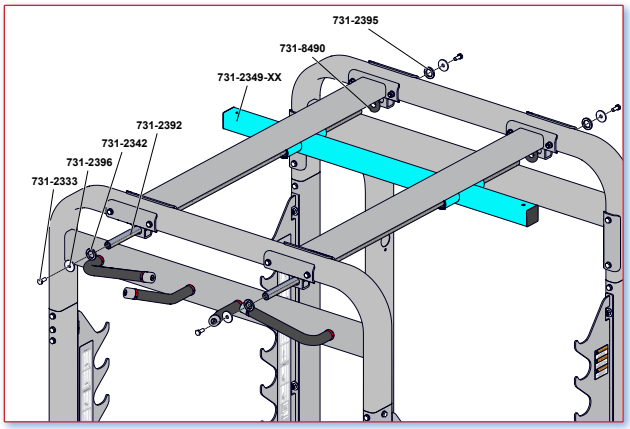


Fig. 8

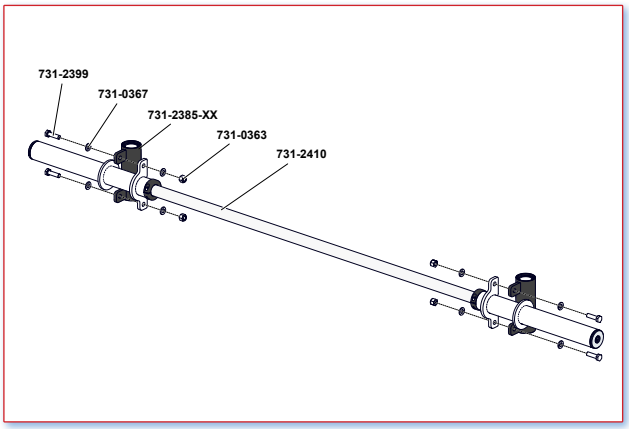


Fig. 9

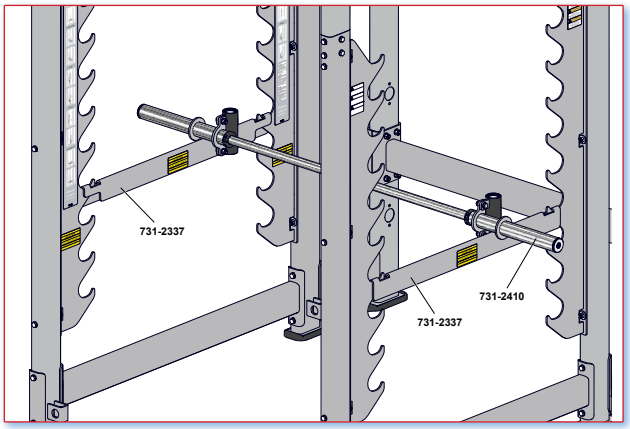


Fig. 10

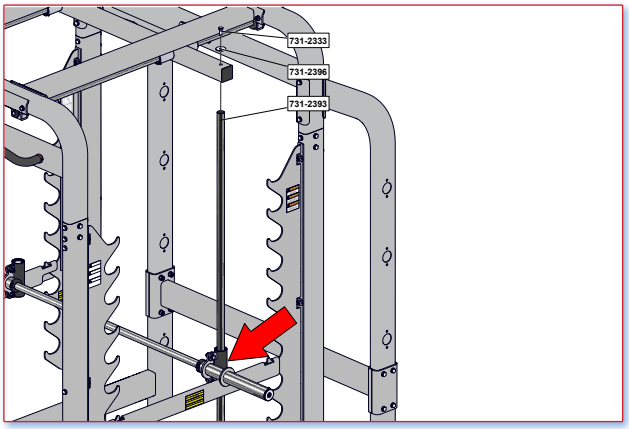


Fig. 11

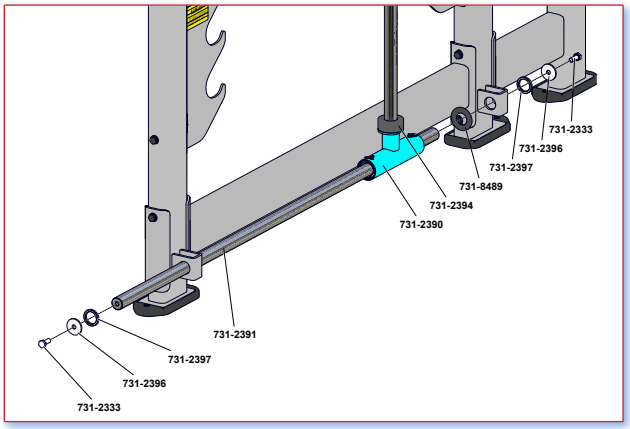


Fig. 12

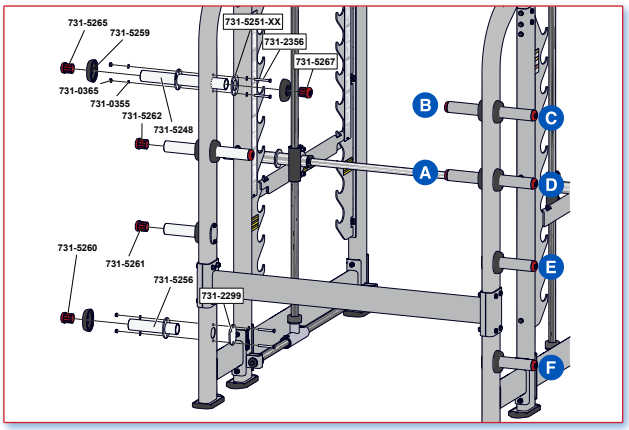


Fig. 13

Weight Horn Cap Guide


- A — 5 lbs / 2.5 kg
- B — 2.5 lbs / 1.25 kg
- C — 10 lbs / 5 kg
- D — 25 lbs / 10 kg
- E — 35 lbs / 15 kg
- F — 45 lbs / 20 kg

CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer


Replacement parts for this unit are available through customer support. Parts listed are shown on the following pages and interactive drawings available on Core Connect.
Listed parts may change, please check Core Connect for latest versions and other SKU's covered by this manual. Warranty information may vary by unit. To read warranty information visit: https://corehandf.com/warranty

9TD-L8507-XXAAX - Freedom Rack

Part Number	Qty	Description
050-1975	8	LABEL, SAFETY CATCH
130-1778	2	COLLAR, 30MM ID
731-0355	32	WASHER,PLAIN,M8,NARROW
731-0363	48	NUT,M10X1.5,NYLOC
731-0365	16	NUT,M8 X 1.25,NYLOC JAM
731-0367	104	WASHER,PLAIN,M10
731-0512	8	STICKER,WARNING,PINCH
731-0517	2	STICKER, WARNING, BOLT DOWN
731-1904-KT	4	KIT, INSP B&R END CAP+COLLARS
731-1905	2	GRIP, PULL UP, OUTER
731-1906	2	GRIP, PULL UP, INNER
731-2299-XX	4	PLATE,MOUNT,WGT HOLDER,BLANK
731-2315-XX	8	BRKT, MOUNT, FREEDOM RACK
731-2317-XX	4	WELD, TUBE, BRACE, FREEDOM RACK
731-2331	4	WELD, HOOKS, FREEDOM RACK
731-2333	30	SCREW, M10X1.0, 25MM, HHC, HE, CS, BZ
731-2334	12	SCREW, M10X1.0, 135MM, HHC, HE, CS, BZ
731-2337	2	WELD, SAFETY HOOK, FREEDOM RACK
731-2346	12	WASHER, M10, FENDER, BZ
731-2349-XX	1	WELD, BEARING SUPPORT, TOP, FREEDOM RACK
731-2350	4	BEARING, LINEAR, 25MM SHAFT, 40MM OD
731-2351	4	RETAINING, INNER, 40MM
731-2352	2	CAP, END 60MM X 60MM
731-2355-XX	2	WELD,WGT HOLDER,FREEDOM RACK
731-2356	16	SCREW,M8x1.25,70,HHC,HE,AS,12.9,ZP,PT
731-2377-XX	2	BRKT, MOUNT, FREEDOM RACK
731-2379-XX	1	WELD, CROSS BRACE, BACK, FREEDOM RACK
731-2385-XX	2	ASSY, BEARING HOUSING, 30MM, FREEDOM RACK
731-2390-XX	2	ASSY, HOLDER, UPRIGHT RODE, FREEDOM RACK
731-2391	2	GUIDE ROD, LOWER, FREEDOM RACK
731-2392	2	GUIDE ROD, UPPER, FREEDOM RACK
731-2393	2	GUIDE ROD, VERTICAL, FREEDOM RACK
731-2394	2	BUMPER, ROUND, FREEDOM RACK
731-2395	4	SPACER, GUIDE ROD, 25MM, FREEDOM RACK
731-2396	10	WASHER, ID10.4, OD40, BZ
731-2397	4	SPACER, GUIDE ROD, 30MM, FREEDOM RACK
731-2398	20	SCREW,M10X1.5,140MM,HHC,HE,CS,BZ
731-2399	4	SCREW, M10X1.0, 35MM, HHC, HE, CS, BZ
731-2400	8	SCREW, M10X1.0, 80MM, HHC, HE, CS, BZ
731-2410	1	ASSY, OLY BAR, FREEDOM RACK
731-2417	4	STICKER, WARNING, DO NOT OVERLOAD
731-2647	6	FOOT,LONG,LEVERAGE
731-5248	4	WELD, WGT HOLDER, 25LB
731-5251	4	PLATE, MOUNT, WGT HOLDER
731-5256	4	WELD,WEIGHT HORN,SINGLE
731-5259	12	BUMPER,STOP,WGT
731-5263	2	CAP,PLUG,WEIGHT HORN,20
731-5264	2	CAP,PLUG,WEIGHT HORN,15
731-5265	2	CAP,PLUG,WEIGHT HORN,10
731-5266	2	CAP,PLUG,WEIGHT HORN,5
731-5267	2	CAP,PLUG,WEIGHT HORN,2.5
731-5268	2	CAP,PLUG,WEIGHT HORN,1.25
731-5589-XX	1	WELD,CROSS-SUPPORT,FREEDOM RACK
731-5590-XX	1	WELD,UPPER,FREEDOM RACK
731-5591-XX	2	WELD,UPRIGHT,SIDE,FREEDOM RACK
731-5592-XX	1	WELD, UPRIGHT, FRONT, RIGHT, FREEDOM RACK
731-5593-XX	1	WELD, UPRIGHT, FRONT, LEFT, FREEDOM RACK
731-5707	4	SCREW,M10X1.5,70MM,HHC,HE,CS,BZ
731-5730-XX	2	WELD,FOOT
731-7301	1	STICKER, WORKOUT 1, FREEDOM RACK
731-7302	1	STICKER, WORKOUT 2, FREEDOM RACK
731-7303	1	STICKER, WORKOUT 3, FREEDOM RACK
731-7304	1	STICKER, WORKOUT 4, FREEDOM RACK
731-8489	2	CUSHION, 29.9mm ID, 57mm OD
731-8490	2	CUSHION, 24.9mm ID, 57mm OD

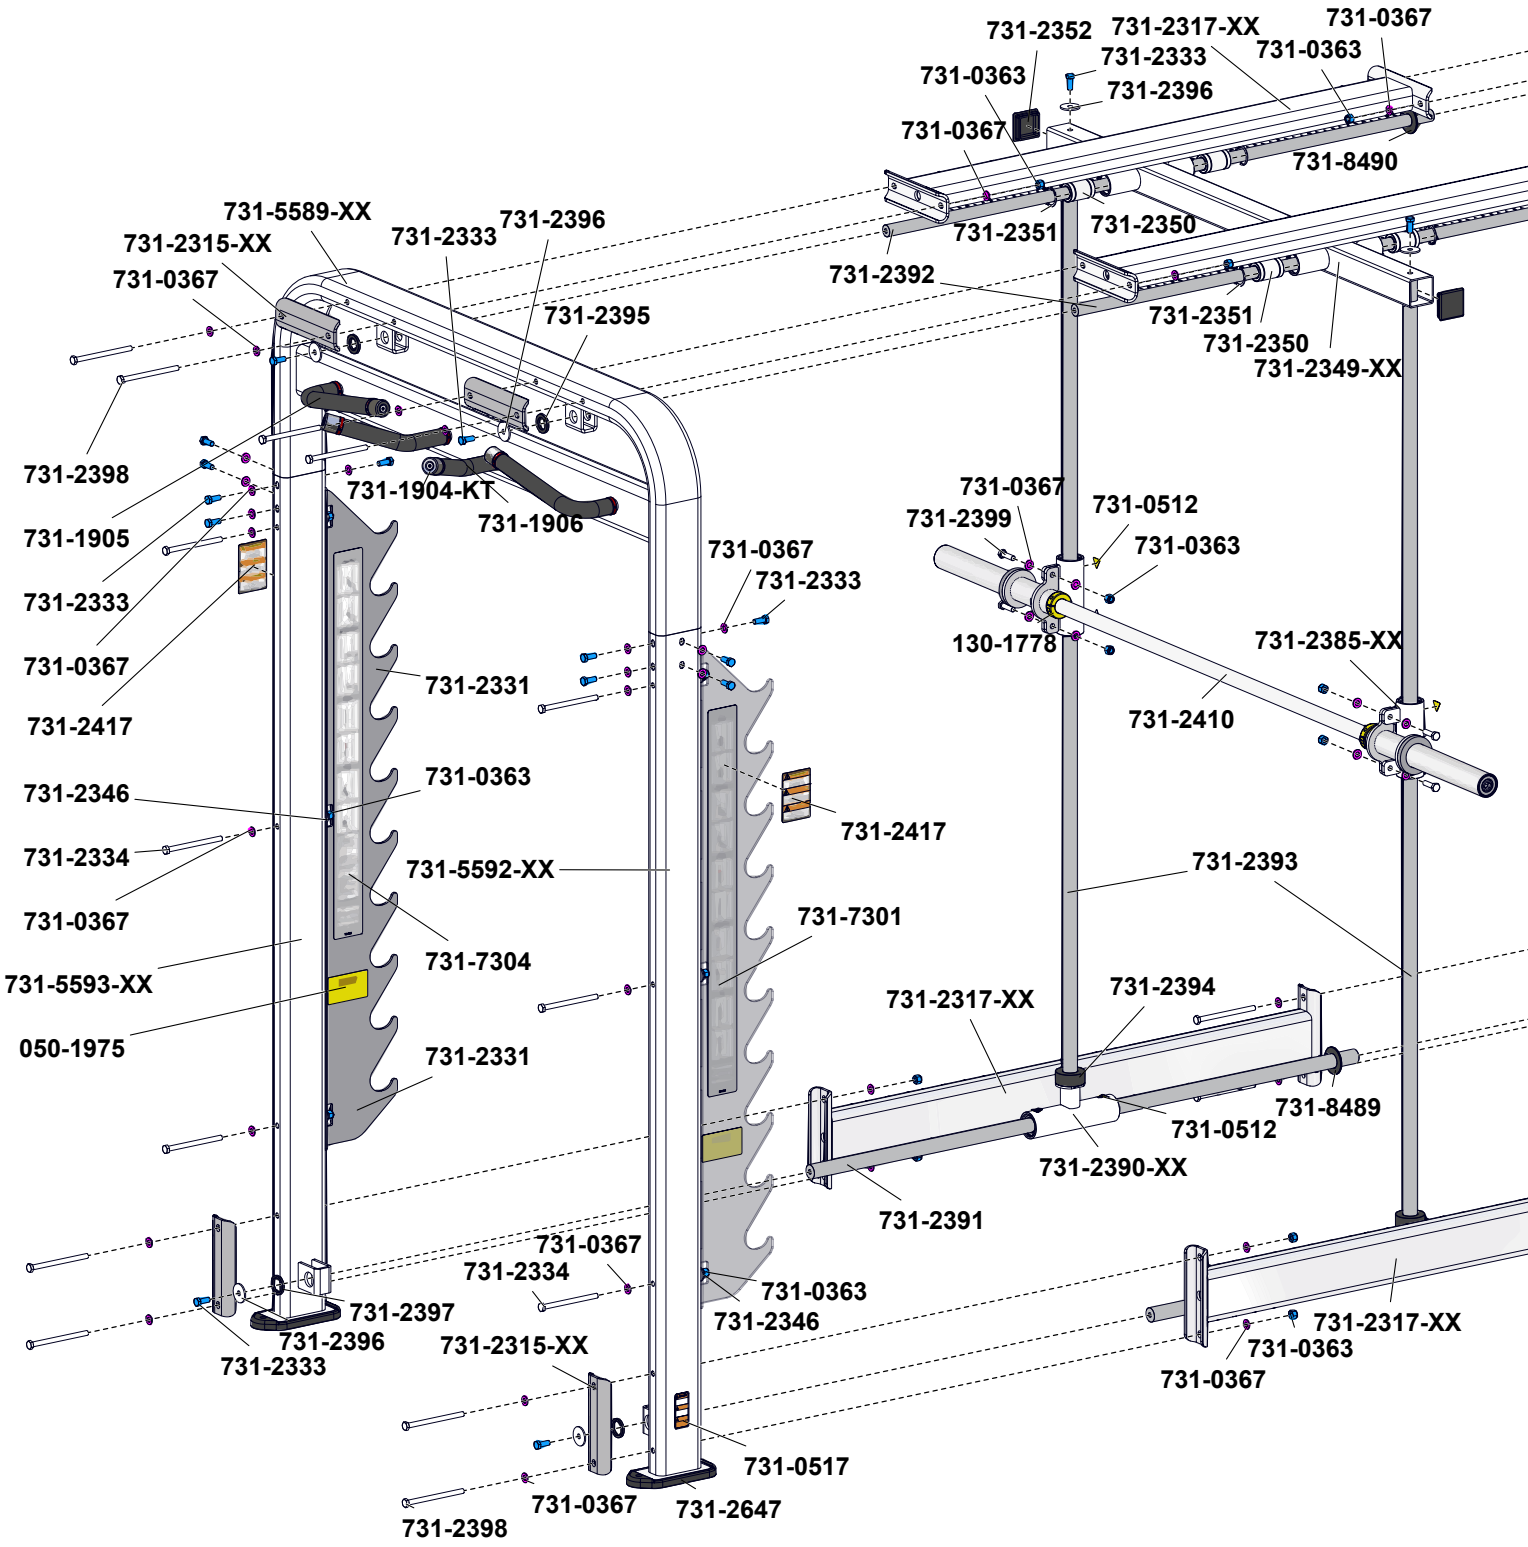


CORE HEALTH & FITNESS
StairMaster SCHWINN NAUTILUS STAR TRAC THROWDOWN wexer

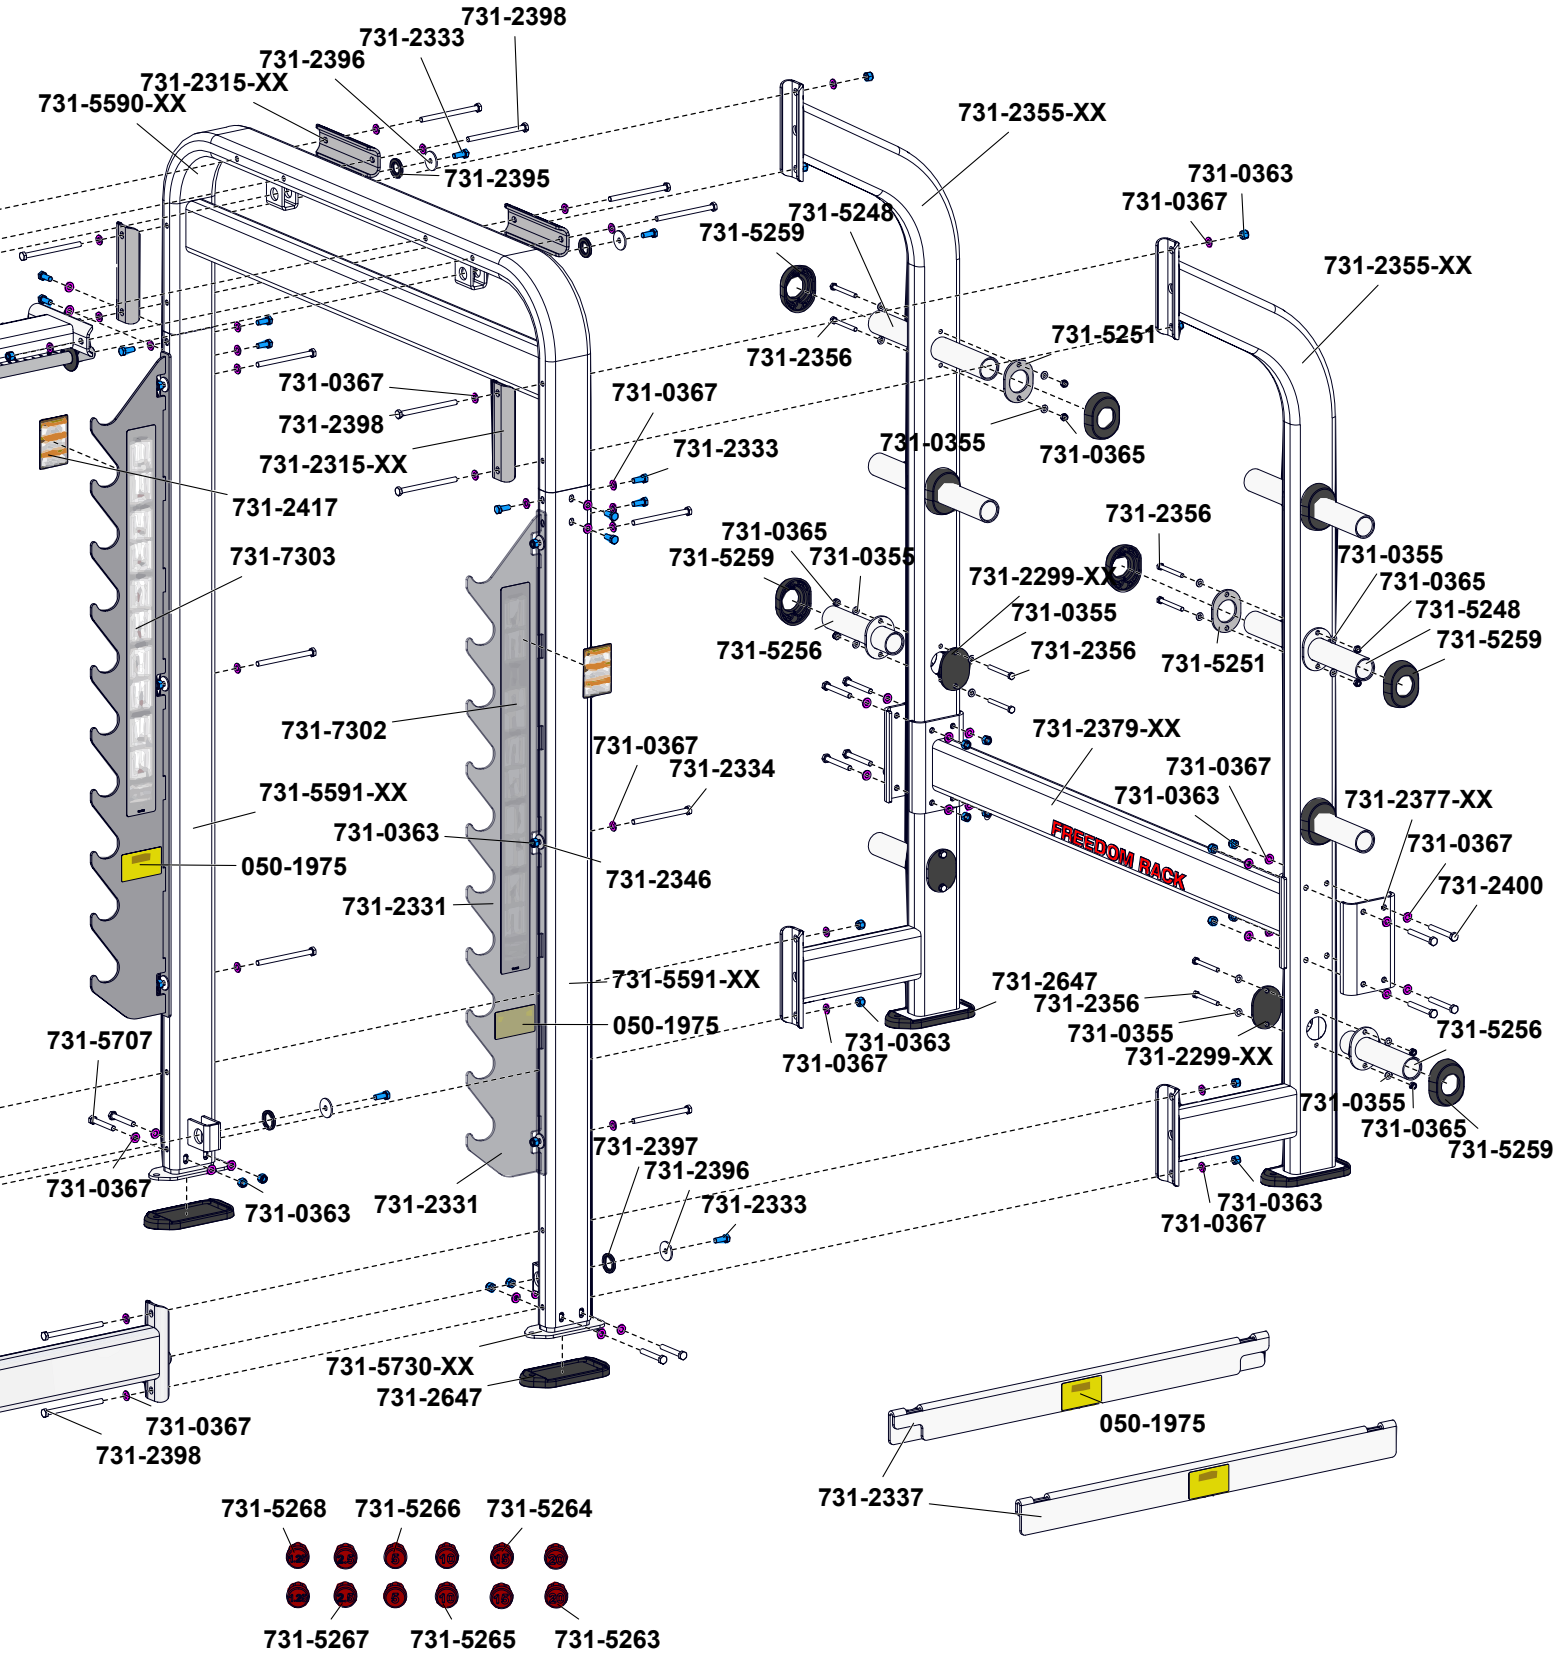
731-2398
731-2333
731-2396
731-2315-XX
731-5590-XX
731-2395
731-2355-XX
731-0363
731-0367
731-5248
731-5259
731-2355-XX
731-2356
731-5251
731-0367
731-0367
731-2398
731-2333
731-0355
731-0365
731-2315-XX
731-2417
731-2356
731-0365
731-5259
731-0355
731-7303
731-0355
731-0365
731-2299-XX
731-5248
731-0355
731-5259
731-5256
731-2356
731-5251
731-7302
731-2379-XX
731-0367
731-0367
731-2334
731-0367
731-5591-XX
731-0363
731-2377-XX
731-0363
731-0367
050-1975
731-2346
731-2400
731-2331
731-5591-XX
731-2647
731-2356
731-5707
050-1975
731-0363
731-0355
731-5256
731-0367
731-2299-XX
731-0355
731-0365
731-5259
731-2397
731-2396
731-0367
731-0363
731-2331
731-2333
731-0363
731-0367
731-5730-XX
731-2647
731-0367
731-2398
050-1975
731-2337
731-5268
731-5266
731-5264
731-5267
731-5265
731-5263

THIS PAGE INTENTIONALLY BLANK

THIS PAGE INTENTIONALLY BLANK

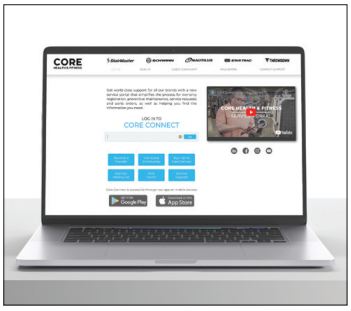

CORE CONNECT

Get world class support for all of our brands with our Core Connect portal, a platform that simplifies the process for warranty registration, preventive maintenance, service requests, parts orders and allows you to get help with your general inquiries.

CONNECT.COREHANDF.COM



CORE ADVANTAGE

Our preventative maintenance program, Core Advantage, will help preserve your equipment as excessive use takes its toll and ensures the longest possible life of your products while reducing downtime. We offer programs for all aspects of gym equipment, in every category and for every Core Health & Fitness brand. Core Advantage provides the industry's most complete programs; including one-time, monthly, once every other month, semi-annual and quarterly options available.

BENEFITS OF CORE HEALTH & FITNESS CUSTOMER SERVICE

connect.corehandf.com
for preventative maintenance schedules, owner's manuals, and other online support

Customer Support Center

24/7 Chat Support
hosted by AI agents

Live Agent Support
available from
6am to 4pm PST

Network of 600+ factory-trained, annually-certified service providers

In-service seminars for staff

SCAN THE QR CODE TO LEARN MORE ABOUT OUR WORLD-CLASS CUSTOMER SERVICE

© 2025 CORE HEALTH & FITNESS LLC

PART NUMBER 620-9153, REV B

All rights reserved. Star Trac, the Star Trac logo and StairMaster are registered trademarks of Core Health & Fitness, LLC. Schwinn and Nautilus are registered trademarks of Nautilus Inc. used under license to Core Health & Fitness LLC. Throwdown is a registered trademark of Throwdown Industries, LLC.

17800 SE Mill Plain Blvd, Unit 190 Vancouver, WA 98683.
Tel: (360) 326-4090 • (800) 503-1221 • support@corehandf.com