Vitality™ Series Selectorized Line Leg Press/Calf Extension Assembly Guide

Assembly requirements

Precor recommends at least two people for this installation. DO NOT attempt assembly by yourself.

When assembling the equipment, we recommend you:

- Follow the steps in the order listed in this assembly guide.
- Unpack the box and assemble the equipment close to where you plan to use it.
- Locate the equipment at least 40 inches (1 meter) away from walls or furniture on either side of the equipment, and 40 inches (1 meter) away from objects behind or in front of the equipment.
- Assemble the equipment on a solid, flat surface, so that it remains level and stable.

Required tools

- Adjustable wrench
- Torque wrench
- Rubber mallet
- Hex wrench sets, metric and standard, with extensions
- Socket wrench set, metric and standard, with extensions

Equipment dimensions: W43.6 x D75.7 x H69 inches/W110.7 x D192.3 x H175.2 cm (in-use) - W43.6 x D78.1 x H69 inches/W110.7 x D198.4 x H175.2 cm (idle)

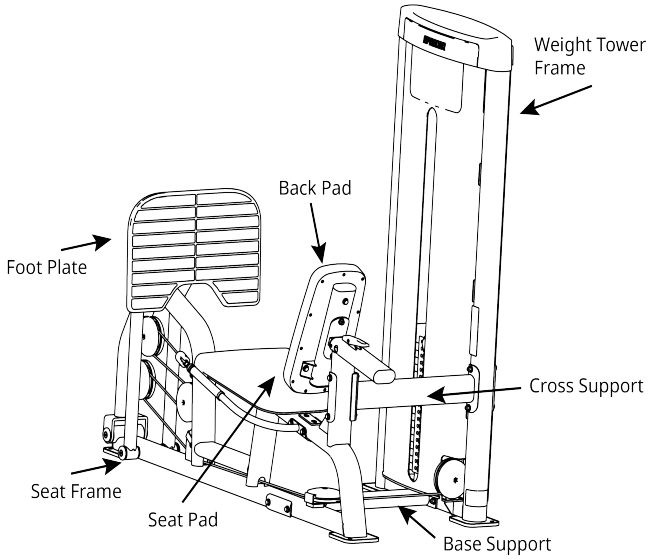


Fig. 1

Begin Assembly

CAUTION: Do not fully tighten fasteners until instructed to do so.

The equipment is designed to be freestanding; however, it can be bolted to the floor for extra stability. Precor highly recommends that the equipment be bolted to the floor to reduce the risk of toppling the equipment due to improper use. Since floor construction varies, please consult a professional building engineer for proper fastening.

Assemble frame

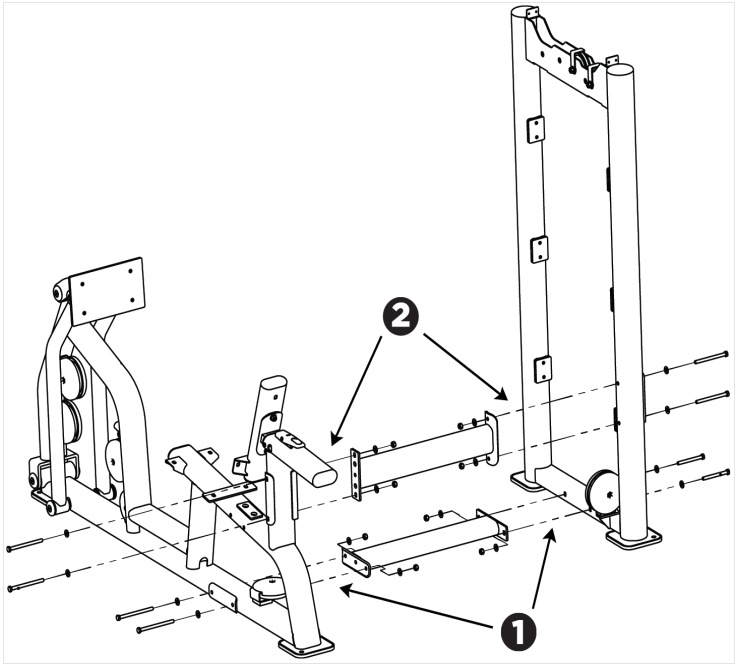


Fig. 2

1. 1. Attach the base support to the weight tower frame and seat frame using:
   2 – M10 x 100 mm hex head bolts (base support to weight tower frame)
   2 – M10 x 140 mm hex head bolts (base support to seat frame)
   8 – 11 mm flat washers
   4– M10 nylon lock nuts
   Partially tighten the fasteners so the weight tower frame and seat frame are stable.
2. 2. Attach the cross support to the weight tower and seat frame using:
   2 – M10 x 125 mm hex head bolts (cross support to weight tower frame)
   2 – M10 x 135 mm hex head bolts (cross support to seat frame)
   8 – 11 mm flat washers
   4 – M10 nylon lock nuts
   Partially tighten the fasteners.

Attach foot plate to movement arm

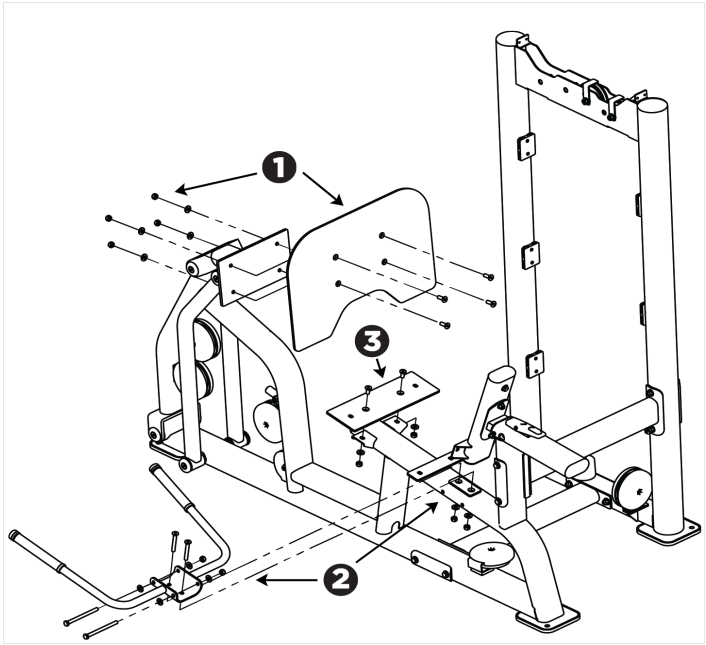


Fig. 3

1. 1. With assistance, align the foot plate to the mounting bracket on the movement arm. Have your assistant hold the foot plate to the mounting bracket on the movement arm, while you attach the foot plate using:
   - 4 – M10 x 30 mm flat head cap screws
   - 4 – 11 mm flat washers
   - 4 – M10 nylon lock nuts
2. 2. Attach the handlebar assembly to the seat frame using:
   - 2 – M10 x 130 mm hex head bolts (horizontally)
   - 2 – M10 x 75 mm flat head cap screws (vertically)
   - 6 – 11 mm flat washers
   - 4 – M10 nylon lock nuts
3. 3. Attach the seat pad base support to the seat frame using:
   - 2 – M10 x 25 mm flat head cap screws
   - 2 – 11 mm flat washers
   - 2 – M10 nylon lock nuts

Install weight stack tower

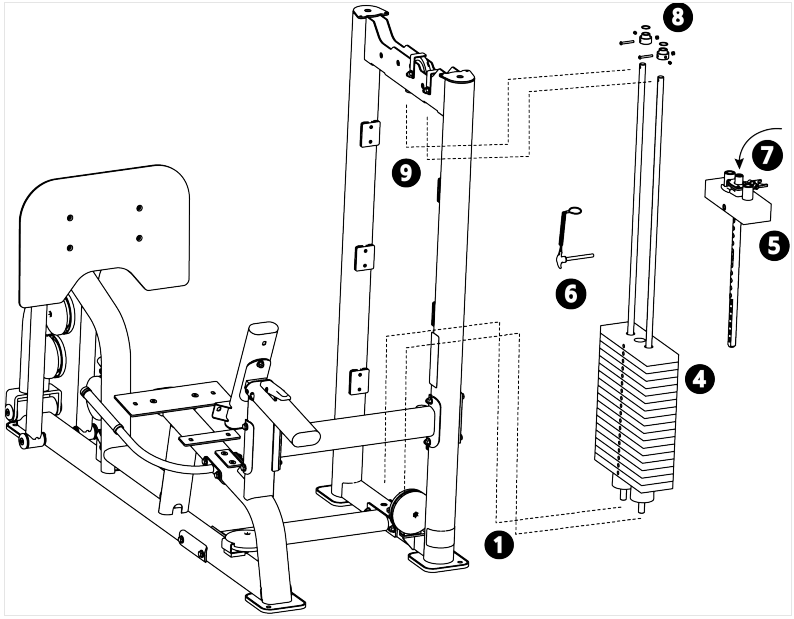


Fig. 4

1. 1. Insert the guide rods into the holes at the bottom of the weight tower frame.
   Important: A hole passes through one end of each guide rod. Be sure to insert the end without the hole into the bottom of the frame.

   2. Pull the guide rods away from the frame, keeping their lower ends engaged in the bottom of the tower frame. Slide one weight stack bumper over each guide rod, narrow end up.

   3. Check the guide rods for silicone lubricant. If you do not find any, add some of the lubricant supplied in the hardware kit to the guide rods.
4. 4. Carefully slide **eighteen** 15 lb. (7 kg) weight plates onto the guide rods, one by one.
5. 5. Slide the top weight plate (25 lb/12 kg) with weight stack stem onto the two guide rods and lower the stem through the center holes of the weight plates.
6. 6. The weight selection handle should be on the right side facing the user.
7. 7. Screw the weight stack cable loosely into the center post on the top weight plate.
8. 8. Secure the weight stack assembly to the weight tower frame. Slide the guide rod locking collar (O-rings on top) onto the guide rods (the smaller diameter shoulder on the collar should be facing up). Re-align the guide rods with the mounting holes at the top of the weight tower.
9. 9. Have your assistant hold the guide rods in place. Slide the collars up until the shoulder of each collar fits into the tower frame. Insert one M6 × 45 mm button head cap screw through the holes in each collar and each guide rod, then attach an M6 nylon lock nut to each button head cap screw. Tighten the button head cap screws securely, then attach and tighten the M8 set screws using the S4 hex key.

   10. Spray a lint-free cloth with isopropyl alcohol and wipe the front of the weight plates clean. Use a second lint-free cloth to remove any remaining alcohol before applying labels.

   11. Apply the weight plate labels (select LBs or KGs) to the right of the weight selection holes.

Install add-on weight assembly

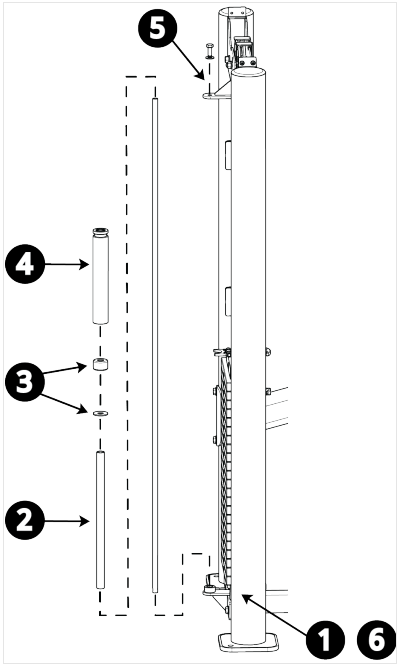


Fig. 5

1. 1. Insert the lower end of the 14 mm guide rod into the retaining ring at the bottom of the weight tower frame.

   Note: The rod has a threaded hole in one end for a screw and a hole in the side towards the other end. The threaded screw hole in the end for the screw should face up so it can be secured in step 5.

2. 2. Slide the 287 mm support tube onto the guide rod from the top down.

3. 3. Slide the support ring onto the guide rod, followed by the rubber bumper.

4. 4. Slide the 7.5 lb (3.5 kg) add-on weight onto the guide rod, making sure that the groove is at the top end of the weight.

5. 5. Attach the top of the guide rod to the bracket at the top of the weight tower frame using:

   1 – M10 x 25 mm hex head bolt

   1 – 11 mm flat washer

6. 6. Fully tighten the M8 set screw in the retaining ring using the S4 hex key.

Route the cable

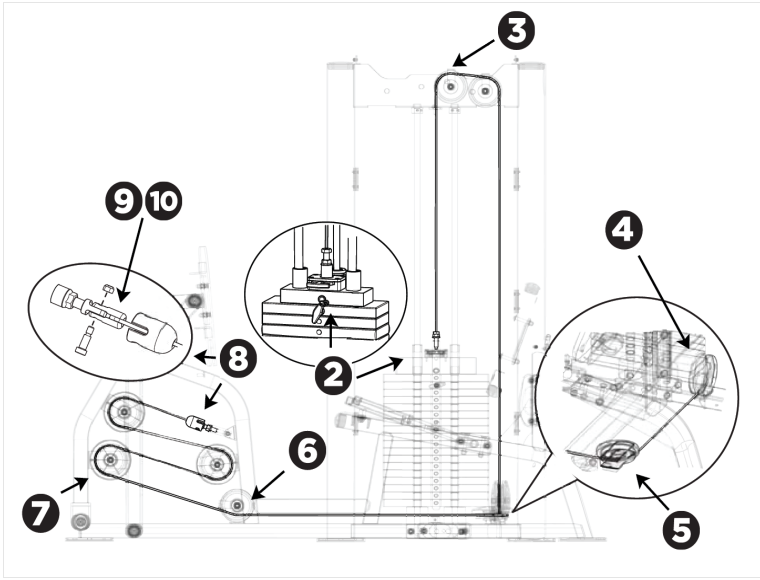


Fig. 6

Units with two or more pulleys may require removal of pulley covers to route cables.

1. 1. Remove the cable socket and the cable end cover from the end of the cable.

2. 2. If the cable assembly is not attached to the weight stack stem, then screw one end of the cable assembly into the top of the weight stack stem.

   CAUTION: Be sure to complete seven (7) turns/threads of the cable bolt into the fitting, and then tighten the jam nut. There should be a maximum of 1-1/8 inch (29 mm) between the bottom of the cable bolt head and the bottom of the flange lock nut (see Adjust cable tension section).

3. 3. Pull the cable through the top of the weight tower frame, over the top of the dual pulleys, and under the cable retaining brackets. Thread the cable down through the tower frame.

4. 4. At the bottom of the weight tower frame, thread the cable through the lower pulley bracket and under the pulley.

5. 5. Under the seat on the seat frame, thread the cable through the pulley bracket.

6. 6. Thread the cable through the slot in the seat post frame and under the lower pulley bracket attached to the seat frame assembly.

7. 7. Thread the cable under and over each pulley between the movement arm and seat frame.

8. 8. Screw the end of the cable anchor into the fitting on the seat frame. Be sure that at least seven (7) threads are inserted into the fitting. Then, tighten the jam nut to the fitting.

   CAUTION: At least seven (7) turns/threads must be inserted into the fitting before tightening the jam nut.

9. 9. Slide the cable end cover over the cable end and down the cable a few inches. Slip the ball at the end of the cable into the slot in the socket, then insert the cable anchor into the slot.

10. 10. Position the cable end cover over the socket, then insert the bolt through the holes in the cover, the socket, and the anchor. Attach the nut to the bolt and tighten completely.

Tighten all frame mounting hardware

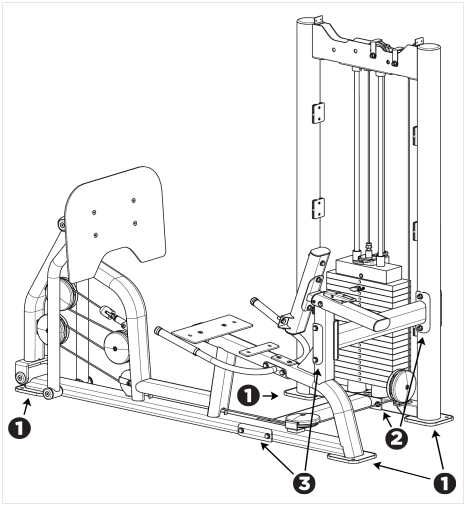


Fig. 7

1. 1. Check that the weight tower and seat frame are sitting evenly on the floor.
2. 2. On the weight tower, tighten the mounting hardware at the base support, then at the cross support.
3. 3. On the seat frame, tighten the mounting hardware at the base support, then at the cross support.

Adjust cable tension

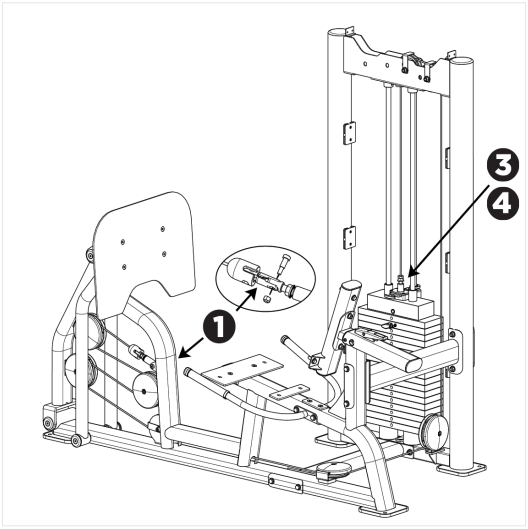


Fig. 8

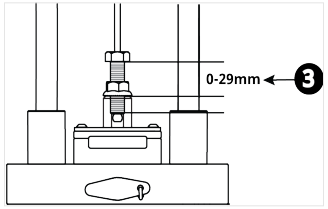


Fig. 9

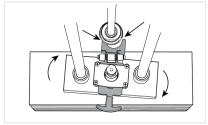


Fig. 10: Misaligned

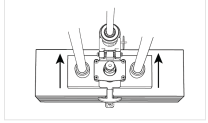


Fig. 11: Aligned

1. 1. Be sure that at least seven (7) turns/threads are engaged into the cable connection on the floating pulley, and that the jam nut is tightened securely.
2. 2. Place the weight selection pin in the top weight.
3. 3. Screw the cable bolt into the selector stem until the cable meets the following requirements:
   — At least seven (7) turns/threads (minimum) of the cable bolt into the weight selector stem.
   — A maximum of 1-1/8 inch (29 mm) between the bottom of the cable bolt head and the bottom of the flange lock nut.
   — No excess slack remains.
   — The top weight begins to separate from the second weight.
   — The cable is just loose enough to permit insertion of the selector in into each of the weight plates.
4. 4. Hold the weight tower straight while tightening the locking jam nut against the selector stem. If you do not hold the weight tower straight, it can twist (see Figure 10).
5. 5. Once tightened, verify alignment between the selector and the add-on weight.
6. 6. Check the adjustment by inserting the weight pin into every weight plate hole. The weight pin should slide easily in and out of each weight plate.

Attach the pads

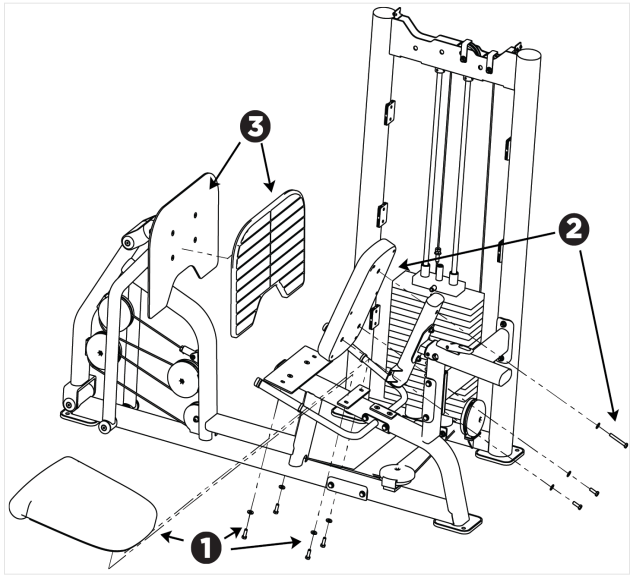


Fig. 12

1. 1. Attach the seat pad to the seat mounting bracket using:
   Note: The wide end of the seat pad should be facing the foot plate.
   4 – M10 x 30 mm hex bolts
   4 – 11 mm flat washers
2. 2. Attach the back pad to the back pad frame using:
   Note: The narrow end of the back pad should face upward.
   2 – M10 x 30 mm hex bolts
   1 – M10 x 75 mm hex bolt
   3 – 11 mm flat washers

3. Attach the rubber foot pad to the foot plate by positioning the top edge of the rubber foot pad over the lip of the foot plate, and pressing the side edges of the foot pad over the sides of the foot plate. Press the bottom edge of the foot pad over the bottom side of the footplate.

Install weight stack shroud and top cap

The inside shroud has a slot for weight selection. Both shrouds have three slotted tabs on each side that fit into the shroud clips mounted to the inside of the weight tower uprights.

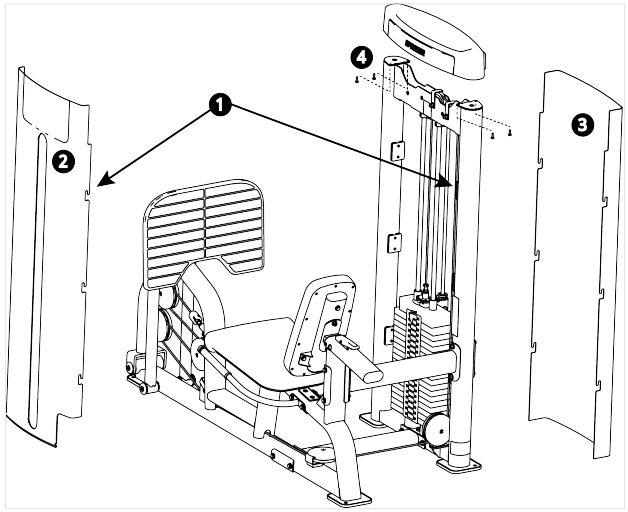


Fig. 13

1. Align the slotted tabs on the inside shroud with the shroud clips on both sides of the weight tower.
2. Press the hooks into the clips and lower the shroud securely into place.
3. Repeat steps 1 and 2 to install the outside shroud.
4. Place the top cap on top of the shrouds so that the top edges of the shrouds fit into the slot between the lip and the ribs of the top cap. Secure the top cap to the weight tower frame using:

   4 – M6 x 16 mm pan-head Phillips screws

Bolt equipment to floor

Precor recommends that the strength equipment be bolted down at all anchoring points. Bolting is made possible through the bolt holes on each foot. The inside diameter of each hole is 14.3 mm.

NOTE As floor materials vary, it is important to consult a licensed contractor to advise on proper bolting techniques and appropriate fastener types.

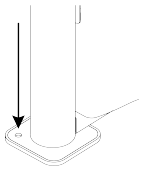


Fig. 14

CAUTION Standards can change. Precor recommends you keep apprised of your local industry standards. Precor shall not be held liable for failure to properly bolt the strength equipment to the floor.

Apply labels

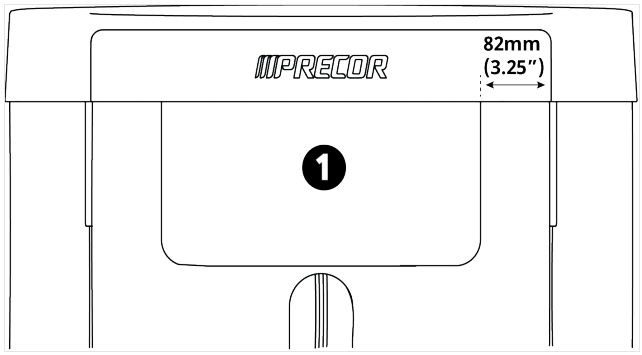


Fig. 15

1. Attach the **Instructional label** to the inside shroud under the top cap. Center and place the label flush with the bottom of the cap. To help center, align the right edge of the label 82 mm (3.25") from the edge of the raised section of the top cap.

Verify operation of equipment

Once assembly is complete, verify safe operation by checking the following points:

- Cable tension is correct and the cable is moving smoothly on its pulleys.
- Movement arm is stable and moves smoothly through its range of motion.
- Adjustment points are stable and move smoothly through their range of motion.

Disassemble the equipment

You may occasionally need to disassemble this unit to move it between rooms or buildings. In such cases, reverse the assembly steps in this manual to disassemble. After the unit has been moved, follow the steps in this manual to reassemble it.

WARNING: You will need assistance to disassemble this unit. The weight tower can become unstable during parts when disassembling. Make sure the weight tower is supported safely throughout the process and NEVER attempt to disassemble by yourself.

Maintenance information

It is important that the equipment be maintained in accordance with the Vitality Selectorized Line Maintenance Guide. Visit any Vitality Selectorized product page at ***www.precor.com*** to view the guide.