NAUTILUS

CORE HEALTH & FITNESS

HUMAN SPORT SHOULDER CHEST

OWNER'S MANUAL



IMPORTANT SAFETY INSTRUCTIONS

WARNING!

Before using this product, it is essential to read the ENTIRE Owner's Manual and ALL installation instructions. The Owner's Manual describes equipment operation and instructs members on how to use correctly and safely.

Read all warnings posted on the machine.

Health related injuries may result from incorrect or excessive use of exercise equipment. Core Health & Fitness strongly recommends you to encourage your members to discuss their health program or fitness regimen with a health care professional, especially if you or they have not exercised for several years, are over 35, or have known health conditions.

⚠WARNING: to reduce the risk of serious injury to persons using this equipment, read and follow all of these warnings:

1. Assemble and operate the machine on a solid level surface. Position the machine with a minimum of 24 inches (0.6 meters) of clearance on at least one side to allow for ease of mounting and dismounting. Allow for 24 inches (0.6 meters) of clearance behind the machine (See Fig. 1). These dimensions are the recommended minimum distances.

   The actual area for access and passage shall be the responsibility of the facility and should take into account this training envelope, Americans with Disabilities Act Accessibility Guidelines (ADAAG) requirements and any required local codes or regulations (www.access-board.gov/ada).
2. Do not exceed the maximum allowable weight limit of:
   - 350 lbs. / 160 kg.
3. Never use dumbbells or other means to incrementally increase the weight resistance. Use only those means provided by Core Heath & Fitness.
4. Statement of Purpose: The Human Sport Shoulder Chest is designed to provide a targeted upperbody strength-training solution by enabling pressing and fly-based movements within a single integrated frame. The unit enables users to develop the pectoralis major, anterior deltoid, and supporting shoulder musculature through guided, resistance-based movements that maintain proper biomechanics and postural alignment throughout each exercise.
5. Ensure all adjustment and locking features are properly secured before using the equipment.
6. Care should be used when mounting or dismounting the equipment.
7. Keep top surface of the steps clean and dry. If the steps surface becomes wet, dry the surface before using. Do not use with wet shoes, wet feet, or socks.

   Gardez la surface supérieure des marches propre et sèche. Si la surface est mouillée, séchez-la avant utilisation. Ne pas utiliser avec des chaussures, des pieds ou des chaussettes mouillés.
8. When adjusting any seat, knee stabilization pad, range of motion limiter, foothold pad or any other type of adjuster, make certain that the adjusting pin is fully engaged in the hole to avoid injury. If any of the adjustment devices are left projecting, they could interfere with the user's movement.
9. Do not over exert yourself during exercise. Stop exercising if you feel pain or tightness in your chest, become short of breath or feel faint. If you feel pain or experience any abnormal symptoms, stop exercising and consult your health care provider.
10. ⚠ **WARNING:** Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint stop exercising immediately
11. ⚠**WARNING:** Risk of personal injury – Keep children under the age of 13 away from machine.
12. This machine is not intended to be used by children. It is not intended to be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless given instruction and under the personal supervision concerning use of the machine by a person responsible for their safety. Do not leave children unsupervised around the machine, keep them away from extended foot support (or other similar parts).
13. This equipment is designed for use in a commercial gymnasium or health club only. To ensure the proper use of the equipment in a safe manner, all users of the equipment should read this manual before using the machine. This machine should be made a part of your club training program in order that the equipment is used by your members in a safe manner as intended. In addition to instructing the club members in the proper use of the equipment, the club member should obtain a complete physical examination form their health care provider before beginning any exercise program.
14. This machine is for indoor use only.
15. The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.
16. Use only replacement components supplied by Core Heath & Fitness. Substitutes are forbidden and will void all warranties.
17. It is the purchaser's sole responsibility to properly instruct its end users and supervising personnel as to the proper operating procedures of all equipment.
18. All facilities in which Core Health & Fitness or any installer installs any Core Health & Fitness equipment assume all risks associated with the surfaces to which such equipment is fastened, anchored, or installed, including risk that the installation is not proper owing to that structure.

SAVE THESE INSTRUCTIONS

MAINTENANCE

Working on this product will require basic and/or sometimes specialty tools based on the type of service that will be performed at any time. To assist, we recommend having the tools listed available when performing maintenance.

- Metric & Imperial Allen Key Sets
- Torque Wrench
- Metric & Imperial Open-Ended Wrench Sets
- Large Adjustable Crescent Wrench
- Metric & Imperial Socket Set

MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping the product in safe operating condition. Failure to conduct preventative maintenance by the owner may cause the product to operate in an unsafe manner. Equipment needs to be inspected and maintained at regular intervals per the preventative maintenance schedule provided in this manual.

Cleaning

Keeping your Strength units clean is an important component of preventative maintenance and the overall aesthetics of your product. While your clients will appreciate clean equipment free of sweat, dirt and other contaminants proper care and cleaning will extend the life of your product and reduce premature aging and wear. See the maintenance schedule for recommended frequency.

- Guide rods should be cleaned monthly with a cotton cloth prior to lubrication. It is critical to remove all old lubricants and accumulated contaminants prior to applying lubrication.
- Internal tower and weight stack should be cleaned once every six months with a mild soap and water dampened cloth to remove all dust and accumulated contaminants. Caution should be taken to not leave excess moisture after cleaning.

Inspection

Visual inspection of your units will insure a safe environment for your clients and alert you to any issues that may require maintenance prior to equipment failure. Proper, timely visual inspection is a critical component to the long term care of your product.

- Cables should be inspected weekly for damage including cracked vinyl housing, fraying metal strands, twisting or excessive rubbing on pulleys. Any incident of wear should elicit immediate replacement of damaged cable. While the full length of the cable should be inspected, particular focus should be placed on specific areas where the cable passes through pulleys or closely adjacent to stationary components of the product.
- Cables may become loose over time and require adjustment to maintain proper function – refer to your specific installation manual for cable tension instructions.
- Visually inspect all position selector pins weekly for damage and/or excessive wear and replace pin assembly if damage and/or excessive wear is identified.
- Fasteners, hardware and attachments should be checked monthly for looseness. Tighten as required using appropriate tools.
- Handgrips should be checked for wear or damage monthly and replaced as needed.
- Upholstery should be inspected for wear or damage monthly and replaced as needed.
- Pulleys should be inspected every six months for integrity, cracking or rubbing leading to excessive wear. Any incident of wear should elicit immediate replacement of damaged pulley.
- Main frame and tower should be inspected every six months for signs of unusual wear, corrosion or structural integrity issues.
- Inspect the cable end weekly for damage and to ensure the locknut is secured in place. Any issue in this area shall elicit immediate service and in the case of damage, replacement of the cable assembly.
- Also, upon inspection, if position selector pin cannot be fully engaged into the selector hole (as indicated on the warning label on the product), the product shall be marked out of service until an authorized service technician can evaluate the product for further necessary action.

Lubrication

Proper cleaning lubrication of guide rods will insure that each machine operates at its highest potential and that your clients continue to enjoy a smooth efficient motion while exercising. Often lubrication is either neglected or in many cases facilities over lubricate without cleaning the old dirty lubricant off prior to applying the new. This results in a build up of dirty contaminants that will cause premature wear and poor operational function.

- Use a general purpose lubricant that does not contain Teflon or solvent (such as 3-IN-ONE® oil.) Apply the lubricant to a cotton cloth, and then run the cotton cloth up and down the guide rods as needed to apply a thin coat.
- Also apply oil to the incremental weight guide tracks.
- In some environments that are extremely dry or dusty more frequent cleaning and lubrication may be required.

Preventive Maintenance Cautions

- While maintaining equipment you will want to avoid spraying any liquids directly onto any surface of the unit. Always spray cleaning solutions onto a clean towel first then wipe the unit.
- Should other cleaning methods or products be employed, carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.
- Cleaners/Disinfectants should be used at manufacturer recommended dilutions and never in concentrated form.
- Never use abrasive cleaning liquids, cleaning liquids with an oil base, ammonia, or alcohol.
- Cleaning solutions can be made of a 5:1 dilution ratio, where 5 parts water are mixed with 1 part of Simple Green®, Fantastik®, or 409®.
- Inclusion in this document does not imply “fit for use.” Customers should first determine if products are appropriate for use on their surfaces

⚠**CAUTION:** Cleaning products may be harmful/irritating to your skin, eyes, etc. Use protective gloves and eye protection. Do not inhale or swallow any cleaning product. Protect surrounding area/clothing from exposure. Use in a well-ventilated area. Follow all product manufacturer’s warnings. CORE Health and Fitness cannot be held responsible for damage or injuries resulting from the use or misuse of cleaning products.

⚠WARNING: Replace all worn cables immediately.

The following conditions indicate some types of wear.

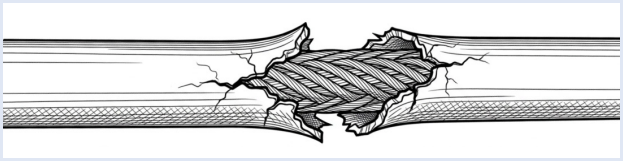


Fig. 1 Torn or Cracked Cable Sheath that exposes cable

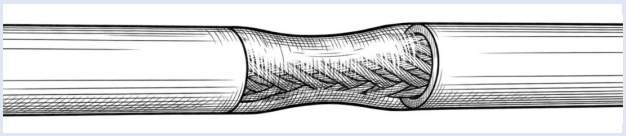


Fig. 2 Stretched Cable Sheath



Fig. 3 Kink in the Cable

MAINTENANCE SCHEDULE

With durable, high performance components, this equipment is designed for heavy usage with minimal maintenance required. To keep it in top condition, perform regular daily, weekly and monthly preventive maintenance routines outlined below.

The safety and integrity of this machine can only be maintained when the equipment is regularly examined for damage and wear and repaired. It is the sole responsibility of the owner of this equipment to ensure that regular maintenance is performed. Worn or damaged parts must be replaced immediately or the equipment removed from service until the repair is made.

Maintenance Schedule	Daily	Weekly	Monthly	Every 6 Months
Inspect				
Cables		✓		
ROM Pins		✓		
Upholstery			✓	
Handgrips			✓	
Fasteners			✓	
Labels			✓	
Pulleys				✓
Main Frame				✓
General Maintenance				
Lubricate Guide Rods			✓	
Cleaning				
Upholstery	✓			
Main Frame		✓		
Weight Stack and Guide Rods			✓	
Inside the Weight Tower				✓

Table 1

SAVE THESE INSTRUCTIONS

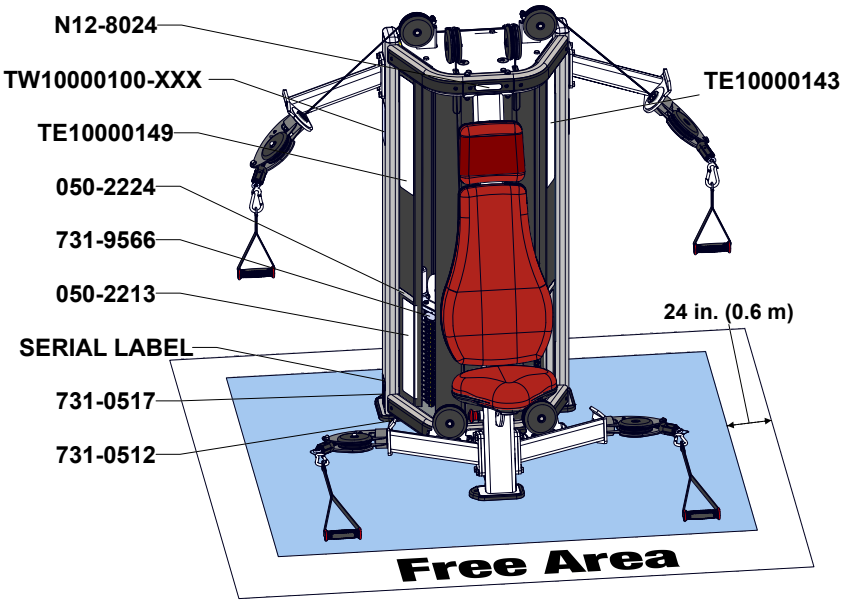


Fig. 4 Required Clearance & Label Locations

Product Details

Product SKU	Name
9-HSSC3	**Human Sport Shoulder Chest**


Weight:	655lbs	298kg
Stack Weight:	88lbs x2	40kg x2
Dimensions:	63 x 45 x	64in
	160x 114 x	163cm

This page shows the location of the warning labels and communication stickers placed on the equipment as part of the manufacturing process. It is critical that owners maintain the integrity and placement of these stickers. If you find any stickers missing or damaged the replacement numbers are shown on the support site and in Fig. 4. Contact Support and Service to order replacements.


Note: Sticker/Label images are not to scale.




731-0517
STICKER, WARNING, BOLT DOWN

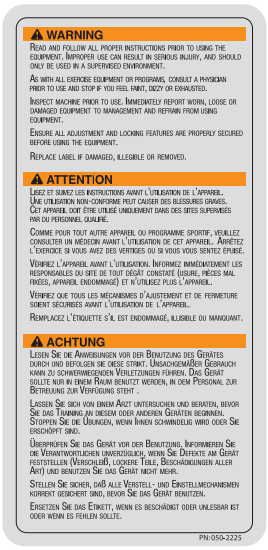

050-2225
WARNING DECAL MULTI LANGUAGE

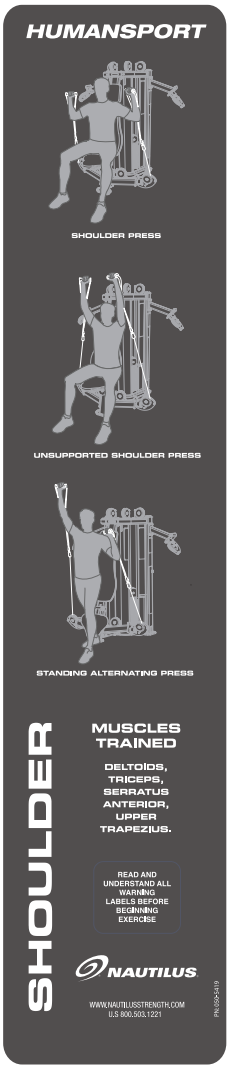

050-5419
PLACARD, HSSC3, CHEST, RIGHT

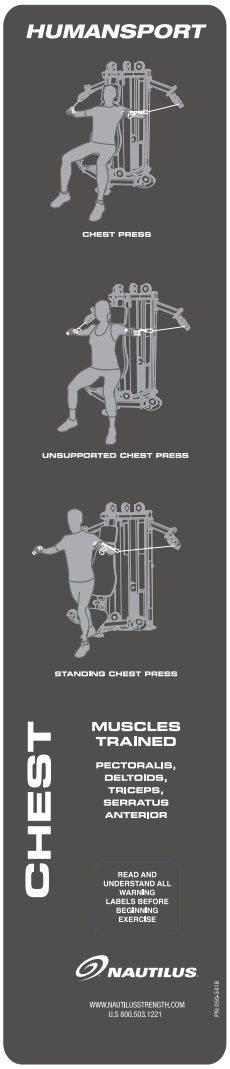


050-5418
PLACARD, HSSC3, CHEST, LEFT




N12-8024
DECAL,NAUTILUS,DECO, 0.91" x 3.90"




731-0512
STICKER, CAUTION, PINCH POINT ICON





050-2224
STICKER,LNL, HS (LEFT & RIGHT)

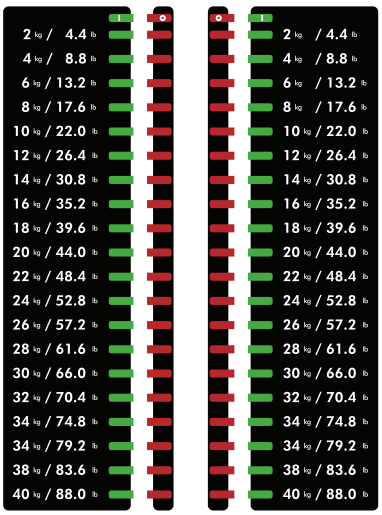

050-2213
PLACARD, HSSC3, CHEST, RIGHT



050-2212
STICKER, SWITCH, HS



N12-8025
DECAL HUMANSPORT DECO

ASSEMBLY

REQUIRED TOOLS

- Standard (Imperial) Allen Socket Set
- Metric & Standard (Imperial) Allen Key Set
- Metric & Standard (Imperial) Open-Ended Wrench Set
- Torque Wrench



PACKAGING REMOVAL:

Carefully remove all packaging materials that wrap the equipment. If parts are missing see **Support & Service**

DO NOT USE A KNIFE OR BOX CUTTER AS YOU MAY DAMAGE THE EQUIPMENT.

Before beginning to assemble the product, remove any sub-components from the pallet and set aside for later assembly. Once all packaging has been removed, lay all parts out in a clean open area to prepare for assembly. The list of available components is in Table 2 and See Fig. 5. to the right.

Should a purchased component not be present or if you have any operational questions, please refer to **SUPPORT & SERVICE**.

All equipment MUST be secured (bolted and tightened) to a solid, level surface, using all of the anchoring holes provided, to stabilize and eliminate rocking or tipping over. Shim any mounting surface that does not rest thoroughly on the floor using flat washers, DO NOT force the foot to contact the ground with anchors. Fasteners must be a 16mm bolt of grade 12.9 or a 5/8" bolt of grade 8 or better and be installed per the bolt manufacturer's specifications. Due to the wide variety of flooring on which equipment may be anchored or installed and differences in applicable local building codes, Core Health & Fitness is not responsible for any damage to the flooring that may result due to anchoring or installing equipment to the floor and for compliance with local building codes. Only licensed contractors or certified installers should be used to insure proper anchoring, installation, and compliance with local building code.

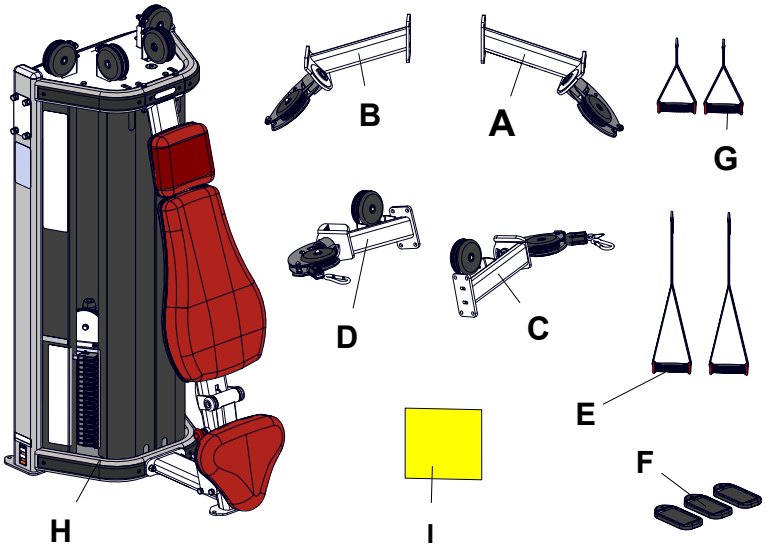


Fig. 5 What's In The Box

#	PN	Description
A	68-2003-XX	EXTENSION ARM HS-SC UPPER LEFT
B	68-2004-XX	EXTENSION ARM HS-SC UPPER RIGHT
C	68-2005-XX	EXTENSION ARM HS-SC LOWER LEFT
D	68-2006-XX	EXTENSION ARM HS-SC LOWER RIGHT
E	730-0122	ASSY,HANDLE,STIRRUP,STARTRAC,SMALL
F	731-2647	FOOT,LONG,LEVERAGE
G	731-3883	ASSY,HANDLE,STIRRUP,STARTRAC,SMALL
H	9-HSSC3-XXXXX	HUMAN SPORT SHOULDER CHEST
I	HSSC3-HC	HARDWARE CARD, HSSC3

Table 2

ASSEMBLY PROCEDURE Note that some hardware has been enlarged for clarity

1. Install the three Rubber Feet (731-2647) onto the frame.
2. Using an 8mm allen key, install the Lower Left Extension Arm (68-2005-XX) to the frame with four M12 X 20mm bolts (GBT5783 M12X20T 2DCN) and four M12 toothed washers (GBT861.1 12N 0DCZ).
3. Repeat Step 2 for the Lower Right Extension Arm (68-2006-XX).

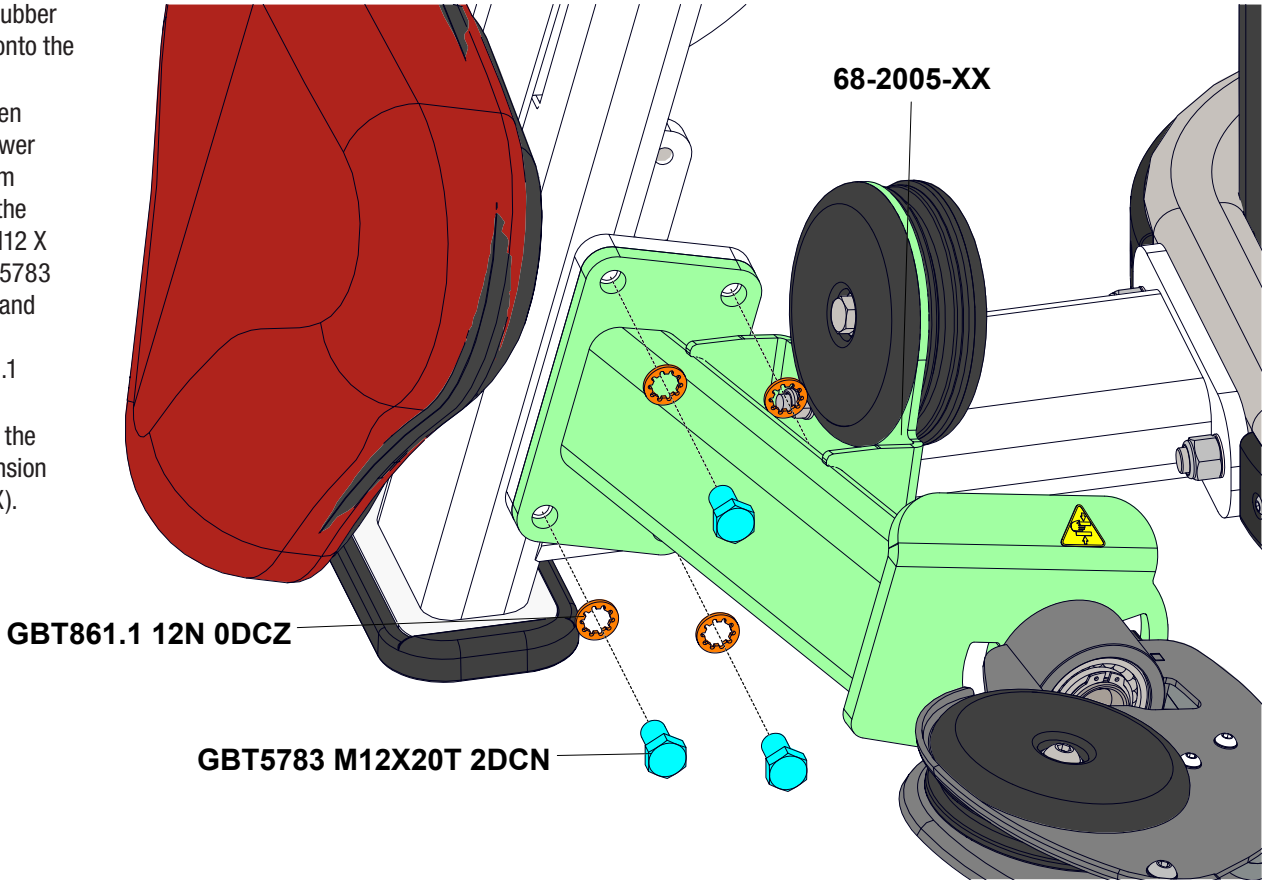


Fig. 6

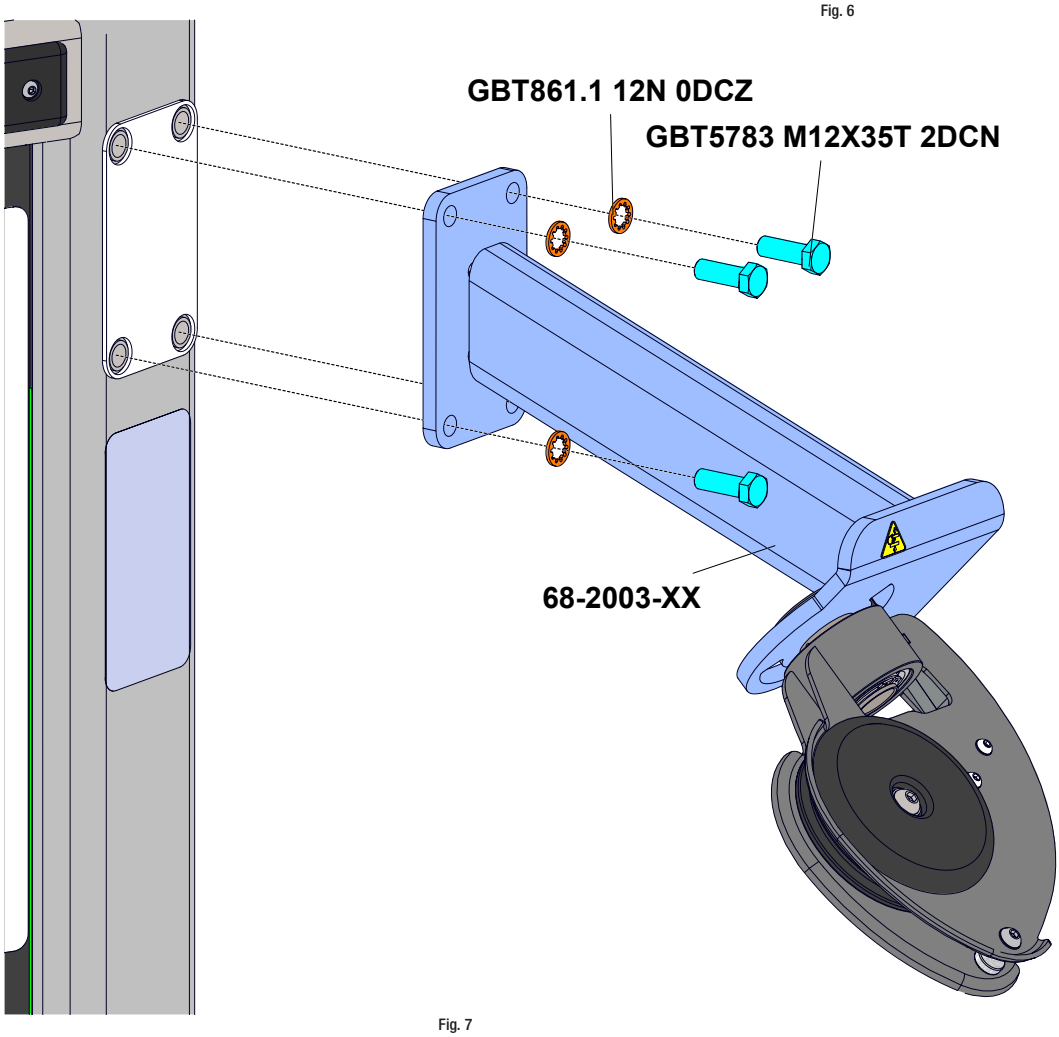


Fig. 7

4. Using an 8mm allen key, install the Upper Left Extension Arm (68-2003-XX) to the frame with four M12 X 20mm bolts (GBT5783 M12X20T 2DCN) and four M12 toothed washers (GBT861.1 12N 0DCZ).
5. Repeat Step 4 for the Upper Right Extension Arm (68-2004-XX).

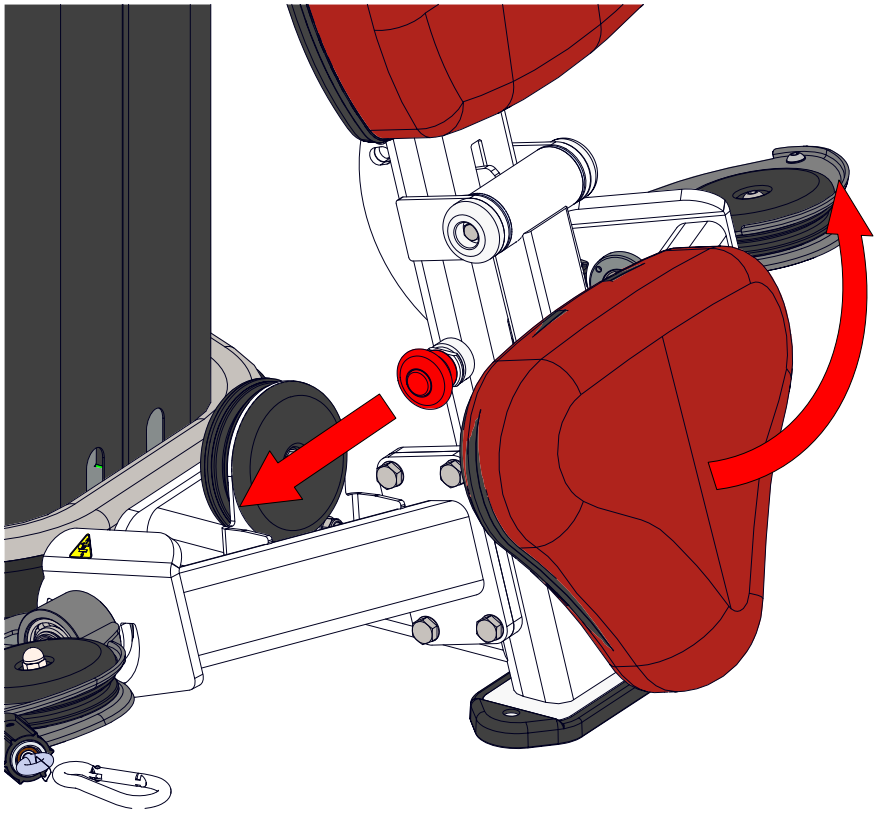


Fig. 8

6. Once all the extension arms have been attached, pull outwards on the pop pin to release the seat, pull upwards, and release the pop pin to secure the seat.

Assembly is complete. After assembly, a complete visual inspection, and test of the features and functions of the assembled unit must be made prior to use.

REPLACEMENT PARTS


Replacement parts for this unit are available through SUPPORT & SERVICE. Parts listed are shown on the following pages and interactive drawings available on Core Connect. Listed parts may change, please check Core Connect for latest versions and other SKU's covered by this manual:


9-HSSC3-XXXXX - HUMAN SPORT SHOULDER CHEST

Part Number	Qty	Description
17-4146	2	POST, CENTER, TOP PLATE, 19 HOLE, HS
27-0035-60	6	COVER, PULLEY, FLAT, BLACK
27-0040-XX	2	Bracket, Pulley Top Weight, Rear, HS
27-0041	2	Bracket, Pulley Top Weight, Rear, HS
27-0047	4	ASSY,SWIVEL,HANDLE,HUMAN SPORT
27-0048	2	ASSY TOP WT FOR HS WT STACK
27-0052	4	Nut, Swivel Pulley Spindle, HS
27-0053	4	Bracket, Pulley, Swivel, Pivot Spindle HS
27-0060-XX	1	Shield, HS Tower, Front, Left
27-0061-XX	1	Shield, HS Tower, Front Right
27-0062-XX	1	Shield, HS Tower, Rear
27-0063-XX	2	Shield, HS Tower, Left/Right
27-0066	4	Bumper, Swivel Pulley
27-0070-XX	2	Plate, Spacer Extension Arm, HS
27-0075	1	Plate, Index Locking, Seat, SC-HS
27-0077	4	Simulated Wood Grain Trim Tower Sides
27-0078	1	Simulated Wood Grain Trim Tower Front Top
27-0080	2	TRIM, BACK, TOP & BOTTOM, PLASTIC, GRAY, HS
27-0091-XX	2	Finger Guard HS
27-0525	4	CAP,GUIDE ROD
27-0776	4	SPACER, PULLEY BRACKET, HUMAN SPORT
050-2213	1	DECAL, WEIGHT STACK - HS
050-2224	1	STICKER,LNL, HS (LEFT & RIGHT)
050-2225	2	DECAL, WARNING MULTI LANGUAGE - HS
050-5418	1	PLACARD, HSSC3, CHEST, LEFT
050-5419	1	PLACARD, HSSC3, SHOULDER, RIGHT
61-2011-XX	1	HS Shoulder Chest Top Plate Assembly
66-2004-XX	1	FRAME SEAT HSSC
68-2003-XX	1	EXTENSION ARM HS-SC UPPER LEFT
68-2004-XX	1	EXTENSION ARM HS-SC UPPER RIGHT
68-2005-XX	1	EXTENSION ARM HS-SC LOWER LEFT
68-2006-XX	1	EXTENSION ARM HS-SC LOWER RIGHT
95-0785	4	KIT, HUMAN SPORT, PULLEY, ROLLED EDGE (W/O C-WEIGHT)
110-3992	10	SCREW, M8x1.25, 45mm, FHM, AS, BEC, NP, Gr 12.9
110-4017	14	NUT,M10X1.5,NYLOC
300-0155	8	THREADED INSERT, M12
730-0122	2	ASSY,HANDLE,STIRRUP,STARTRAC,SMALL
730-0845	4	SPEED NUT,U-STYLE CLIP-ON NUT,M8
731-0022-00XX	1	ASSY,UPHOLSTERY,HEAD REST
731-0040	2	STOP,Ø50X26,RUBBER
731-0097-00XX	1	ASSY,SEAT BOTTOM,STD
731-0110	4	BUSHING,TOP PLATE,GUIDE RODE
731-0111	4	STOP,BUMPER,WGT PLT
731-0112	4	SET COLLAR,GUIDE ROD,Ø22.4mm
731-0165	20	CAP,PLASTIC,PULLEY,Ø120mm
731-0209	2	CAP, END, 110 X 50
731-0255B	1	PLASTIC,HEAD REST,CHEST PRESS
731-0355	45	WASHER,PLAIN,M8,NARROW
731-0365	8	NUT,M8 X 1.25,NYLOC JAM
731-0512	6	STICKER,WARNING,PINCH
731-0517	1	STICKER, WARNING, BOLT DOWN
731-0550-01	1	COVER,SEAT BACK,STD.,LEFT
731-0550-02	1	COVER,SEAT BACK,STD,RIGHT
731-0551-00XX	1	ASSY,BACK REST, STD,ONE COLOR


Part Number	Qty	Description
731-0562	1	NUT,M8 X 1.25,NYLOC
731-0643	1	PLUG, TUBE, 60MM X 40MM
731-0732	4	GUIDE ROD, Ø22MM X 1440MM
731-1423-KT1	38	KIT, SWITCH, LNL, STRAIGHT
731-2016	4	CLIP,CARABINEER,3/8 IN.,CLP
731-2647	3	FOOT,LONG,LEVERAGE
731-3883	2	ASSY,HANDLE,STIRRUP,STARTRAC,SMALL
731-6209	1	ASSY,PULL PIN,12.5 X 102.5 PIN
731-7509	76	MOLLY, M6X28,LNL
731-8442	2	CAP, BEARING 1 3/4 RND
731-8443	2	Hub Adapter Molded
731-8444	1	SPACER, AXLE, HSSC3-01-05
731-8445B	1	SHROUD, SEAT BOTTOM
731-8832	14	RACE,WEAR SLEEVE,CABLE, w/RELEAF
731-9314	1	PULL PIN,HSFT,NEW CAP,KIT
731-9458	2	STICKER,SWITCH, HS
GB-T 70.1 M10X16	1	SCREW, M10 X 16MM, SHC
GB-T 70.1 M8X30	14	SCREW, M8 X 1.25, 30MM, SHC, HK, CS
GB-T 70.2 M10X45	4	SCREW,M10 X 1.5,45MM,BHC,HK
GB-T 70.2 M6X16	10	SCREW,M6 X 1.0,16mm,BHC,HK
GB-T 70.2 M6X35	8	SCREW,M6X1.0,35MM,BHC,HK
GB-T 70.2 M8X35	6	SCREW,M8 X 1.25,35mm,BHC,HK
GB-T 70.2 M8X45	2	SCREW,M8 X 1.25,45MM,BHC,HK
GB-T 70.3 M10X12	1	SCREW, M10 X 12MM, FHM
GB-T 78 M10X12	8	SCREW,M10 X 1.5,12mm,FPS,HK
GB-T 79 M6X12	4	SCREW,M6 X 1.0,12MM,CPS,HK
GB-T 97.1 10	44	WASHER,PLAIN,M10
GB-T 97.1 6	4	WASHER,PLAIN,M6
GB-T 845 ST3.5X9.5-C-H	2	SCREW,M3.5 X 9.5,SELF TAPPING
GB-T 861.1 10	1	LOCK WASHER, TOOTH, M10
GB-T 861.1 6	16	LOCK WASHER, TOOTH, M6
GB-T 861.1 12	18	LOCK WASHER, TOOTH, M12
GB-T 861.1 8	8	LOCK WASHER, TOOTH, M8
GB-T 879.1 4X60	2	Roll Pin 4mm x 60mm Long
GB-T 889.1 M10	4	NUT,M10X1.5,NYLOC
GB-T 889.1 M12	2	NUT,M12X1.75, NYLOC
GB-T 889.1 M8	14	NUT,M8 X 1.25,NYLOC JAM
GB-T 894.1 30	4	SNAP RING, 30MM, EXTERNAL
GB-T 923 M10	4	NUT, ACORN, M10, BEC
GB-T 923 M6E	8	NUT,ACORN,NYLOC 6/6,M6 1.0
GB-T 923 M8	4	NUT,M8x1.25,ACORN


Part Number	Qty	Description
GB-T 5782 M10X100	2	SCREW, M10 X 100MM,GD12.9,DACROMET
GB-T 5782 M10X50	8	SCREW, M10X50MM, DACROMET
GB-T 5782 M8X140	1	SCREW M8X140,G12.9 DACROMET
GB-T 5783 M10X25T	8	SCREW, M10 X 25MM, HHC
GB-T 5783 M12X20	8	SCREW, M12 X 20MM, HHC
GB-T 5783 M12X35	8	SCREW, M12 X 35MM, HHC
GB-T 5783 M6X16	4	SCREW, M6 X 16MM, HHC
GB-T 5783 M8X20	8	SCREW, M8 X 20MM, HHC
GB-T 5783 M8X25T	2	SCREW,M8 X 1.25,25MM,HHM,HE
HSAC3-01-04	1	BRACKET, FRAME SEAT HSSC
HSSC3-01-04-01-XX	1	Seat, Folding, HS Shoulder Chest
N03-1068	2	Bear Nut for HS Weight Stack Center Pin
N04-5249	2	Lock Washer 16mm
N06-8018	2	Cable Assembly HS SC
N07-1250	8	BEARING 6006-2RS 30MM X 55MM X
N09-1301	76	BUSHING,WGT PLT,5kg
N09-5030	1	FOOTPAD MOLDED BLACK
N09-8341	12	120mm OD pulley with 17mm ID Bearing
N12-8024	1	DECAL, NAUTILUS,DECO, 0.91” x 3.90”
N12-8025	2	DECAL, HUMANSPORT, 3.12” x 23” (tower)
UA72012444	38	ASSY, PLATE, WEIGHT, HSAC3

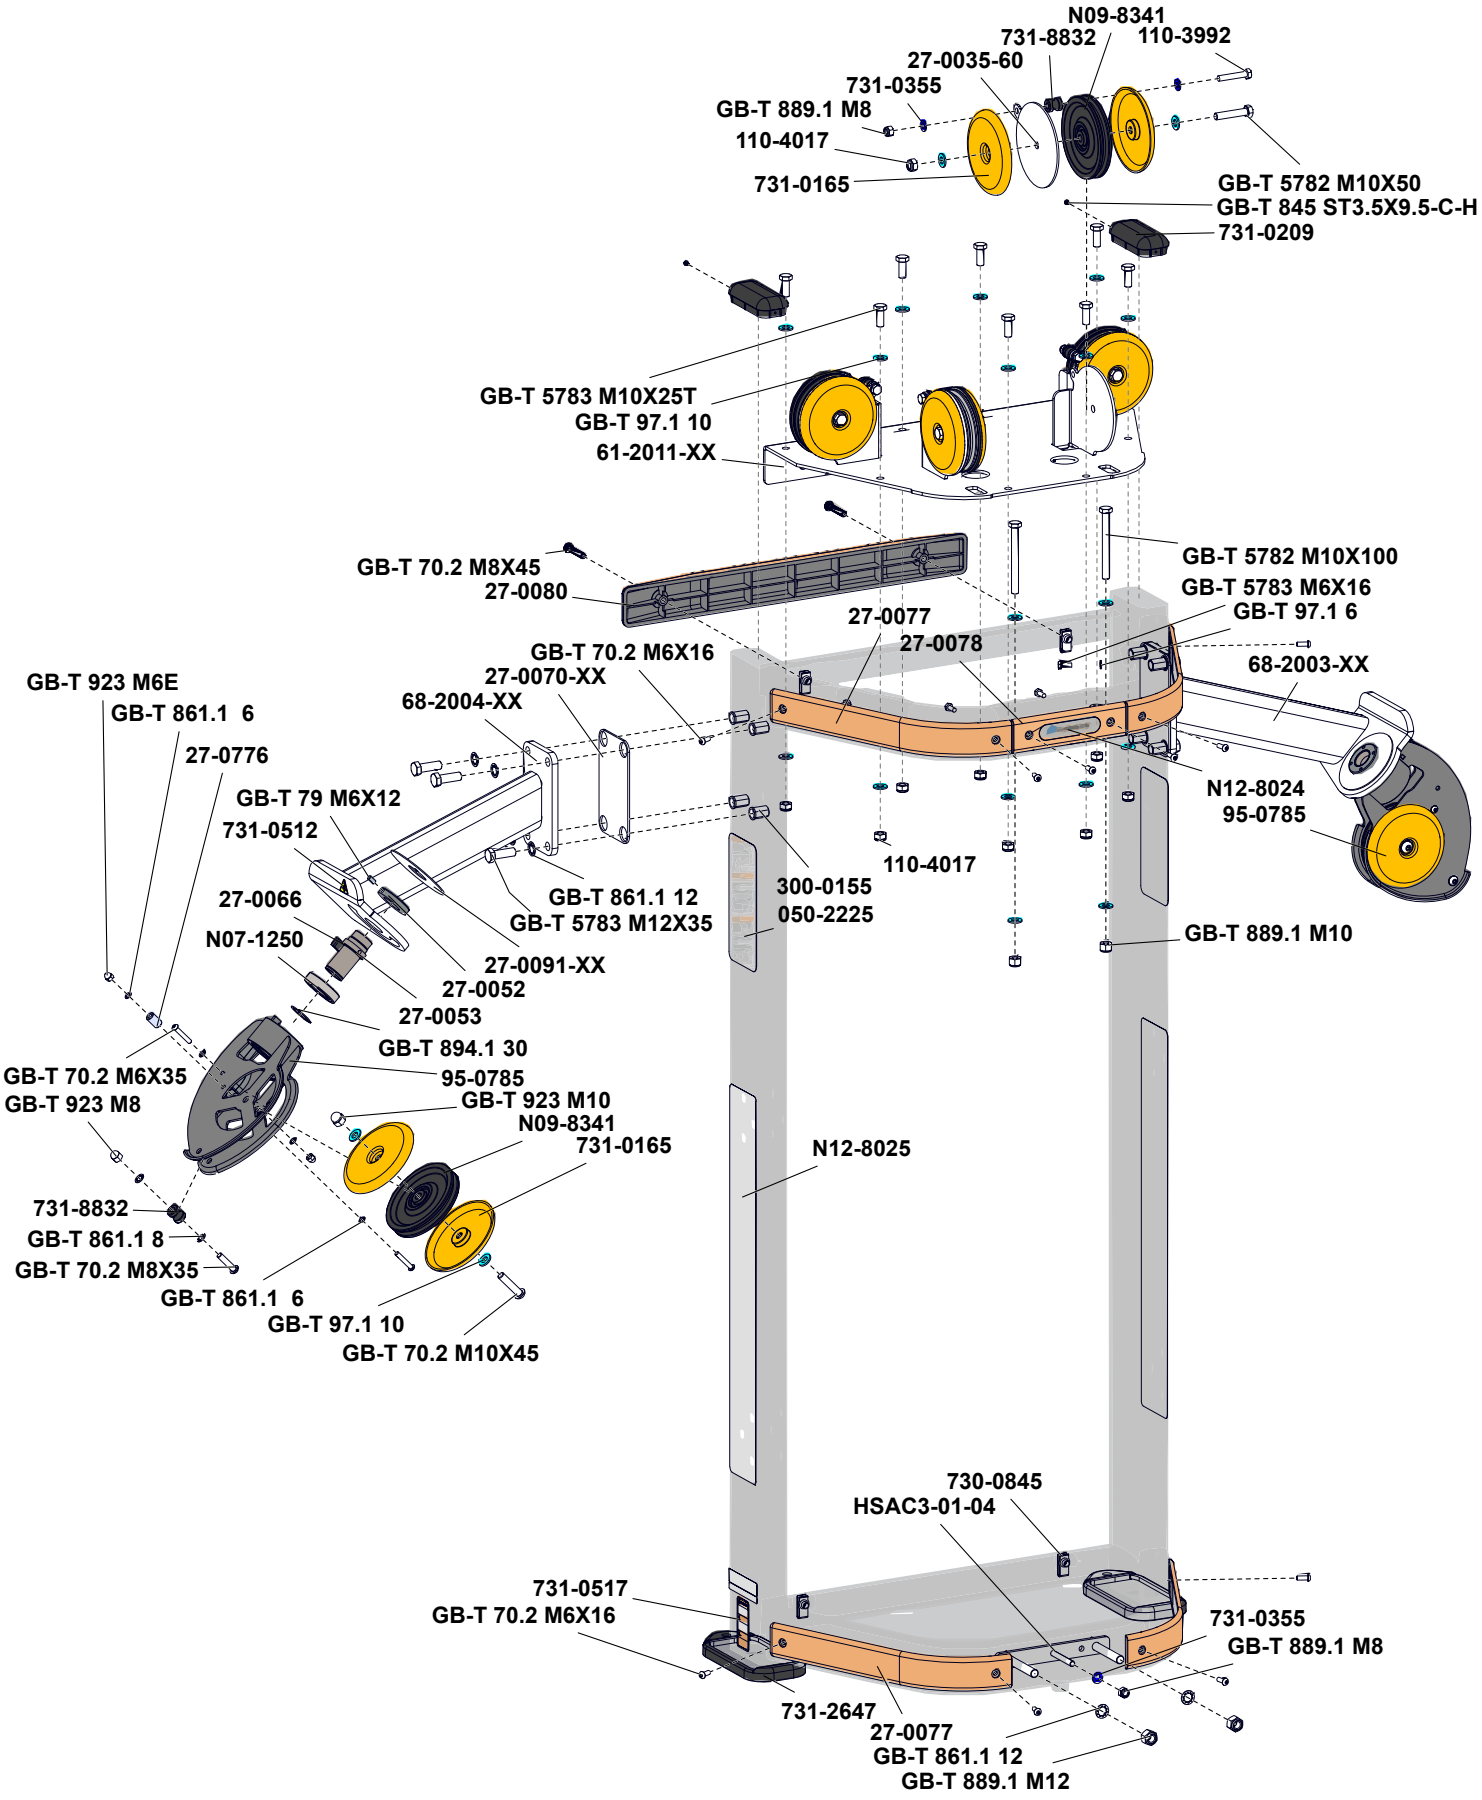
N09-8341
731-8832
110-3992
27-0035-60
731-0355
GB-T 889.1 M8
110-4017
731-0165
GB-T 5782 M10X50
GB-T 845 ST3.5X9.5-C-H
731-0209
GB-T 5783 M10X25T
GB-T 97.1 10
61-2011-XX
GB-T 70.2 M8X45
27-0080
GB-T 5782 M10X100
GB-T 5783 M6X16
GB-T 97.1 6
27-0077
27-0078
GB-T 70.2 M6X16
27-0070-XX
68-2004-XX
68-2003-XX
GB-T 923 M6E
GB-T 861.1 6
27-0776
GB-T 79 M6X12
731-0512
N12-8024
95-0785
110-4017
300-0155
050-2225
GB-T 861.1 12
GB-T 5783 M12X35
27-0066
N07-1250
27-0091-XX
27-0052
27-0053
GB-T 894.1 30
GB-T 889.1 M10
GB-T 70.2 M6X35
GB-T 923 M8
95-0785
GB-T 923 M10
N09-8341
731-0165
N12-8025
731-8832
GB-T 861.1 8
GB-T 70.2 M8X35
GB-T 861.1 6
GB-T 97.1 10
GB-T 70.2 M10X45
730-0845
HSAC3-01-04
731-0517
GB-T 70.2 M6X16
731-0355
GB-T 889.1 M8
731-2647
27-0077
GB-T 861.1 12
GB-T 889.1 M12

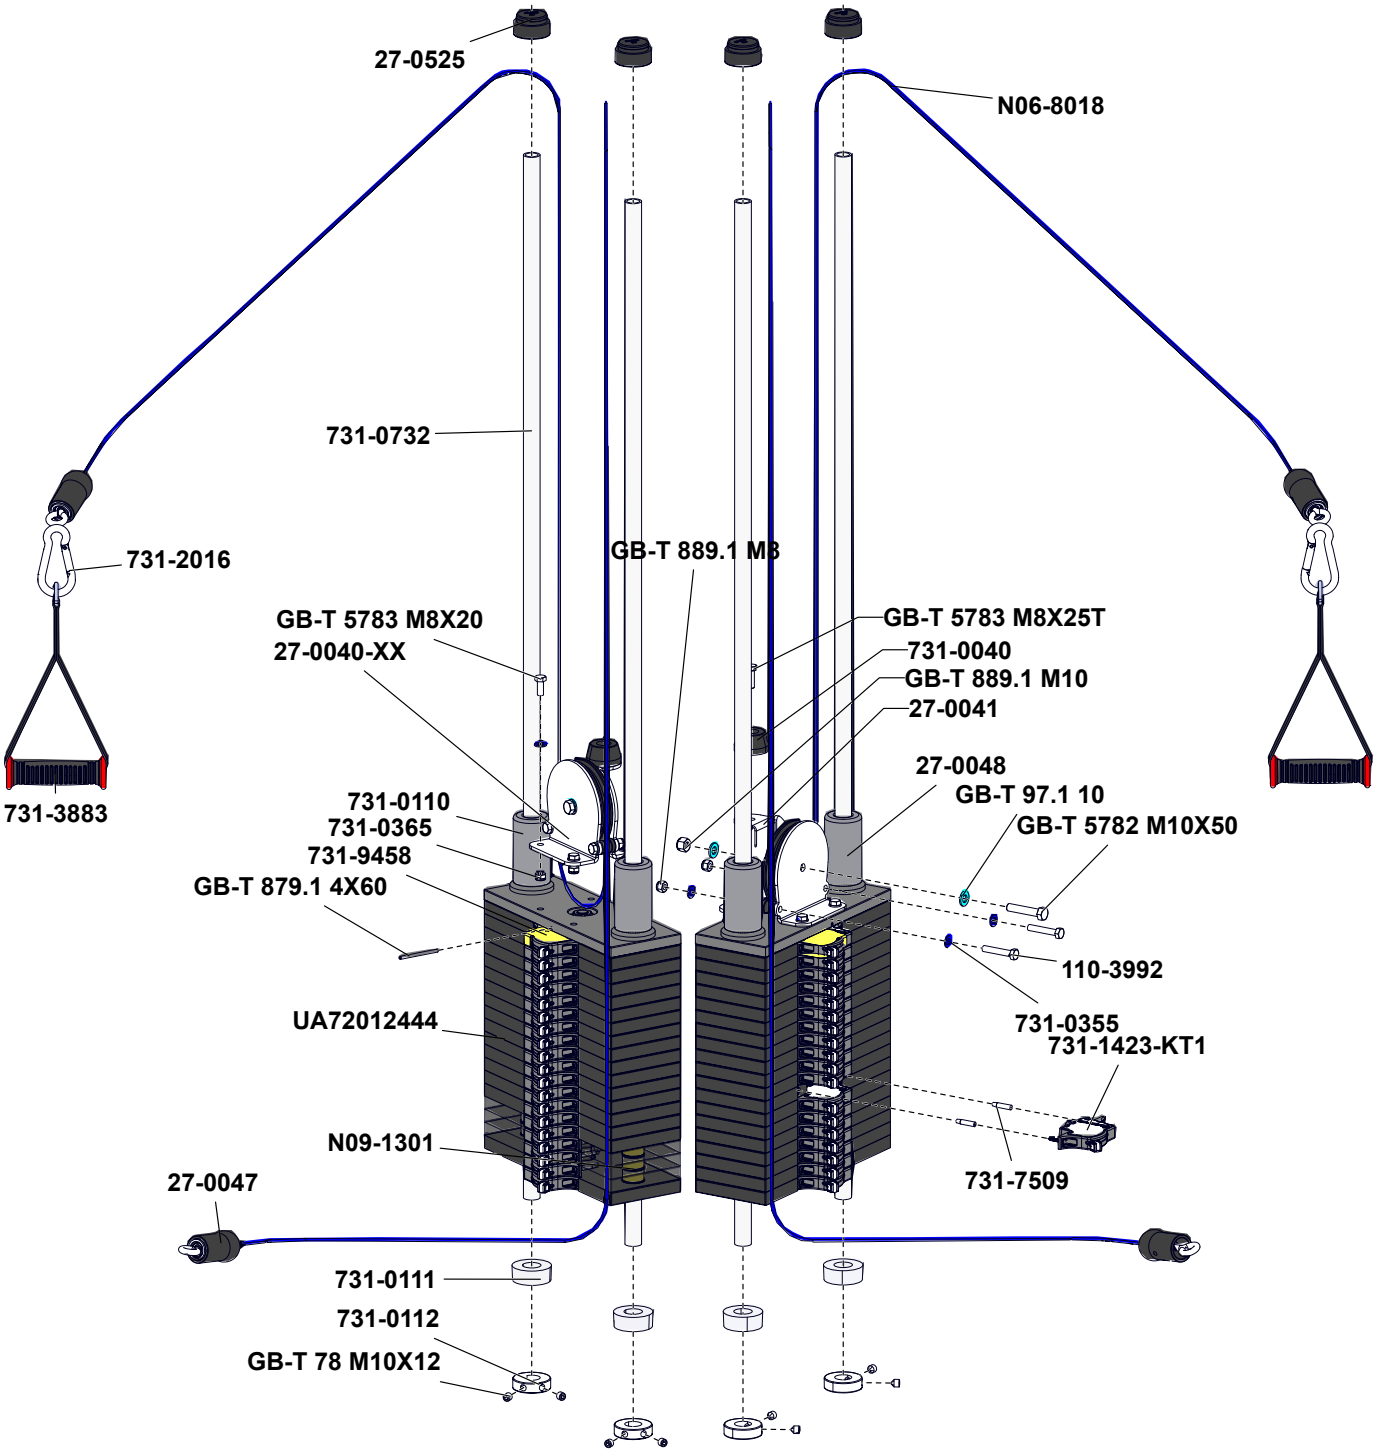


CORE HEALTH & FITNESS
NAUTILUS StairMaster STAR TRAC SCHWINN THROWDOWN COREFIT COLLECTIVE GYM RAX Wexer

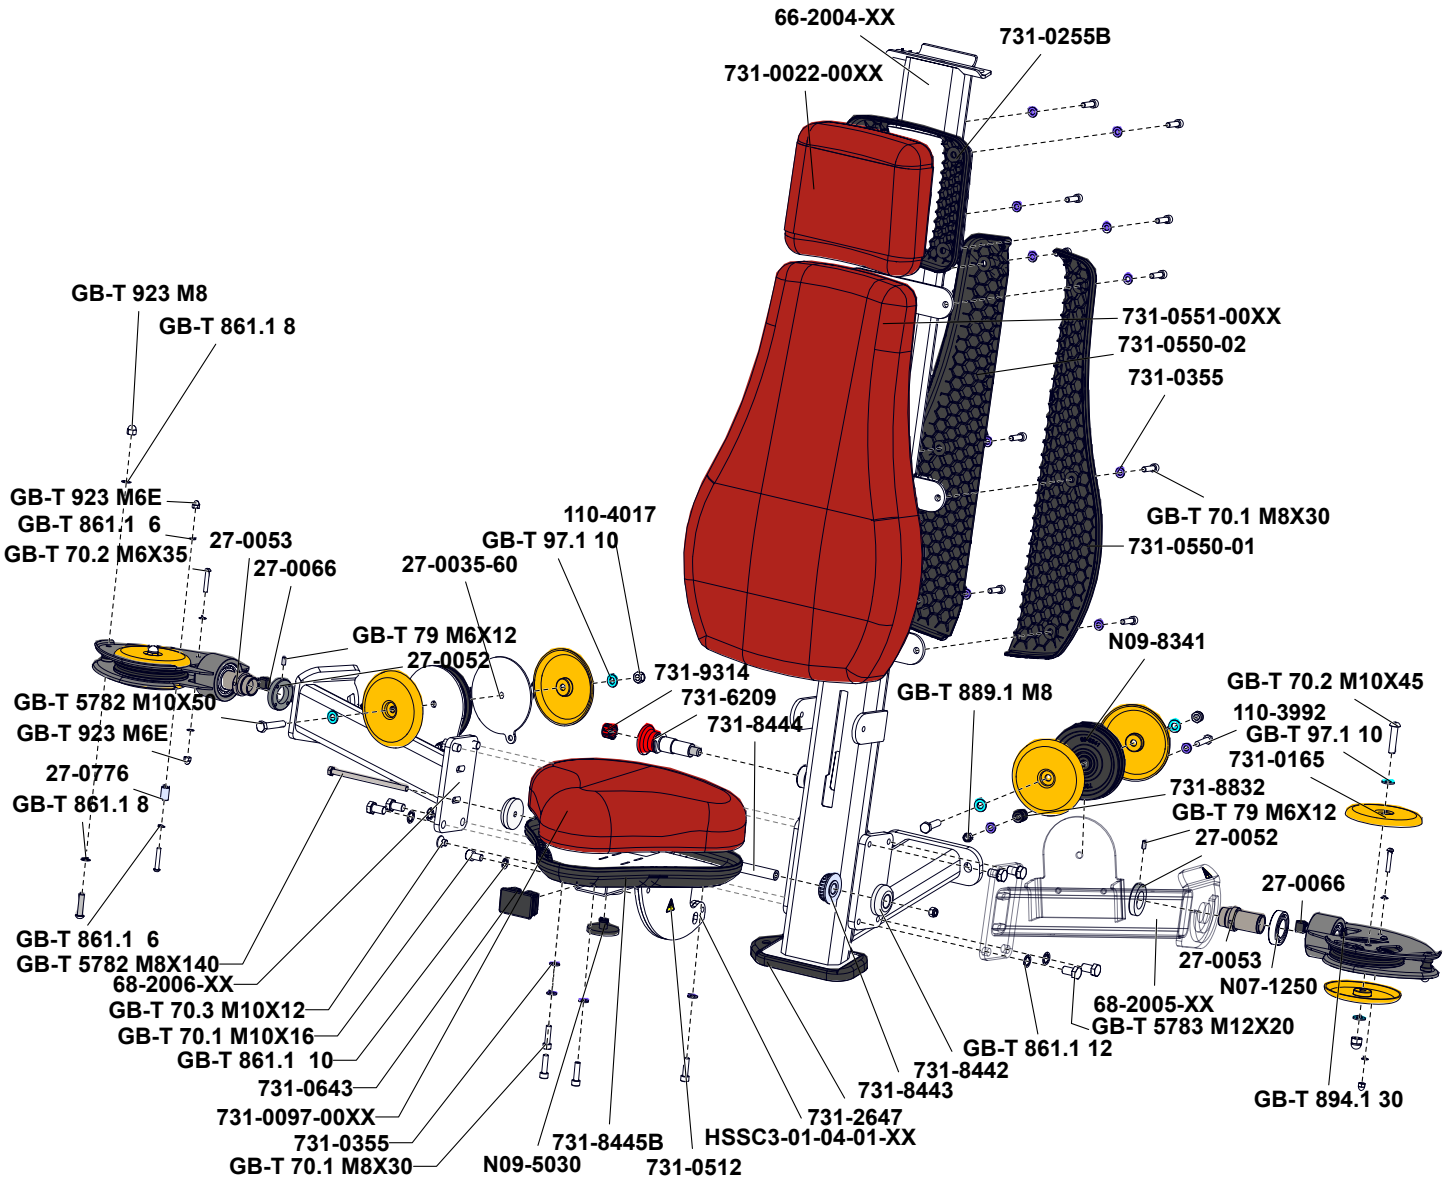
66-2004-XX
731-0255B
731-0022-00XX
GB-T 923 M8
GB-T 861.1 8
731-0551-00XX
731-0550-02
731-0355
GB-T 923 M6E
GB-T 861.1 6
GB-T 70.2 M6X35
27-0053
27-0066
110-4017
GB-T 97.1 10
27-0035-60
GB-T 70.1 M8X30
731-0550-01
GB-T 79 M6X12
27-0052
731-9314
731-6209
731-8444
N09-8341
GB-T 5782 M10X50
GB-T 923 M6E
GB-T 889.1 M8
GB-T 70.2 M10X45
110-3992
GB-T 97.1 10
731-0165
27-0776
GB-T 861.1 8
731-8832
GB-T 79 M6X12
27-0052
27-0066
GB-T 861.1 6
GB-T 5782 M8X140
68-2006-XX
GB-T 70.3 M10X12
GB-T 70.1 M10X16
GB-T 861.1 10
731-0643
731-0097-00XX
731-0355
GB-T 70.1 M8X30
N09-5030
731-8445B
731-0512
731-2647
HSSC3-01-04-01-XX
731-8443
731-8442
GB-T 861.1 12
27-0053
N07-1250
68-2005-XX
GB-T 5783 M12X20
GB-T 894.1 30

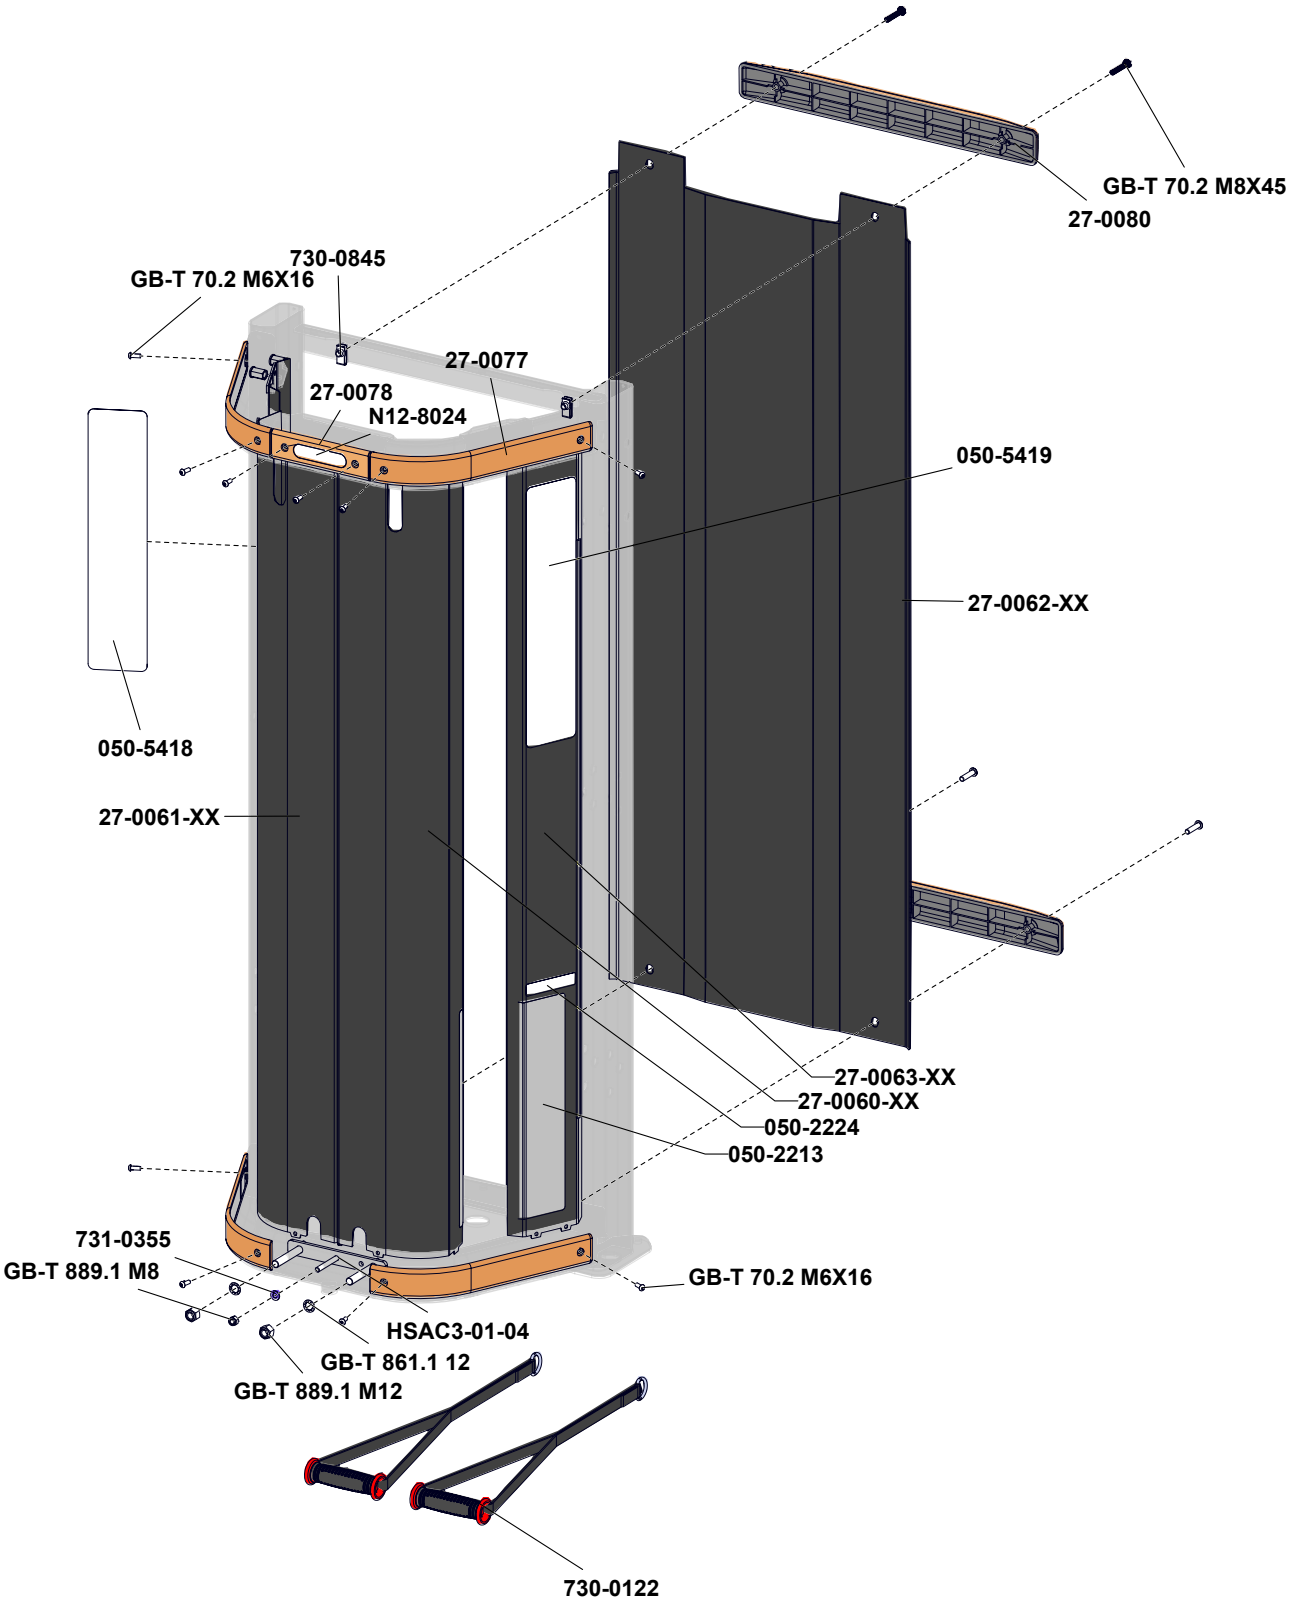

CORE HEALTH & FITNESS
NAUTILUS StairMaster STAR TRAC SCHWINN THROWDOWN COREFIT COLLECTIVE GYM RAX Wexer

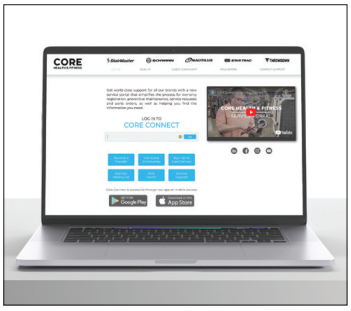

PRODUCT SUPPORT

Get world class support for all of our brands with our customer support portal, a platform that simplifies the process for warranty registration, preventive maintenance, service requests, parts orders and allows you to get help with your general inquiries.

CONNECT.COREHANDF.COM



CORE ADVANTAGE

Our preventative maintenance program, Core Advantage, will help preserve your equipment as excessive use takes its toll and ensures the longest possible life of your products while reducing downtime. We offer programs for all aspects of gym equipment, in every category and for every Core Health & Fitness brand. Core Advantage provides the industry's most complete programs; including one-time, monthly, once every other month, semi-annual and quarterly options available.

BENEFITS OF CORE HEALTH & FITNESS CUSTOMER SERVICE

support.corehandf.com
for preventative maintenance schedules, owner's manuals, and other online support

Customer Support Center

24/7 Chat Support
hosted by AI agents

Live Agent Support
available from
6am to 4pm PST

Network of 600+ factory-trained, annually-certified service providers

In-service seminars for staff

SCAN THE QR CODE TO LEARN MORE ABOUT OUR WORLD-CLASS CUSTOMER SERVICE

© 2026 CORE HEALTH & FITNESS LLC

PART NUMBER 637-9152-EN, REV B

All rights reserved. Star Trac, the Star Trac logo and StairMaster are registered trademarks of Core Health & Fitness, LLC. Schwinn and Nautilus are registered trademarks of Nautilus Inc. used under license to Core Health & Fitness LLC. Throwdown is a registered trademark of Throwdown Industries, LLC.

17800 SE Mill Plain Blvd, Unit 190 Vancouver, WA 98683.
Tel: (360) 326-4090 • (800) 503-1221 • support@corehandf.com